LL60/2-E-DA-iC

Helvar

60W DALI LED driver for Tunable White

freedom in lighting

• Adjustable constant current output: 350 mA (default) - 700 mA

Two independent SELV rated output channels

• DALI device type 8 software for tunable white (see page 3)

• 1 % - 100 % stepless dimming range per channel

• Low standby power, < 0.5 W

• Protected up to 4 kV power network fast transients

• High efficiency, 0.90


• Overload, open & short circuit protection

- Suitable for Class I or II luminaire
- External NTC thermal input
- Current setting resistor input
- Switch-Control for intensity and colour control







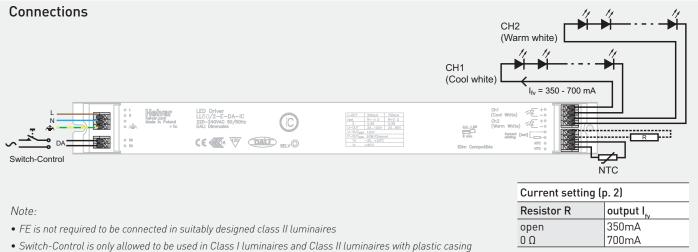

Mains Characteristics

Voltage range 198 - 264 VAC DC range 176 - 280 VDC,

starting voltage > 190 VDC

Max mains current at full load 0.26 - 0.34 A Frequency 0 / 50 - 60 Hz U-OUT (abnormal) 120 V

 $U-OUT_{max}$ (abnormal) 120 V Stand-by power < 0.5 W

Load Output (p. 2)

Output current (I-OUT) 350 mA (default) - 700 mA

Max output power 60 W Efficiency, at full load, typical 0.90

7, , ,1						
I-OUT	350 mA	700 mA				
P-out (max) / channel	35 W / ch	60 W / ch				
U-OUT	25-100 V	25-85 V				
λ (both channels loaded)	0.98	0.98				
η (both ch loaded @ max)	0.90	0.90				

Operating Conditions and Characteristics

Max.temperature at tc point 80 °C
Ambient temperature range -20...+50 °C
Storage temperature range -40...+80 °C
Maximum relative humidity
Life time 50 000h, at TC max
[90 % survival rate]

Connections and Mechanical Data

Maximum driver to LED wire length	5 m
Weight	365 g
IP rating	IP20
NTC trigger point	8.2 kΩ

Conformity & Standards

General and safety requirements EN 61347-1 Particular safety requirements for d.c. or a.c. supplied electronic controlgear for LED modules, acc. to EN 61347-2-13 Thermal protection class EN61347, C5e EN 61000-3-2 Mains current harmonics, acc. to Limits for Voltage Fluctuations and Flicker, acc to EN 61000-3-3 Radio Frequency Interference, acc. to EN 55015 Immunity standard, acc. to EN 61547 EN 62384 Performance requirements, acc to Digital adressing lighting interface (DALI) ** EN62386-207 See IEC 62386-209 for using Dali type 8 colour control commands

Compliant with relevant EU directives ENEC,CE & SELV marked

SELV = Control gear for inbuilt usage is double insulated from live parts


Note: See page 2 for dimensions

^{**} with additional extensions

Load Output




freedom in lighting

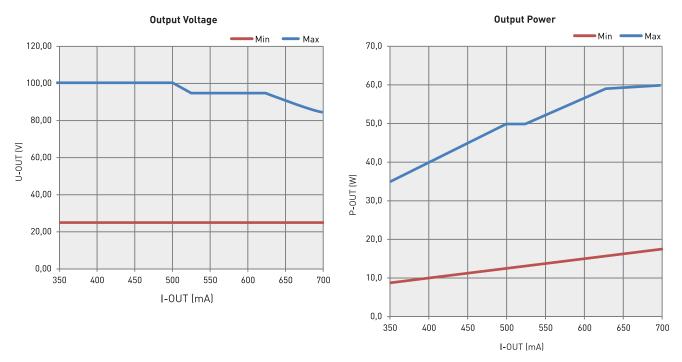

Current setting resistor values LL60/2-E-DA-iC

R (Ω)	0	1k	1k2	1k5	1k8	2k2	2k7	3k3	3k9	4k7	5k6	6k8	8k2	10k	12k	15k	22k	27k	33k	39k	47k	56k	68k	82k	100k	150k	330k	1M	∞
l _{out} (mA)	700	650	640	630	620	610	600	580	570	550	530	520	500	480	470	450	430	420	410	400	390	385	380	375	370	365	360	355	350

Dimensions

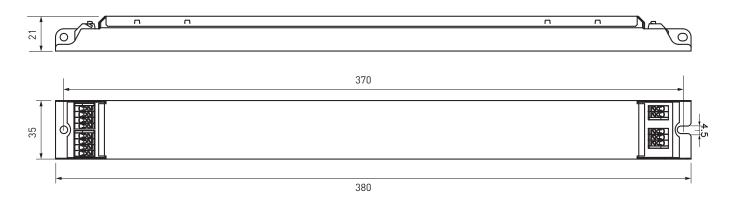

Instructions for use



LL60/2-E-DA-iC is designed for in-built luminaire to use either class I or class II luminaires. In order to have safe and reliable LED driver operation, the LED luminaires will need to comply with the relevant standards and regulations (e.g. IEC/EN 60598-1). The LED luminaire shall be designed to adequately protect the LED drivers from dust, moisture and pollution. The luminaire manufacturer is responsible for the correct choice and installation of the LED drivers according to the application and product datasheet. Specifications of the LED driver may never exceed the operating conditions as per the product datasheet.

Wiring considerations

Wire type and cross section

• Please refer to datasheets connections & mechanical data

Wiring insulation

· According to recommendations in EN 60598

Maximum wire lengths

• Please refer to datasheets connections & mechanical data

Wire connections

- Please refer to datasheets connections diagram
- Pay attention that wrong wiring might damage the product
- Load is not alloved to remove or reconnect while mains connected

Miniature Circuit Breakers (MCB)

 Type-C MCB's with trip characteristics in according to EN 60898 are recommended.

LED driver earthing

- LED drivers are designed to support all luminaire classifications.
 Please check the individual LED driver type for its exact safety class rating.
- For Helvar LED drivers to have a reliable operation and EMC performance, the luminaires are expected to have an earth connection. Earth connection can be left out if luminaire safety is quaranteed by its construction.
- When using a SELV-rated LED driver, then the SELV driver output has to be insulated from the luminaire earth connection (ref. EN60598-1 luminaire standard).

Installation & operational considerations

Maximum tc temperature

 Reliable operation and lifetime is only guaranteed if the maximum to point temperature is not exceeded under the conditions of use.

Strain Relief for independent use

- Some of the Helvar LED drivers allow use both inside the luminaire and outside the luminaire, via a strain relief. The strain relief provides reliable fastening method for the mains and LED output wiring.
- Ensure that the LED driver does not exceed temperature higher than specified on the product datasheets.
- The general preferred installation position of LED drivers is to have the top cover facing upwards.

Current setting resistor

The Helvar LL60/2 driver feature an adjustable constant current output.

- An external resistor can be inserted in to the current setting terminal, allowing the user to adjust the LED driver output current.
- When no external resistor is connected, then the LED drivers will operate at their default lowest current level.
- A standard through-hole resistor can be used for the current setting. To achieve the most accurate output current it is recommended to select a quality low tolerance resistor.
- For the resistor / current value selection, please refer to the enclosed table below.

Tunable white functionality

- The LL60/2-iC driver have 2 output channels used to control the intensity and temperature of white colour as well known as "Tunable White"
- These drivers respond to DALI type 8 (DT8) commands, which in practice means that they only have 1 common address for both output channels
- The tunable white level of intensity and colour temperature can be set either with a DALI command or by Switch-Control
- The driver will operate correctly once tunable white LED module parameters are programmed to the driver. Use "Helvar DALI Driver Configurator" for the parameter setting
- See Helvar DALI Driver Configurator user guide for more information how to set the parameters to the driver

