

for copper cables

1: Blown fuse indicator 12/24/48 V $\approx$ / $\sim$ Cat.No 0 375 24 or 110/250 V $\sim$ Cat.No 0 375 25 - 2: Or end stop Cat.No 0 375 10 - 3: Upper level only - 4: Lower level only - 5: Lower and intermediate levels 6: Cat.No 0 375 07 for 3 terminal blocks - 7: Permanent measurement: side by side installation of 2 test sockets not possible