

Motor operator
Motorový pohon
Napęd zdalny
Dispozitiv de armare cu motor
Fernantrieb
Télécommande
Моторный привод
Моторен оператор
(Дистанционен механизъм)
Motorni pogon
Variklinė pavarą
Моторний привод

NOARK

A


Mounting instruction
Montážní návod
Montážny návod
Instrukcja montażu
Instruțiuni de asamblare
Montageanweisung
Instructions de montage
Инструкция по монтажу
Инструкция за инсталиране
Uputstvo za montažu
Összeszerelési útmutató
Montavimo instrukcijos
Інструкція з монтажу

Istruzioni di montaggio
Instrucciones de montaje
Instalações instruções
Paigaldušijuhendid
Montažu upute
Monteringsanvisning
Asennusohjeita
Montage-instructies
Instruções de montagem
Navodila za montažo
Οδηγίες Εγκατάστασης
Monteringsvejledningen


Caution: Installation by electricians only
Varování: Montáž pouze osobou s elektrotechnickou kvalifikací
Varovanie: Montáž smie vykonávať iba osoba s elektrotechnickou kvalifikáciou
Uwaga: Montaż tylko przez uprawnionych instalatorów
Atentie: Instalare numai de catre electricieni
Vorsicht: Montage nur durch Elektrofachkräfte
Attention: Montage uniquement par un électricien
Осторожно: Установка данного оборудования производится только специалистом – электриком
Внимание: Монтаж само от ел.специалисти
Upozorenje: Montažu izvodi samo stručno lice
Figyelem: Szerelést kizárólag szakember végezheti
Dêmesio: montavimo darbus gali atlikti tik kvalifikuotas specialistas-elektrikas
Обережно: монтаж виконує виключно електрик
Attenzione: L'installazione deve essere eseguita solamente da personale qualificato
Atención: Este dispositivo debe ser manipulado únicamente por personal cualificado




B

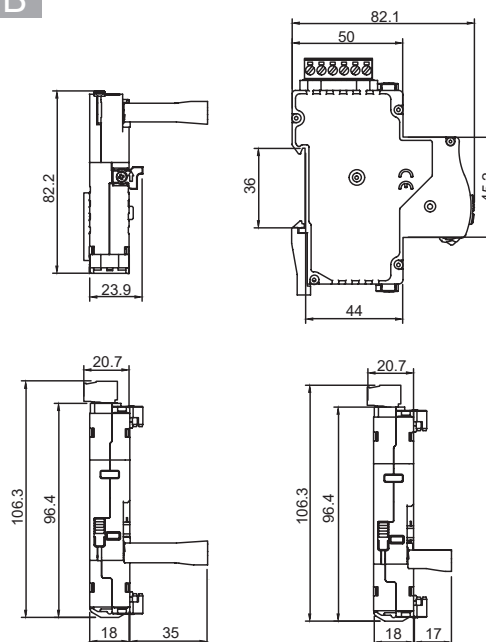


C

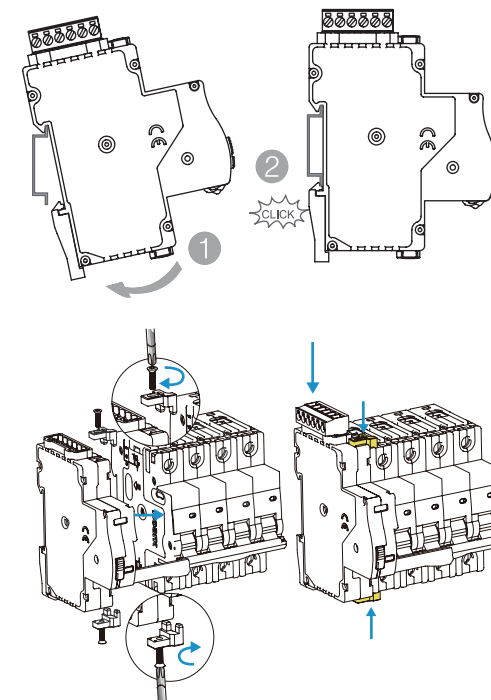


D

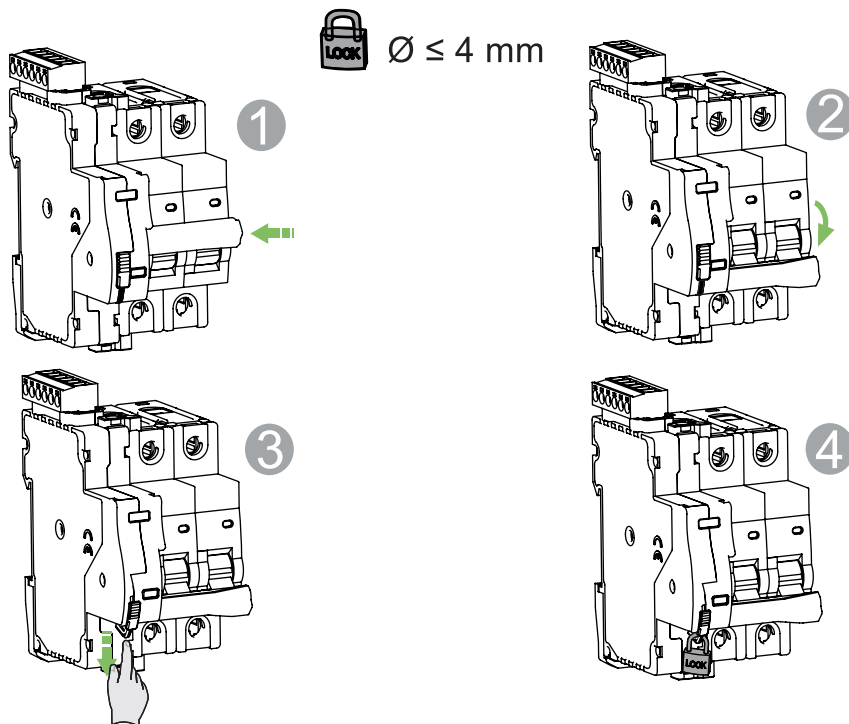


E

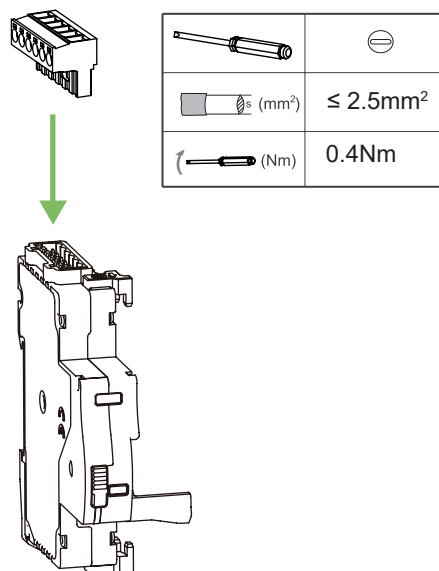


F

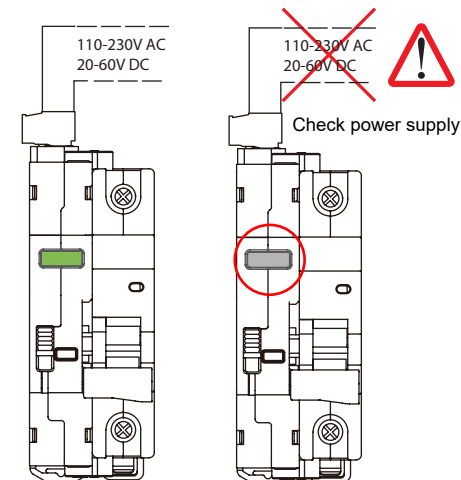


G

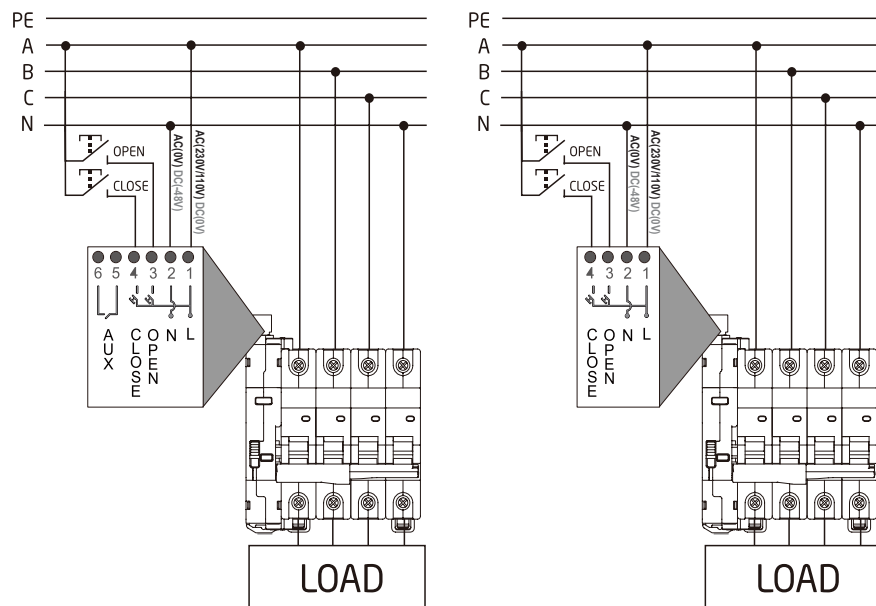


H

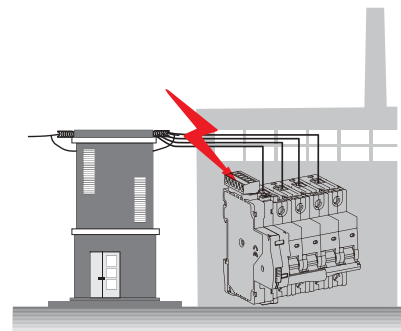


- Under "Auto" mode, and for instantaneous electrical fault, our recloser will auto reclose after 10s of breaker trips.
- It is defined as successfully reclosed if handle holds more than 15 minutes. After successfully reclosed, previous reclose counting will be cleared and renewed.

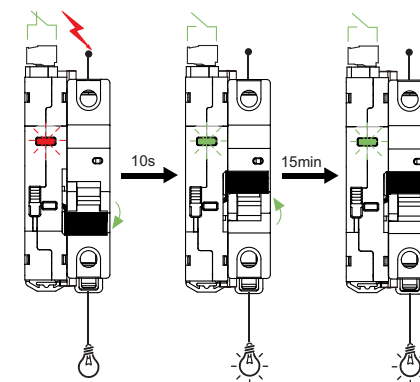

I

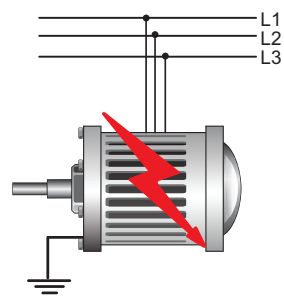

Under "Auto" mode, and for continuous electrical fault,
It will auto reclose after 10s time delay, and failed;
It will auto reclose again after 60s time delay, and failed;
It will auto reclose again after 300s time delay, and failed;
It will switch to "Lock" status, and no more auto reclose
(Meanwhile, the terminal of remote On/Off functions)

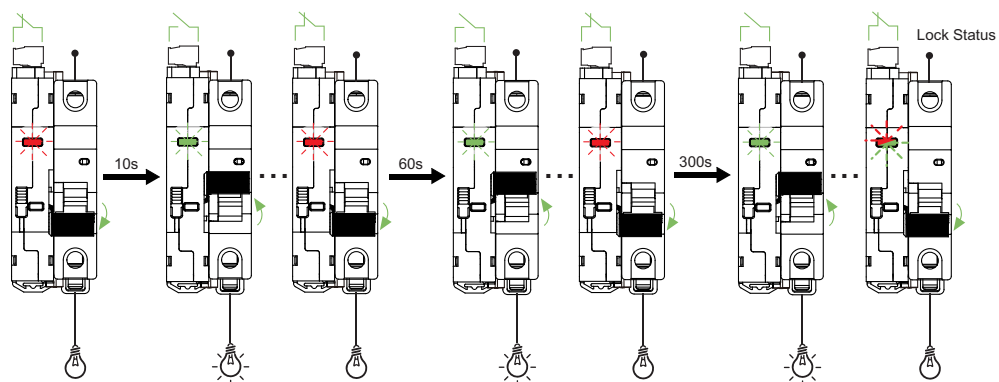

NOARK



Printed with environment-friendly paper
Copyright Noark. All Right Reserved
Manufacturer: NOARK Electric (Shanghai) Co., Ltd.
3857 Sixian Road, Songjiang District, Shanghai
Importer: NOARK Electric Europe s.r.o.
Sezemická 2757/2, 193 00 Praha 9, Czech Republic
www.noark-electric.eu
ZMOD31202310EU