


Ex9S32

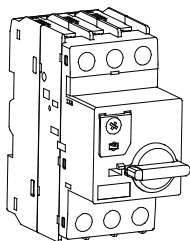

Mounting instruction
 Montážní návod
 Montážny návod
 Instrukcja montażu
 Instrucțiuni de asamblare
 Montageanweisung
 Instructions de montage
 Инструкція по монтажу
 Monteringsanvisning
 Istruzioni di montaggio
 Instrucciones de montaje
 Összeszerelési útmutató
 Asennusohjeita


Manual Motor Starter
 Manuální motorový spouštěč
 Manuálny motorový spúšťač
 Wyłącznik silnikowy
 Interruptor automat protección motor
 Автомат защиты двигателя
 Наръчник Моторна защита
 Variklio paleidimo automatas
 Motor de arranque manual
 Motora palaidējs
 Mootorikaitselüliti
 Manualni motorni zaštitni prekidač

Montage-instructies
 Instruções de montagem
 Navodila za montažo
 Οδηγίες Εγκατάστασης
 Инструкции за инсталиране
 Monteringsvejledningen
 Montažu upute
 Montavimo instrukcijos
 Instalēšanas instrukcija
 Uputstvo za montažu
 Paigaldusjuhendid
 Інструкція з монтажу


Caution: Installation by electricians only
 Varování: Montáž pouze osobou s elektrotechnickou kvalifikací
 Varovanie: Montáž smie vykonávať iba osoba s elektrotechnickou kvalifikáciou
 Uwaga: Montaż tylko przez uprawnionych instalatorów
 Atentie: Instalare numai de catre electricieni
 Vorsicht: Montage nur durch Elektrofachkräfte
 Attention: Montage uniquement par un électricien
 Осторожно: Установка данного оборудования производится только электриком
 Attenzione: L'installazione deve essere eseguita solamente da personale qualificato
 Atención: Este dispositivo debe ser manipulado únicamente por personal cualificado
 Figyelem: Szerelést kizárólag szakember végezheti
 Вниманіе: Монтаж само от ел.специалісти
 Dėmesio: montavimo darbus gali atlikti tik kvalifikuotas specialistas-elektrikas
 Upozorenje: Montažu izvodi samo stručno lice
 Обережно: монтаж виконує виключно електрик

NOARK



A

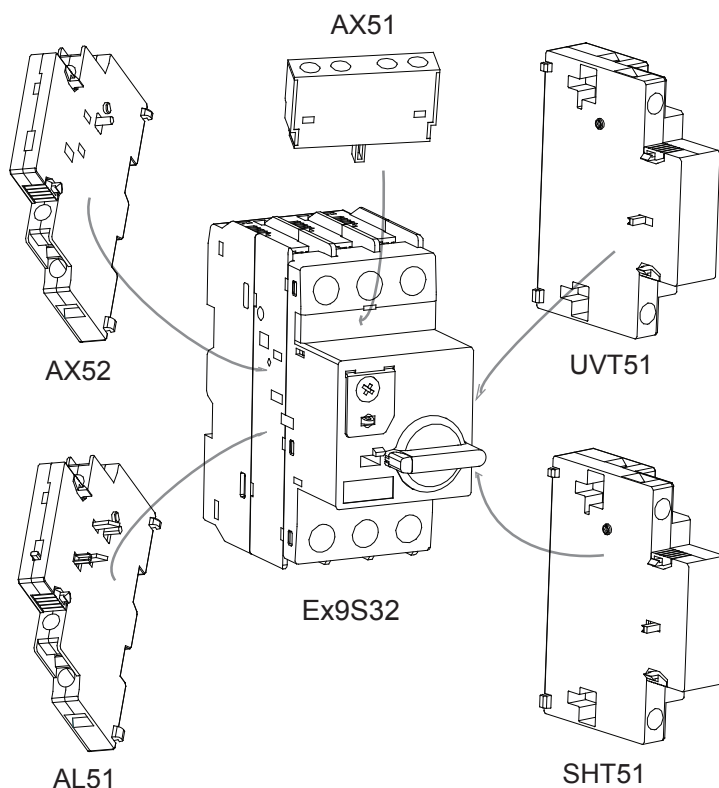




B



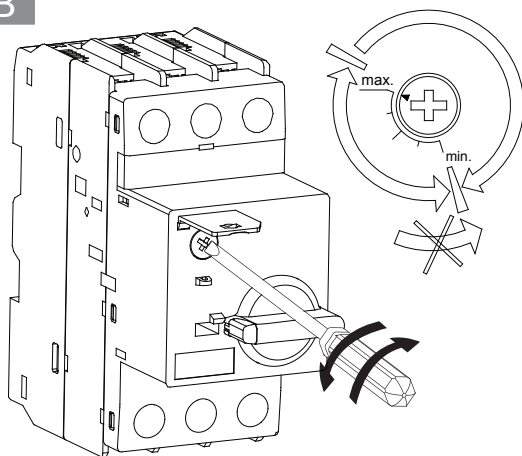


$\leq \Phi 5\text{mm}$



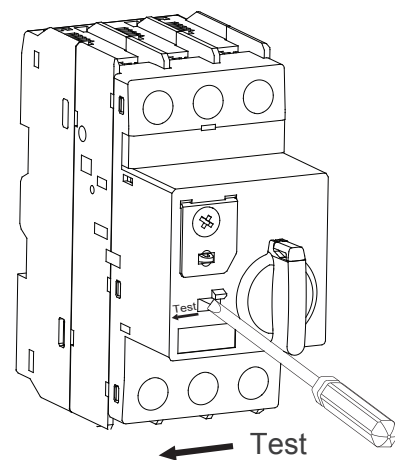
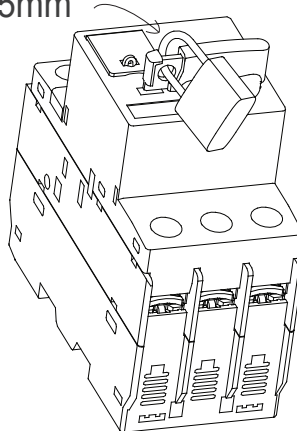


C

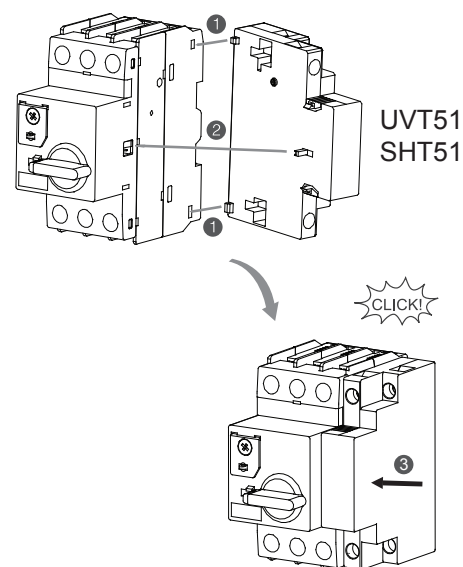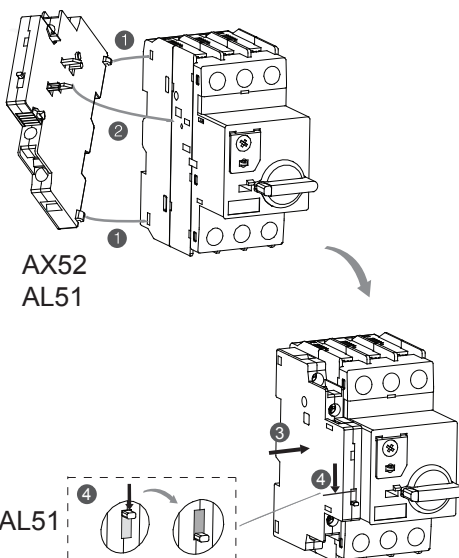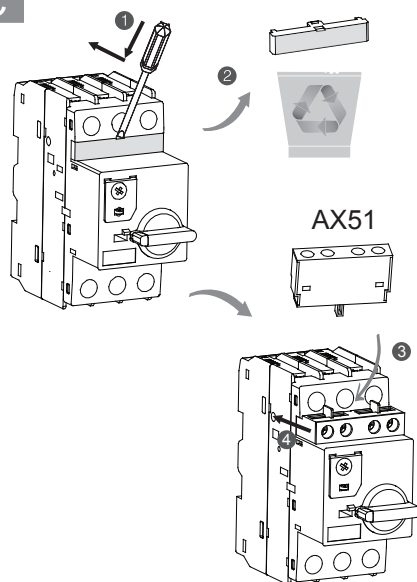

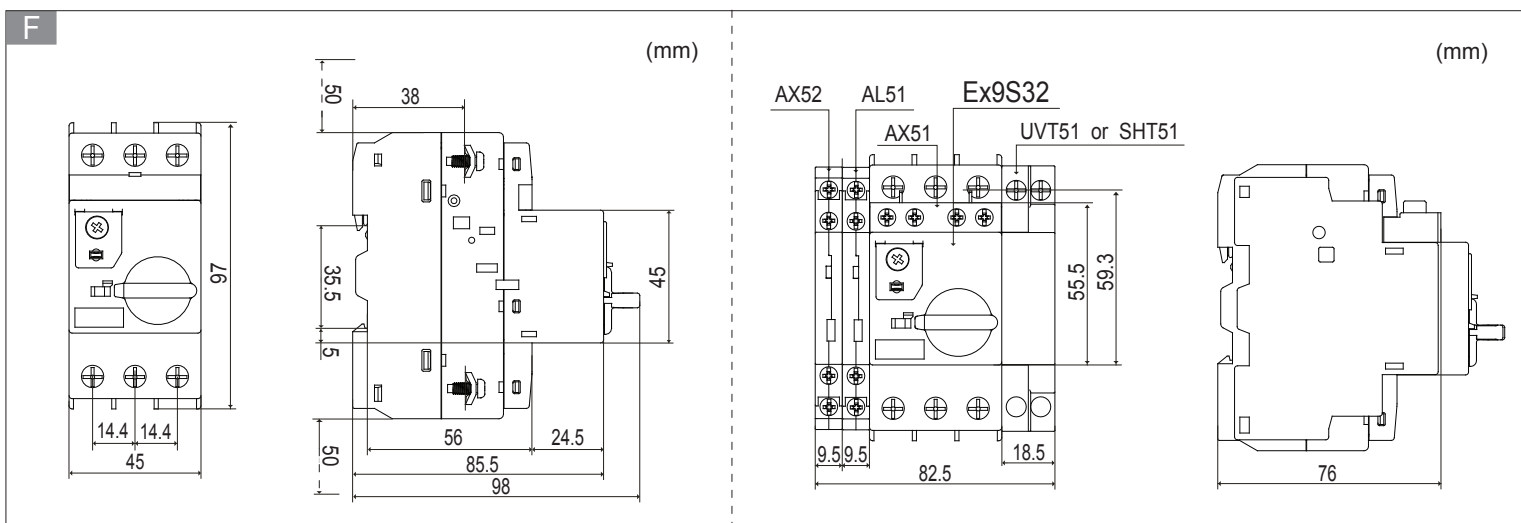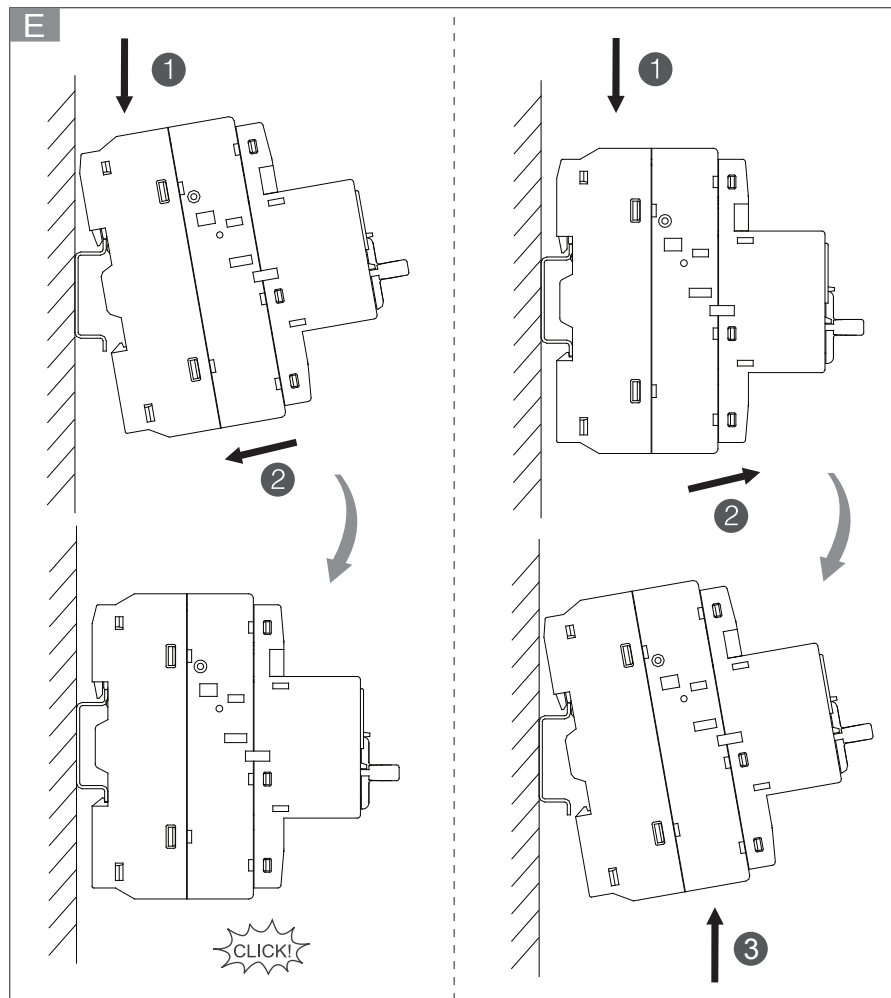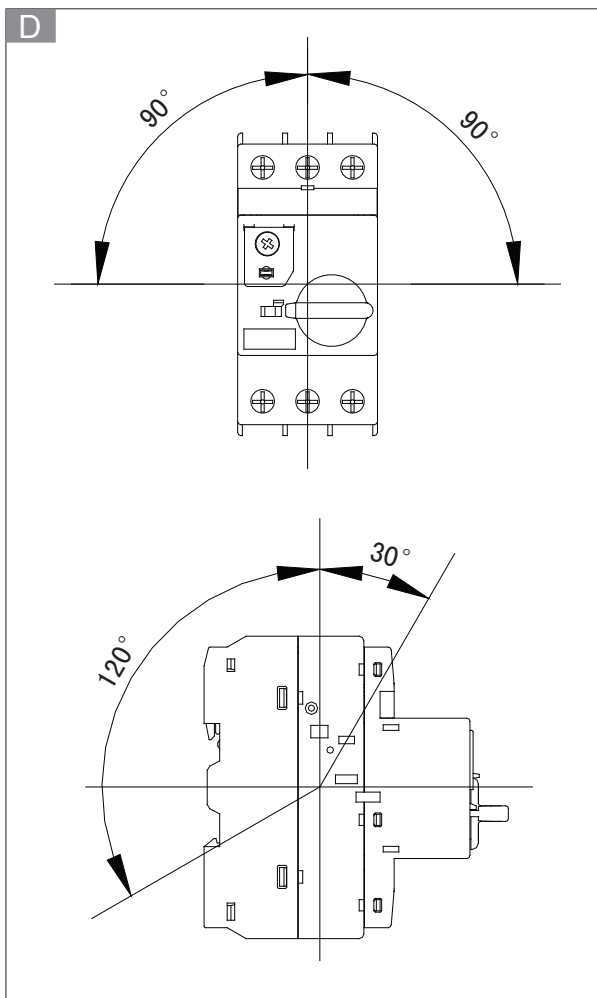

G

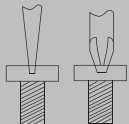   								a mm
Ex9S32	 M4 2.5N·m	2.5~10	2.5~6	1~10	1~6	2.5~10	2.5~6	11
UVT51,SHT51	 M3.5 1.7N·m	1~2.5	1~2.5	1~2.5	1~2.5	1~2.5	1~2.5	10
AX51,AX52,AL51	 M3 0.8N·m							

