



■ = usable installation space with mounted cable glands


ENYSTAR distribution boards with door lockings for hand operation and closing plates

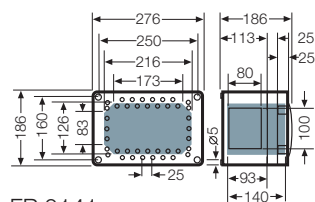


FP 0141
FP 0151

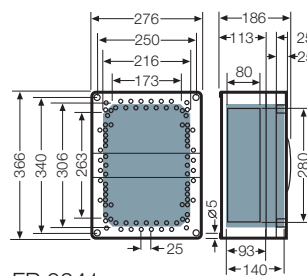


FP 0241
FP 0251

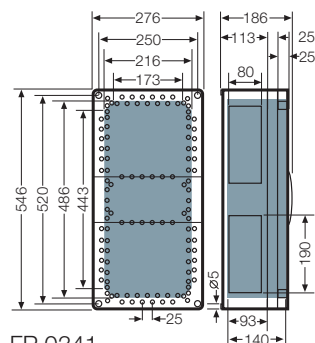

FP 0341
FP 0351

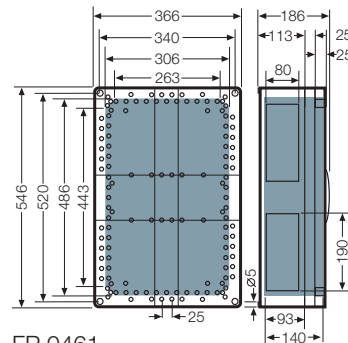


FP 0461
FP 0471

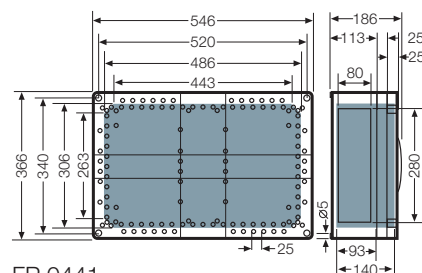


FP 0441
FP 0451


ENYSTAR distribution boards with door lockings for hand operation

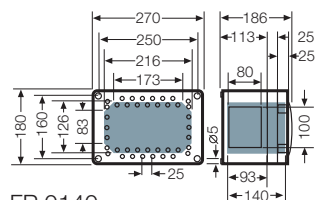


FP 0140
FP 0150

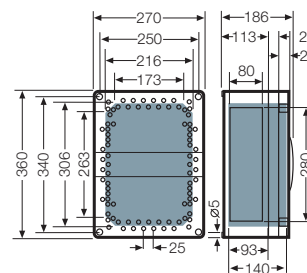

FP 0240
FP 0250

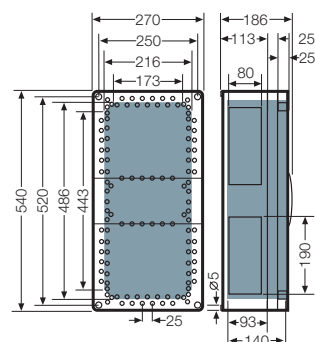


FP 0340
FP 0350

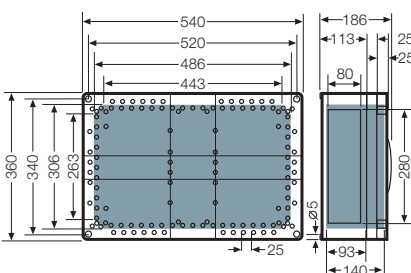

FP 0440
FP 0450


Mounting depth for device installation in covers

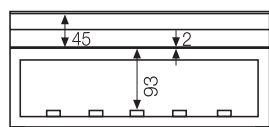


Technical details
Detail dimensions in mm

 = usable installation space with mounted cable glands


ENYSTAR distribution boards with door lockings for tool-operation and closing plates

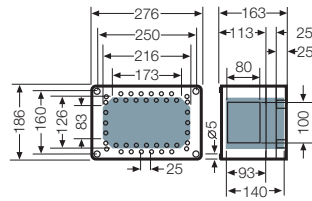


FP 0101
FP 0121

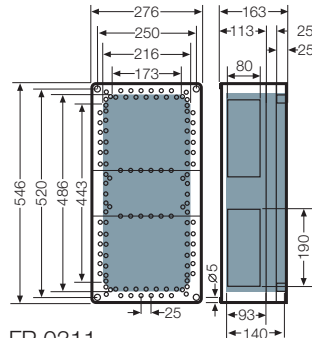


FP 0311
FP 0331

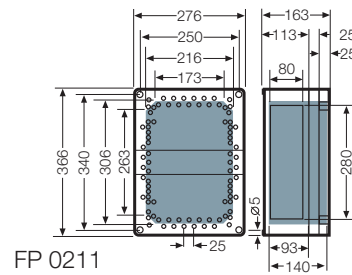

FP 0211
FP 0231

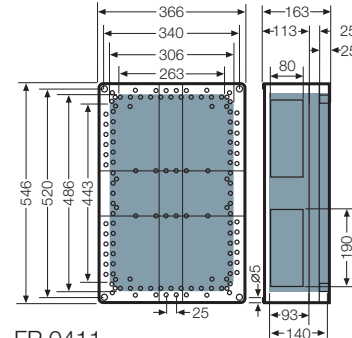


FP 0411
FP 0431

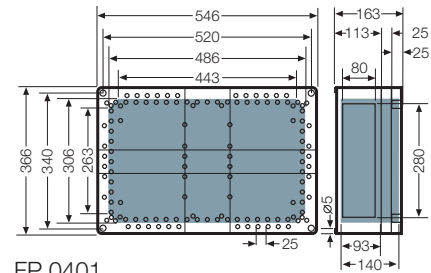


FP 0401
FP 0421


ENYSTAR distribution boards with door lockings for tool-operation

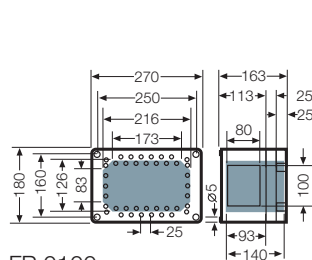


FP 0100
FP 0120

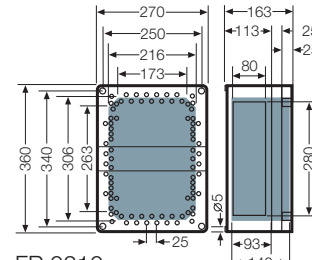

FP 0210
FP 0230

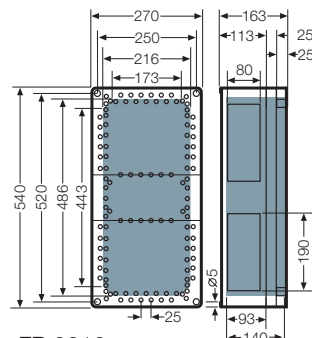

FP 0310
FP 0330

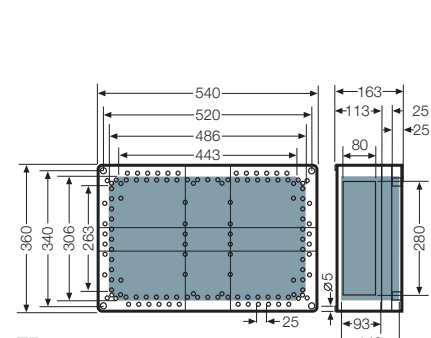

FP 0400
FP 0420

Mounting depth for device installation in covers

