

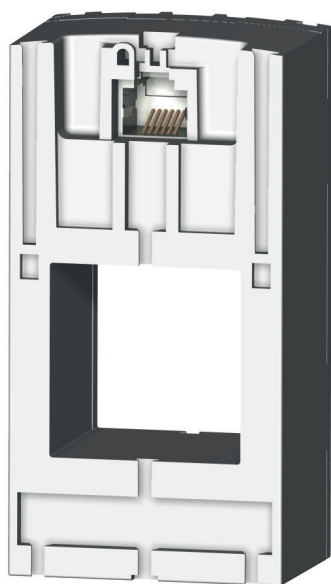


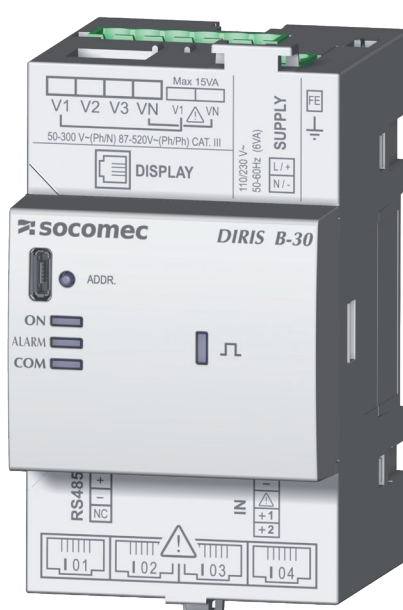

# DIRIS B-10 & B-30

Multifunction meters and associated current sensors

EN

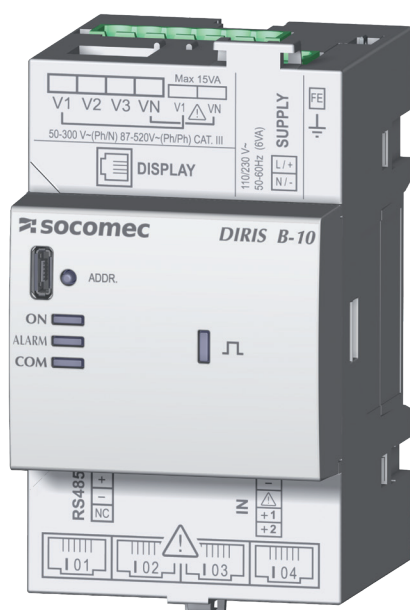

[www.socomec.com/  
catalogues-brochures\\_en.html](http://www.socomec.com/catalogues-brochures_en.html)

**socomec**  
Innovative Power Solutions

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>1. DOCUMENTATION</b>                                        | <b>4</b>  |
| <b>2. HAZARDS AND WARNINGS</b>                                 | <b>5</b>  |
| 2.1. Risk of electrocution, burns or explosion                 | 5         |
| 2.2. Risk of damaging the unit                                 | 5         |
| 2.3. Liability                                                 | 6         |
| <b>3. PRELIMINARY OPERATIONS</b>                               | <b>7</b>  |
| <b>4. INTRODUCTION</b>                                         | <b>8</b>  |
| 4.1. Introduction to the DIRIS B                               | 8         |
| 4.1.1. Range                                                   | 8         |
| 4.1.2. Functions                                               | 8         |
| 4.1.3. Electrical values measured                              | 10        |
| 4.1.4. Dimensions                                              | 11        |
| 4.2. Presentation of optional modules                          | 12        |
| 4.2.1. Range                                                   | 12        |
| 4.2.2. Dimensions                                              | 12        |
| 4.3. Presentation of associated current sensors                | 13        |
| 4.3.1. TE solid-core current sensors                           | 14        |
| 4.3.2. TR split-core current sensors                           | 16        |
| 4.3.3. TF flexible current sensors                             | 17        |
| 4.3.4. Adapters for 5A sensors                                 | 18        |
| <b>5. MOUNTING</b>                                             | <b>19</b> |
| 5.1. Recommendations and safety                                | 19        |
| 5.2. Installing the DIRIS B                                    | 19        |
| 5.2.1. DIN rail mounting                                       | 19        |
| 5.2.2. Plate mounting                                          | 19        |
| 5.2.3. Sealing accessory for sensors                           | 20        |
| 5.3. Installing the optional modules                           | 20        |
| 5.3.1. Installing an optional module on DIRIS B                | 20        |
| 5.3.2. Installing an optional module on an optional module     | 20        |
| 5.4. Installing TE solid-core sensors                          | 21        |
| 5.4.1. Mounting accessories                                    | 21        |
| 5.4.2. DIN rail mounting                                       | 21        |
| 5.4.3. Plate mounting                                          | 23        |
| 5.4.4. Installing on a cable with clamping collar              | 25        |
| 5.4.5. Bar mounting                                            | 26        |
| 5.4.6. Sensors assembly                                        | 27        |
| 5.4.7. Sealing accessories for sensors                         | 27        |
| 5.5. Installing TR split-core sensors                          | 28        |
| 5.5.1. Cable mounting                                          | 28        |
| 5.6. Installing TF Flexible current sensors                    | 29        |
| 5.6.1. Bar or cable mounting                                   | 29        |
| 5.7. Installing the 5A adapter                                 | 30        |
| <b>6. CONNECTION</b>                                           | <b>31</b> |
| 6.1. Connecting the DIRIS B                                    | 31        |
| 6.2. Connecting the optional modules                           | 33        |
| 6.2.1. Input/output modules                                    | 33        |
| 6.2.2. Communication modules                                   | 34        |
| 6.3. Connecting the current sensors                            | 35        |
| 6.3.1. Connection concept                                      | 35        |
| 6.3.2. Details of the RJ12 connections for each current sensor | 35        |
| 6.3.3. Connecting to the electrical network and loads          | 36        |
| 6.3.4. Connection of the functional earth                      | 38        |
| <b>7. STATUS AND AUTO-ADDRESSING LEDS</b>                      | <b>39</b> |
| 7.1. Status LEDs                                               | 39        |
| 7.2. Auto-addressing                                           | 39        |

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| <b>8. COMMUNICATION</b>                                          | <b>41</b> |
| 8.1. General information                                         | 41        |
| 8.2. RS485 rules                                                 | 41        |
| 8.3. Radio-frequency (RF) rules                                  | 42        |
| 8.3.1. Installation                                              | 43        |
| 8.3.2. EC Declaration of Conformity                              | 43        |
| 8.4. Communication tables                                        | 43        |
| <b>9. CONFIGURATION</b>                                          | <b>44</b> |
| 9.1. Configuration using Easy Config                             | 44        |
| 9.1.1. Connection modes                                          | 44        |
| 9.1.2. Using Easy Config                                         | 46        |
| 9.1.3. Synchronisation of products                               | 48        |
| 9.2. Configuration from the DIRIS D-30 remote display            | 49        |
| 9.2.1. Connection mode                                           | 49        |
| <b>10. ALARMS</b>                                                | <b>50</b> |
| 10.1. Alarms upon events                                         | 50        |
| 10.1.1. Electrical parameters                                    | 50        |
| 10.1.2. Voltage and current unbalance (in a three-phase network) | 50        |
| 10.1.3. EN 50160 voltage quality events                          | 51        |
| 10.1.4. Consumption                                              | 51        |
| 10.1.5. Analogue inputs                                          | 51        |
| 10.1.6. Digital inputs                                           | 51        |
| 10.1.7. Combination of alarms                                    | 51        |
| 10.2. Setup alarms                                               | 52        |
| 10.2.1. Current/voltage compatibility                            | 52        |
| 10.2.2. Incorrect direction of rotation (three-phase network)    | 52        |
| 10.2.3. Faulty current sensor                                    | 52        |
| 10.3. Setting up alarms                                          | 52        |
| 10.3.1. ALARM LED on front                                       | 52        |
| 10.3.2. Activation of an output                                  | 52        |
| 10.3.3. Activation of an input                                   | 52        |
| 10.3.4. RS485 Modbus                                             | 53        |
| 10.3.5. Display and WEBVIEW                                      | 53        |
| <b>11. FEATURES</b>                                              | <b>54</b> |
| 11.1. DIRIS B features                                           | 54        |
| 11.1.1. Mechanical features                                      | 54        |
| 11.1.2. Electrical specifications                                | 54        |
| 11.1.3. Input characteristics                                    | 54        |
| 11.1.4. Measuring characteristics                                | 54        |
| 11.1.5. Communication specifications                             | 55        |
| 11.1.6. Environmental specifications                             | 55        |
| 11.1.7. Electromagnetic compatibility                            | 56        |
| 11.1.8. Safety                                                   | 56        |
| 11.1.9. Service life                                             | 56        |
| 11.2. DIRIS O optional modules characteristics                   | 56        |
| 11.3. DIRIS D-30 display characteristics                         | 58        |
| 11.3.1. Mechanical features                                      | 58        |
| 11.3.2. Single product connection                                | 58        |
| 11.3.3. Electrical specifications                                | 58        |
| 11.3.4. Environmental specifications                             | 58        |
| 11.4. TE, TR and RF sensor features                              | 59        |
| <b>12. PERFORMANCE CLASSES</b>                                   | <b>61</b> |
| 12.1. Specification of the characteristics                       | 61        |
| 12.2. Evaluation of the power supply quality                     | 62        |

# 1. DOCUMENTATION

All documentation relating to DIRIS B units and their associated sensors is available on the SOCOMEC website at the following address:

[www.socomec.com/catalogues-brochures\\_en.html](http://www.socomec.com/catalogues-brochures_en.html)



## 2. HAZARDS AND WARNINGS

The term "unit" used in the following paragraphs encompasses the DIRIS B, its optional modules and its associated current sensors (TE, TR or TF).

The assembly, use, servicing and maintenance of this equipment must only be carried out by trained, qualified professionals.

SOCOMEK shall not be held responsible for failure to comply with the instructions in this manual.

### 2.1. Risk of electrocution, burns or explosion

|                                                                                   |                                                                                |                               |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------|-------------------------------|
|  | Caution: risk of electric shock                                                | Ref. ISO 7000-0434B (2004-01) |
|  | Caution Refer to the accompanying documentation each time this symbol is shown | Ref. ISO 7000-0434B (2004-01) |

- This device must only be installed and serviced by qualified personnel who have in-depth knowledge of installing, commissioning and operating the device and who have had appropriate training. He or she should have read and understood the various safety measures and warnings stated in the instructions.
- Prior to any work on or in the unit, isolate the unit's voltage inputs and auxiliary power supplies.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Replace all devices, doors and covers before turning on power to this equipment.
- Always power the device with the correct rated voltage.
- Install the unit following the recommended installation instructions and in a suitable electrical cabinet.
- Always connect the TE, TR or TF current sensors using the recommended connection cables and observing the maximum prescribed currents.

|                                                                                     |                                                                                                                                                              |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Do NOT clamp or pull out NON-INSULATED conductors carrying DANGEROUS VOLTAGE which could cause an electric shock, burn or arc flash.<br>Ref. IEC 61010-2-032 |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Failure to take these precautions could cause death or serious injuries.**

### 2.2. Risk of damaging the unit

|                                                                                     |                                                                                |                               |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|-------------------------------|
|  | Caution: risk of electric shock                                                | Ref. ISO 7000-0434B (2004-01) |
|  | Caution Refer to the accompanying documentation each time this symbol is shown | Ref. ISO 7000-0434B (2004-01) |

To ensure that the unit operates correctly, make sure that:

- The unit is correctly installed.
- The auxiliary power supply voltage indicated on the product is observed: 110 V - 230 VAC ( $\pm 15\%$ ).
- The network frequency indicated on the device is observed: 50 or 60 Hz.
- A maximum voltage at the voltage input terminals of 520 VAC phase/phase or 300 VAC phase/neutral is observed.
- Always connect the TE, TR or TF current sensors using the recommended connection cables and observing the maximum prescribed currents.

**Failure to respect these precautions could cause damage to the unit.**

## 2.3. Liability

- Assembly, connection and use must be carried out in accordance with the installation standards currently in force.
- The unit must be installed in accordance with the rules given in this manual.
- Failure to observe the rules for installing this unit may compromise the device's intrinsic protection.
- The unit must be positioned within an installation which complies with the standards currently in force.
- Any cables which need to be replaced may only be replaced with cables with the correct ratings.

### 3. PRELIMINARY OPERATIONS

To ensure the safety of personnel and the product, please carefully read the contents of these instructions before installation.

Check the following points as soon as you receive the package containing the unit, one or several sensors:

- The packaging is in good condition
- The unit has not been damaged during transportation
- The device reference conforms to your order
- The packaging includes the unit fitted with removable terminal blocks and a Quick start guide.

## 4. INTRODUCTION

### 4.1. Introduction to the DIRIS B

The DIRIS B is a compact PMD\* with a modular format. It is designed for measuring, monitoring and reporting electrical energy. The DIRIS B offers a range of functions for measuring voltage, current, power, energy and quality. It can be used to jointly analyse the single-phase and three-phase loads. Add optional modules to manage multi-fluid energy sources (water, gas, etc.) and additional inputs/outputs.

The connection mode for the current sensors allows quick, easy installation. Their automatic identification (type and rating) by the DIRIS B significantly reduces the risk of errors during installation. This approach, based on combining the sensor with the DIRIS B, also means the overall accuracy of the DIRIS B + current sensor measurement chain can be guaranteed for all values measured.



The product is configured from its remote display or via the Easy Config software. The measurements can be accessed via the WEBVIEW web server, available on the G-30, G-40, G-50 and G-60 communication gateways, enabling monitoring of the electrical values (Power Monitoring version) and reporting of the energy data (Power & Energy Monitoring version). The data can also be accessed via the HYPERVIEW energy management software.

The communication modes RS485 Modbus or radio frequency are available depending on the DIRIS B reference. You can extend the range of communication modes (RS485, PROFIBUS, BACnet) by adding optional modules.

The DIRIS B can be integrated as a standalone solution or in a multi-product configuration within an energy management system.

\*PMD: Performance Measuring and Monitoring Device in accordance with IEC 61557-12.

#### 4.1.1. Range
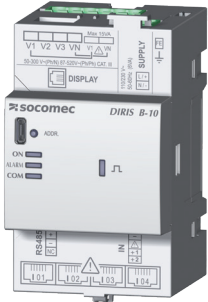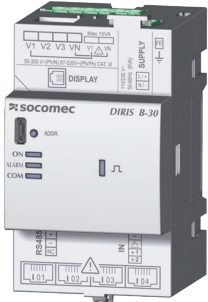
|               |       |                                                                                     |                                                                                      |                                                                                       |
|---------------|-------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|               |       |  |  |  |
|               | PMD   | <b>DIRIS B-10</b>                                                                   | <b>DIRIS B-30 RS</b>                                                                 | <b>DIRIS B-30 RF</b>                                                                  |
| Communication | RS485 | •                                                                                   | •                                                                                    |                                                                                       |
|               | RF    |                                                                                     |                                                                                      | •                                                                                     |
|               |       | Ref. 4829 0010                                                                      | Ref. 4829 0000                                                                       | Ref. 4829 0002                                                                        |

#### Accessories

|                                           |                                                        |                                           |                             |
|-------------------------------------------|--------------------------------------------------------|-------------------------------------------|-----------------------------|
| Remote antenna RF 868MHz<br>Height: 210mm | Cable for remote antenna.<br>SMA connector. Length: 3m | Sealing kit.<br>To secure terminals U / I | USB cable for configuration |
| Ref. 4854 0126                            | Ref. 4854 0127                                         | Ref. 4829 0049                            | Ref. 4829 0050              |

#### 4.1.2. Functions

The DIRIS B boasts numerous functions, including:

- **General measurements**

- Current, frequency, voltage electrical values
- Power, power factor, cos phi and tan phi
- Operation across 4 quadrants
- Predictive power
- Overall accuracy of the DIRIS B + sensors measurement chain guaranteed up to class 0.5 (depending on the current sensor used) for active energy and power in accordance with IEC 61557-12

- **Quality**

- Current, phase to neutral voltage, phase to phase voltage
- THD and harmonics up to order 63 for voltage and current
- Voltage and current crest factor (\*)
- Current and voltage imbalance
- EN50160 events (Uswl, Udip, Uint) and current overloads (\*)

- **Data logging**

- Recording of average electrical values
- Recording and timestamping of min/max electrical values

- **Metering**

- Partial and total apparent, reactive and active power
- Load curves (\*)
- Multi-tariff

- **Alarm (\*)**

- 25 timestamped alarms with boolean combination

- **Connection**

- 4 current inputs with automatic recognition of the current sensors via a quick connection cable (RJ12 type)
- Simultaneous management of several single-phase, two-phase and three-phase loads
- Checking of the connection, detection of the current sensors and auto-configuration of the networks
- Guarantees the overall accuracy of the DIRIS B + sensor measurement chain in terms of power and active energy as per IEC 61557-12

- **Inputs / Outputs**

- 2 logical inputs
- Optional extension module for logical, analogue and temperature inputs/outputs

## **Communication**


- RS485 or radio frequency (RF) communication (see reference)
- Optional communication module (RS485, PROFIBUS, BACnet)
- Connects to a DIRIS D-30 remote display via RJ9 or D-50 / D-70 via RS485
- Integration in the gateway's WEBVIEW web server for multi-product applications
- Time synchronisation with the gateway
- Auto-addressing in association with the gateway

(\*) Available only on the DIRIS B-30 RS (ref. 4829 0000) and DIRIS B-30 RF (ref. 4829 0002)

### 4.1.3. Electrical values measured

|                                                   |                                                                                    | DIRIS<br>B-10 | DIRIS<br>B-30<br>RS /<br>RF |
|---------------------------------------------------|------------------------------------------------------------------------------------|---------------|-----------------------------|
| <b>General</b>                                    | <b>Instant with timestamped Min/Max &amp; Average<br/>with timestamped Min/Max</b> |               |                             |
| Phase Voltage - Neutral                           | V1, V2, V3, VN, Vsystem (without min/max)                                          | •             | •                           |
| Phase to phase voltage                            | U12, U23, U31, Usystem (without min/max)                                           | •             | •                           |
| Frequency                                         | f                                                                                  | •             | •                           |
| Current                                           | I1, I2, I3, IN, Isystem (without min/max)                                          | •             | •                           |
| Total power and power by phase                    | P, Q, S, P1, P2, P3, Q1, Q2, Q3, S1, S2, S3                                        | •             | •                           |
| Predictive power                                  | P, Q, S                                                                            | •             | •                           |
| Total power factor and power factor by phase      | PF, PF1, PF2, PF3                                                                  | •             | •                           |
| Cos phi and tan phi                               | L1, L2, L3 (instantaneous values)                                                  | •             | •                           |
| <b>Quality<br/>Instant &amp; Average</b>          |                                                                                    |               |                             |
| Phase to neutral voltage unbalance                | Vdir, Vinv, Vhom, Vnba, Vnb                                                        | •             | •                           |
| Phase to phase voltage unbalance                  | Udir, Uinv, Unba, Unb                                                              | •             | •                           |
| Current unbalance                                 | Idir, Iinv, Ihom, Inba, Inb                                                        | •             | •                           |
| Phase to neutral voltage THD                      | THDv1, THDv2, THDv3, THD Vsys                                                      | •             | •                           |
| Phase to phase voltage THD                        | THDu12, THDu23, THDu31, THD Usys                                                   | •             | •                           |
| Current THD                                       | THDi1, THDi2, THDi3, THDiN, THD Isys                                               | •             | •                           |
| THD system                                        | THD V, THD U, THD I                                                                | •             | •                           |
| Phase to neutral voltage harmonics orders 1 to 63 | V1h, V2h, V3h                                                                      |               | •                           |
| Phase to phase voltage harmonics orders 1 to 63   | U12h, U23h, U31h                                                                   |               | •                           |
| Current harmonics orders 1 to 63                  | I1h, I2h, I3h, INh                                                                 |               | •                           |
| Crest Factor                                      | V1, V2, V3, U12, U23, U31, I1, I2, I3, IN                                          |               | •                           |
| <b>Energies</b>                                   |                                                                                    |               |                             |
| Total energy                                      | Ea+, Ea-, Er+ (total, lagging, leading), Er- (total, lagging, leading), Eap        | •             | •                           |
| Partial energy                                    | Ea+, Ea-, Er+, Er-, Eap                                                            | •             | •                           |

#### 4.1.4. Dimensions

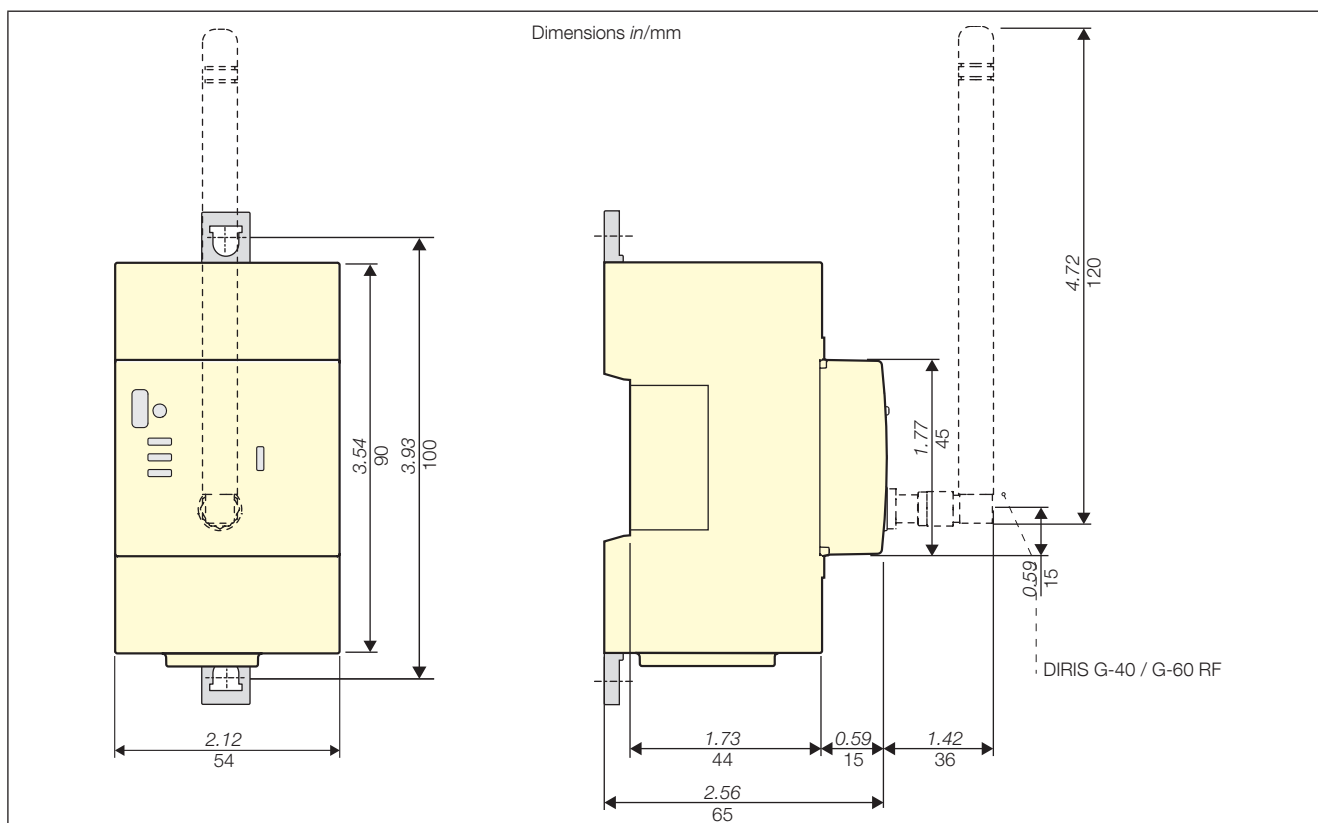

## 4.2. Presentation of optional modules


The optional modules, which have a modular format, are fitted on the DIRIS B; they are used to extend its functionalities in terms of inputs/outputs and communication modes.

### 4.2.1. Range

|                                                                                   |                                                                                   |                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| <b>DIRIS O-iod</b>                                                                | <b>DIRIS O-iaa</b>                                                                | <b>DIRIS O-it</b>                                                                   |
| Module with 2 digital inputs/outputs                                              | Module with 2 analogue inputs/outputs                                             | Module with 3 temperature inputs                                                    |
| Ref. 4829 0030                                                                    | Ref. 4829 0031                                                                    | Ref. 4829 0032                                                                      |

|                                                                                    |                                                                                    |                                                                                     |                                                                                      |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  |  |  |  |
| <b>DIRIS O-m</b>                                                                   | <b>DIRIS O-p</b>                                                                   | <b>DIRIS O-b/ip</b>                                                                 | <b>DIRIS O-b/mstp</b>                                                                |
| Modbus RS485 communication module                                                  | PROFIBUS DPV1 communication module                                                 | BACnet/IP communication module                                                      | BACnet MS/TP communication module                                                    |
| Ref. 4829 0033                                                                     | Ref. 4829 0034                                                                     | Ref. 4829 0035                                                                      | Ref. 4829 0036                                                                       |


### 4.2.2. Dimensions

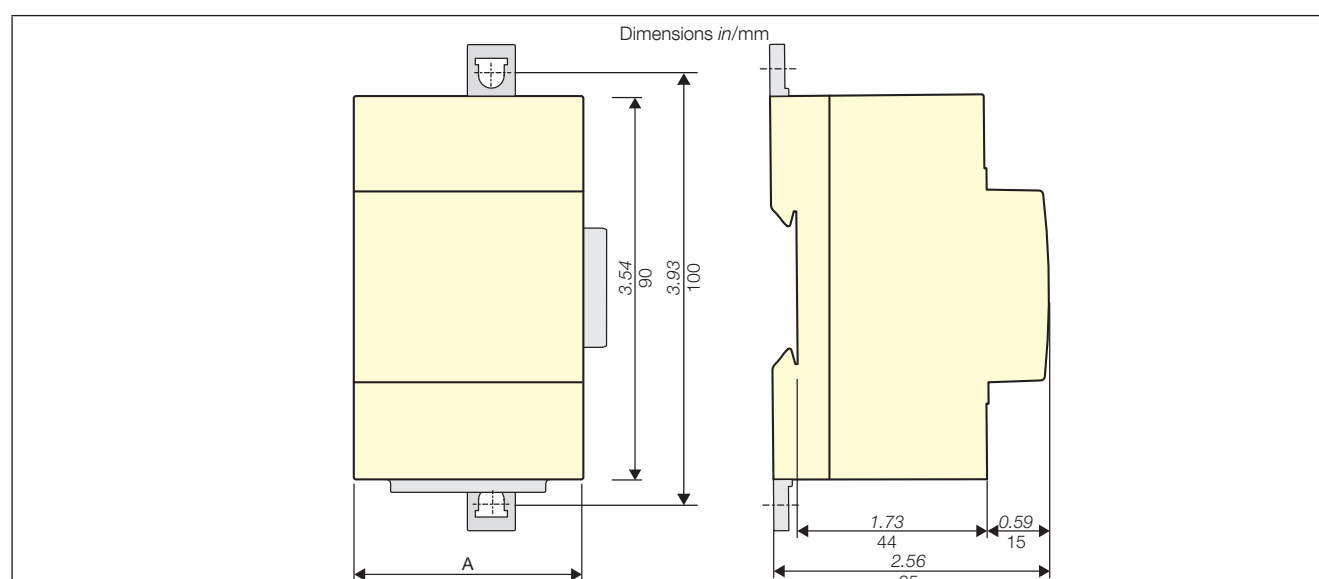

|          | DIRIS O-iod   | DIRIS O-iaa | DIRIS O-it | DIRIS O-m     | DIRIS O-p | DIRIS O-b/ip | DIRIS O-b/mstp |
|----------|---------------|-------------|------------|---------------|-----------|--------------|----------------|
| <b>A</b> | 1.77in / 45mm |             |            | 2.12in / 54mm |           |              |                |

### 4.3. Presentation of associated current sensors

Various types of current sensors are connected to the DIRIS B: closed (TE), open (TR) or flexible (TF). The difference between these sensors means they can be adapted to any type of new, existing or temporary installation. They all use a specific link. This type of link provides a quick connection, with no cabling errors. The DIRIS B recognises the sensor size and type. This also guarantees the overall accuracy of the DIRIS B + current sensor measurement chain.

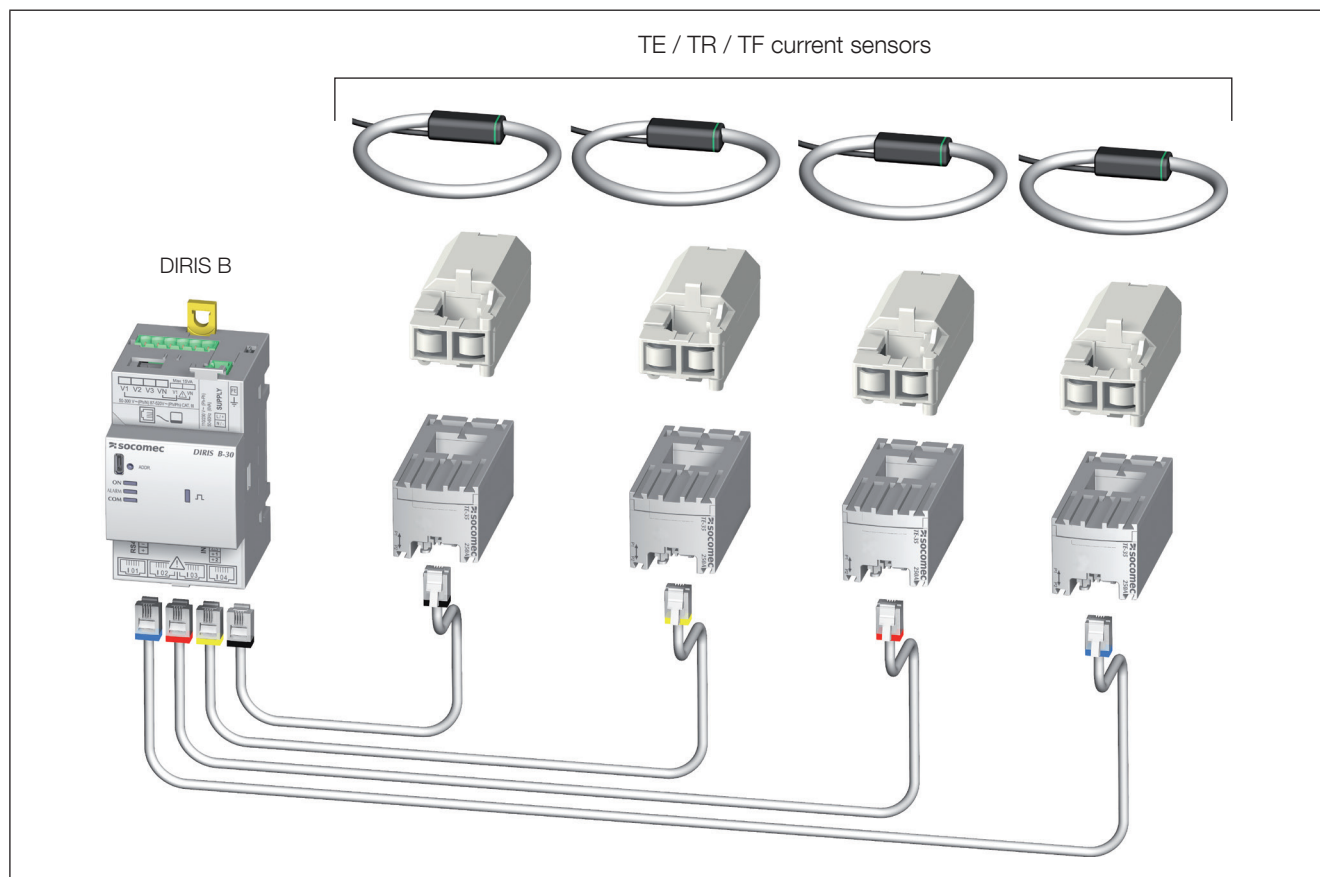

#### Recommendations:

For connecting the current sensors, use SOCOMEC cables or equivalent only, RJ12 straight cables, twisted pair, unshielded, 300 V cat.III., -20°C / +70°C as per IEC 61010-1 version 3.0. It is recommended that all the current sensors are installed in the same direction.

#### Connection cables for current sensors:

| RJ12 connection cables | Cable length (m) |           |           |           |           |           |           |           |                             |
|------------------------|------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------------------------|
|                        | 0.1              | 0.2       | 0.3       | 0.5       | 1         | 2         | 5         | 10        | 50 m reel + 100 connectors* |
| Number of cables       | reference        | reference | reference | reference | reference | reference | reference | reference | reference                   |
| 1                      | -                | -         | -         | -         | -         | -         | 4829 0602 | 4829 0603 | 4829 0601                   |
| 3                      | 4829 0580        | 4829 0581 | 4829 0582 | 4829 0595 | 4829 0583 | 4829 0584 | -         | -         | -                           |
| 4                      |                  |           |           | 4829 0596 | 4829 0588 | 4829 0589 | -         | -         | -                           |
| 6                      | 4829 0590        | 4829 0591 | 4829 0592 | 4829 0597 | 4829 0593 | 4829 0594 | -         | -         | -                           |



\* When producing cables, do not exceed a maximum length of 10 metres.


### 4.3.1. TE solid-core current sensors

The TE solid-core current sensors are used to set up measurement points in a new or existing installation. They are easy to integrate as they are compact and respect the pitch of the circuit breakers. A wide range of accessories are also available for direct fitting on all type of cabling (cable, flexible or rigid busbar) or on a DIN rail support or plate.



Thanks to the specific link, they are recognised by the DIRIS B and the overall accuracy of the measurement chain is guaranteed.


#### 4.3.1.1. Range
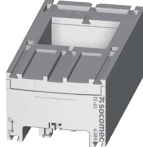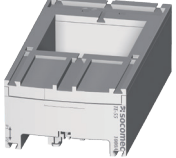
|                                               |                                                                                   |                                                                                   |                                                                                   |                                                                                    |                                                                                     |                                                                                     |
|-----------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|                                               |  |  |  |  |  |  |
|                                               | <b>TE-18</b>                                                                      | <b>TE-18</b>                                                                      | <b>TE-25</b>                                                                      | <b>TE-35</b>                                                                       | <b>TE-45</b>                                                                        | <b>TE-55</b>                                                                        |
| <b>Pitch</b>                                  | 18 mm                                                                             | 18 mm                                                                             | 25 mm                                                                             | 35 mm                                                                              | 45 mm                                                                               | 55 mm                                                                               |
| <b>Nominal current range <math>I_n</math></b> | 5 - 20 A                                                                          | 25 - 63 A                                                                         | 40 - 160 A                                                                        | 63 - 250 A                                                                         | 160 - 630 A                                                                         | 400 - 1000 A                                                                        |
| <b>Actual range</b>                           | 0.1 - 24 A                                                                        | 0.5 - 75 A                                                                        | 0.8 - 192 A                                                                       | 1.26 - 300 A                                                                       | 3.2 - 756 A                                                                         | 8 - 1200 A                                                                          |
| <b>Maximum I</b>                              | 24 A                                                                              | 75.6 A                                                                            | 192 A                                                                             | 300 A                                                                              | 756 A                                                                               | 1200 A                                                                              |
| <b>Reference</b>                              | 4829 0500                                                                         | 4829 0501                                                                         | 4829 0502                                                                         | 4829 0503                                                                          | 4829 0504                                                                           | 4829 0505                                                                           |
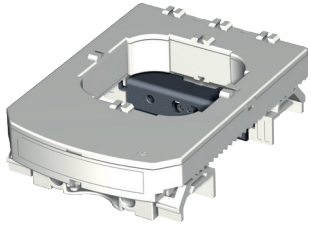
|                                               |                                                                                     |
|-----------------------------------------------|-------------------------------------------------------------------------------------|
|                                               |  |
|                                               | <b>TE-90</b>                                                                        |
| <b>Pitch</b>                                  | 90 mm                                                                               |
| <b>Nominal current range <math>I_n</math></b> | 600 - 2000 A                                                                        |
| <b>Actual range</b>                           | 12 - 2400 A                                                                         |
| <b>Maximum I</b>                              | 2400 A                                                                              |
| <b>Reference</b>                              | 4829 0506                                                                           |

4.3.1.2. Dimensions
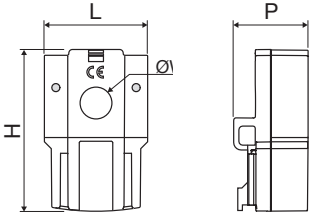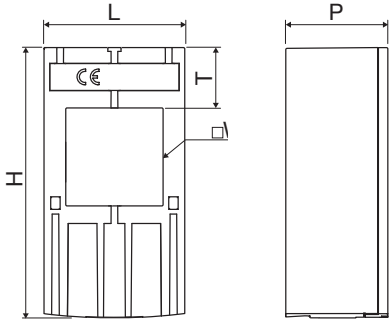
|                     |                                                                                   |                                                                                    |                                      |                                      |                                       |
|---------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------|--------------------------------------|---------------------------------------|
|                     |  |  |                                      |                                      |                                       |
| Dimensions in/mm    | <b>TE-18</b>                                                                      | <b>TE-25</b>                                                                       | <b>TE-35</b>                         | <b>TE-45</b>                         | <b>TE-55</b>                          |
| <b>Pitch</b>        | 0.71<br>18 (staggered assembly)                                                   | 0.98<br>25                                                                         | 1.37<br>35                           | 1.77<br>45                           | 2.16<br>55                            |
| <b>LxHxD</b>        | 1.10 x 0.79 x 1.77<br>28 x 20 x 45                                                | 0.98 x 1.28 x 2.56<br>25 x 32.5 x 65                                               | 1.37 x 1.28 x 2.79<br>35 x 32.5 x 71 | 1.77 x 1.28 x 3.38<br>45 x 32.5 x 86 | 2.16 x 1.28 x 3.93<br>55 x 32.5 x 100 |
| <b>Aperture (W)</b> | ø 0.33<br>ø 8.4                                                                   | 0.53 x 0.53<br>13.5 x 13.5                                                         | 0.82 x 0.82<br>21 x 21               | 1.22 x 1.22<br>31 x 31               | 1.61 x 1.61<br>41 x 41                |
| <b>(T)</b>          | -                                                                                 | 0.69<br>17.5                                                                       | 0.69<br>17.5                         | 0.77<br>19.5                         | 0.85<br>21.5                          |



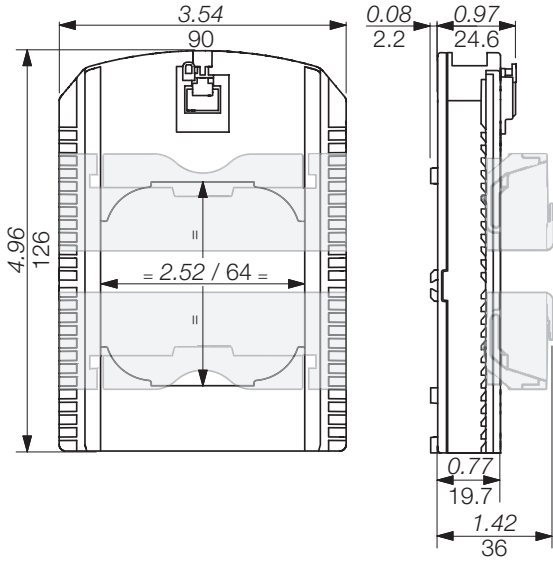
|                                                                                    |
|------------------------------------------------------------------------------------|
|  |
| Dimensions in/mm <b>TE-90</b>                                                      |

## 4.3.2. TR split-core current sensors


The TR split-core current sensors are used to set up measurement points in a new or existing installation without interfering with its cabling. Thanks to the specific link, they are recognised by the DIRIS B and the overall accuracy of the measurement chain is guaranteed.

### 4.3.2.1. Range

Four models are available from 25A to 600A to analyse several types of loads.
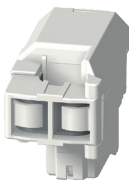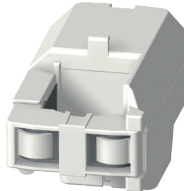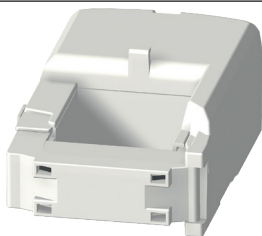
|                                            |                                                                                   |                                                                                   |                                                                                    |                                                                                     |
|--------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|                                            |  |  |  |  |
|                                            | <b>TR-10 / iTR-10</b>                                                             | <b>TR-14 / iTR-14</b>                                                             | <b>TR-21 / iTR-21</b>                                                              | <b>TR-32 / iTR-32</b>                                                               |
| <b>Cable passage diameter</b>              | Ø 10 mm                                                                           | Ø 14 mm                                                                           | Ø 21 mm                                                                            | Ø 32 mm                                                                             |
| <b>Nominal current range I<sub>n</sub></b> | 25 - 63 A                                                                         | 40 - 160 A                                                                        | 63 - 250 A                                                                         | 160 - 600 A                                                                         |
| <b>Recommended cable section</b>           | 6 mm <sup>2</sup> (iTR-10)                                                        | 10 mm <sup>2</sup> (iTR-14)                                                       | 50 mm <sup>2</sup> (iTR-21)                                                        | 50 mm <sup>2</sup> (iTR-32)                                                         |
| <b>Maximum I</b>                           | 75.6 A                                                                            | 192 A                                                                             | 300 A                                                                              | 720 A                                                                               |
| <b>Part number</b>                         | 4829 0555 / 4829 0655                                                             | 4829 0556 / 4829 0656                                                             | 4829 0557 / 4829 0657                                                              | 4829 0558 / 4829 0658                                                               |

### 4.3.2.2. Dimensions
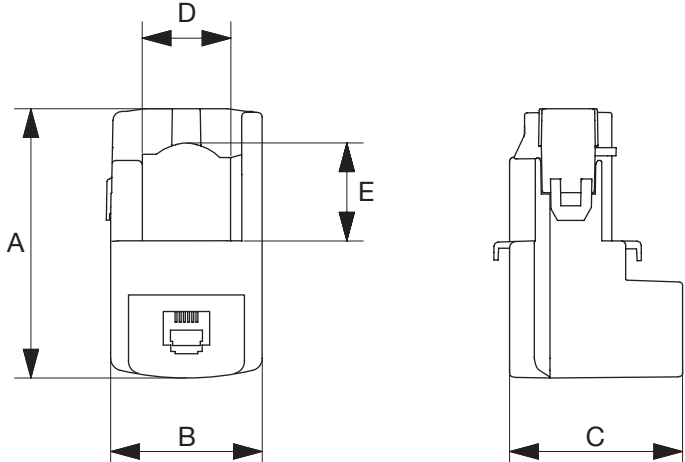
|                  |                                                                                      |                        |                       |                       |
|------------------|--------------------------------------------------------------------------------------|------------------------|-----------------------|-----------------------|
|                  |  |                        |                       |                       |
| Dimensions in/mm | <b>TR-10 / i TR-10</b>                                                               | <b>TR-14 / i TR-14</b> | <b>TR-21 / iTR-21</b> | <b>TR-32 / iTR-32</b> |
| <b>A</b>         | 1.74<br>44                                                                           | 2.63<br>67             | 2.56<br>65            | 3.38<br>86            |
| <b>B</b>         | 1.02<br>26                                                                           | 1.14<br>29             | 1.45<br>37            | 2.08<br>53            |
| <b>C</b>         | 1.10<br>28                                                                           | 1.10<br>28             | 1.69<br>43            | 1.85<br>47            |
| <b>D</b>         | -                                                                                    | 0.55<br>14             | 0.82<br>21            | 1.26<br>32            |
| <b>E</b>         | -                                                                                    | 0.59<br>15             | 0.90<br>23            | 1.30<br>33            |
| <b>Diameter</b>  | 0.39<br>10                                                                           | 0.55<br>14             | 0.82<br>21            | 1.26<br>32            |

### 4.3.3. TF flexible current sensors

The TF flexible current sensors use the Rogowski principle, covering a wide current range without saturation.

Their flexible design and easy opening system enables a quick installation inside electrical panels, making them particularly well suited for adding measuring points in existing electrical installations, especially when space is limited.

The secure lock technology prevents non voluntary openings of the Rogowski rope.

#### 4.3.3.1. Range


Six models are available, covering a large current range up to 6000 A with openings of different shapes and sizes. They include a compact and self-supplied integrator, required to shape the current signal.

|                                                                                   |                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Due to the specific RJ12 connection, the TF current sensors can only be used with DIRIS Digiware I, DIRIS B and DIRIS A-40. Used in conjunction with these PMD equipped with RJ12 connectors, the overall accuracy of the measurement chain is guaranteed. |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|               | TF-40        | TF-80        | TF-120        | TF-200        | TF-300         | TF-600         |
|---------------|--------------|--------------|---------------|---------------|----------------|----------------|
| Ø (mm)        | 40           | 80           | 120           | 200           | 300            | 600            |
| I nom. (a.c.) | 100 ... 400A | 150 ... 600A | 400 ... 2000A | 600 ... 4000A | 1600 ... 6000A | 1600 ... 6000A |
| Part number   | 4829 0573    | 4829 0574    | 4829 0575     | 4829 0576     | 4829 0577      | 4829 0578      |

#### 4.3.3.2. Dimensions


| Dimensions in/mm | TF-40                              | TF-80       | TF-120       | TF-200       | TF-300       | TF-600        |
|------------------|------------------------------------|-------------|--------------|--------------|--------------|---------------|
| Diameter D       | 1.57<br>40                         | 3.15<br>80  | 4.72<br>120  | 7.87<br>200  | 11.81<br>300 | 23.62<br>600  |
| Perimeter P      | 4.96<br>126                        | 9.88<br>251 | 14.84<br>377 | 24.72<br>628 | 37.09<br>942 | 74.21<br>1885 |
| Integrator       | 8.04 x 0.75 x 0.6<br>128 x 19 x 15 |             |              |              |              |               |

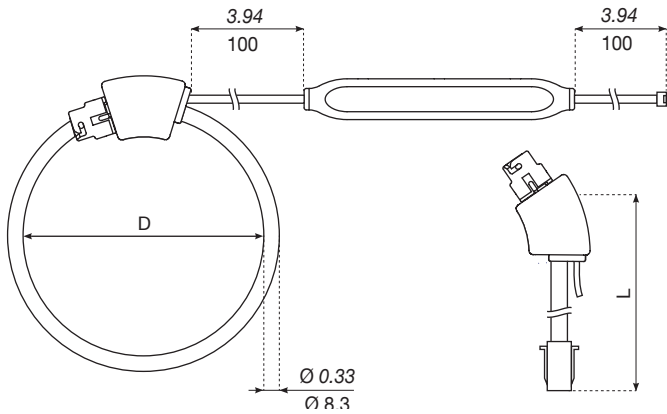


4.3.4. Adapters for 5A sensors

The adapter lets you use a standard sensor supplying a 1A or 5A current to the secondary sensor. When this kind of sensor is used, the overall accuracy of the DIRIS B + sensor is not guaranteed and will depend on the accuracy of the associated sensor (see standard "norm IEC 61557-12 annex D" for more information).  
The primary current is max. 10000A / 5A or 2000A / 1A.

4.3.4.1. Range
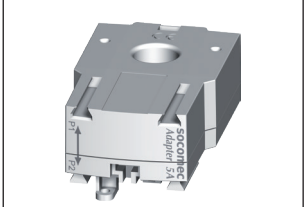
|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
|  |           |
| 5A adapter                                                                        |           |
| I nom.                                                                            | 5A        |
| I max.                                                                            | 6A        |
| Reference                                                                         | 4829 0599 |

4.3.4.2. Dimensions
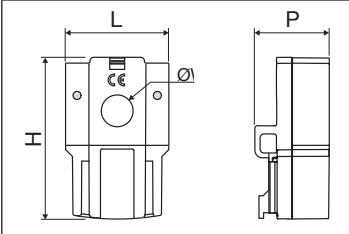
|                                                                                    |                                    |
|------------------------------------------------------------------------------------|------------------------------------|
|  |                                    |
| Dimensions in/mm                                                                   | 5A adapter                         |
| LxHxD                                                                              | 1.10 x 0.79 x 1.77<br>28 x 20 x 45 |
| Aperture (W)                                                                       | ø 0.33<br>ø 8.4                    |

# 5. MOUNTING



The following paragraphs describe the installation of the DIRIS B, the optional modules and the associated sensors.

## 5.1. Recommendations and safety


Refer to the safety instructions (section “2. Hazards and warnings”, page 5)

## 5.2. Installing the DIRIS B

### 5.2.1. DIN rail mounting

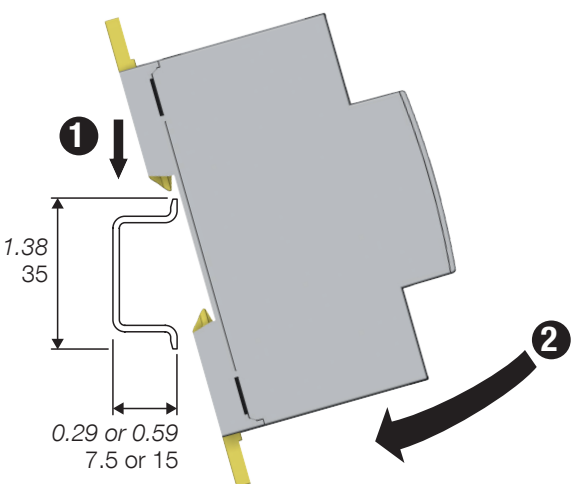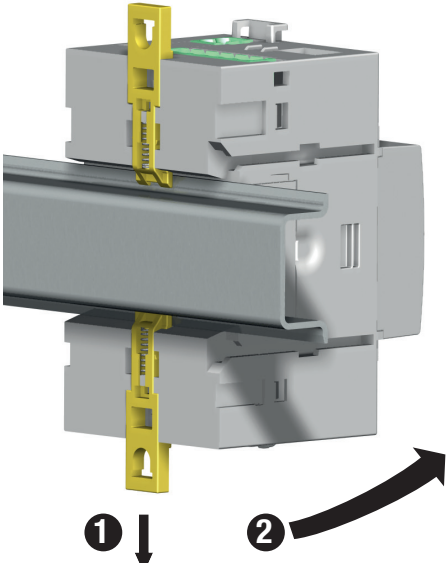
| Mounting                                                                           | Removal                                                                             |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |

### 5.2.2. Plate mounting

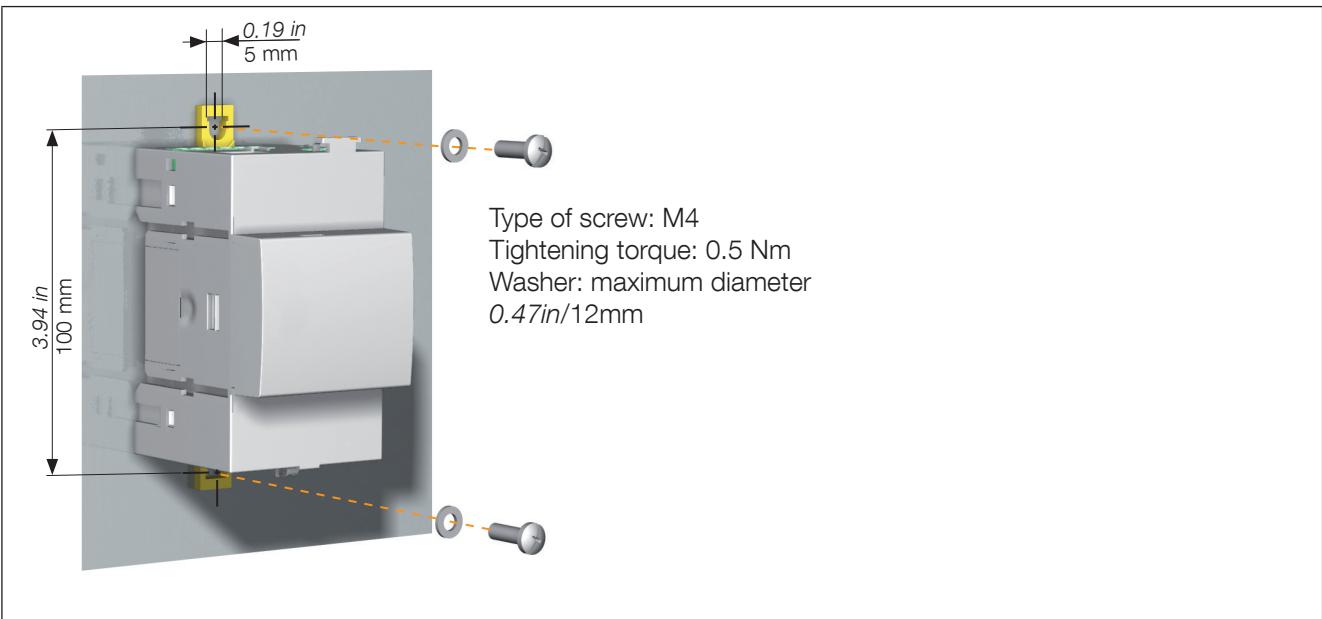


### 5.2.3. Sealing accessory for sensors

| Reference | Sealing case for terminal |
|-----------|---------------------------|
| 4829 0600 | x20                       |

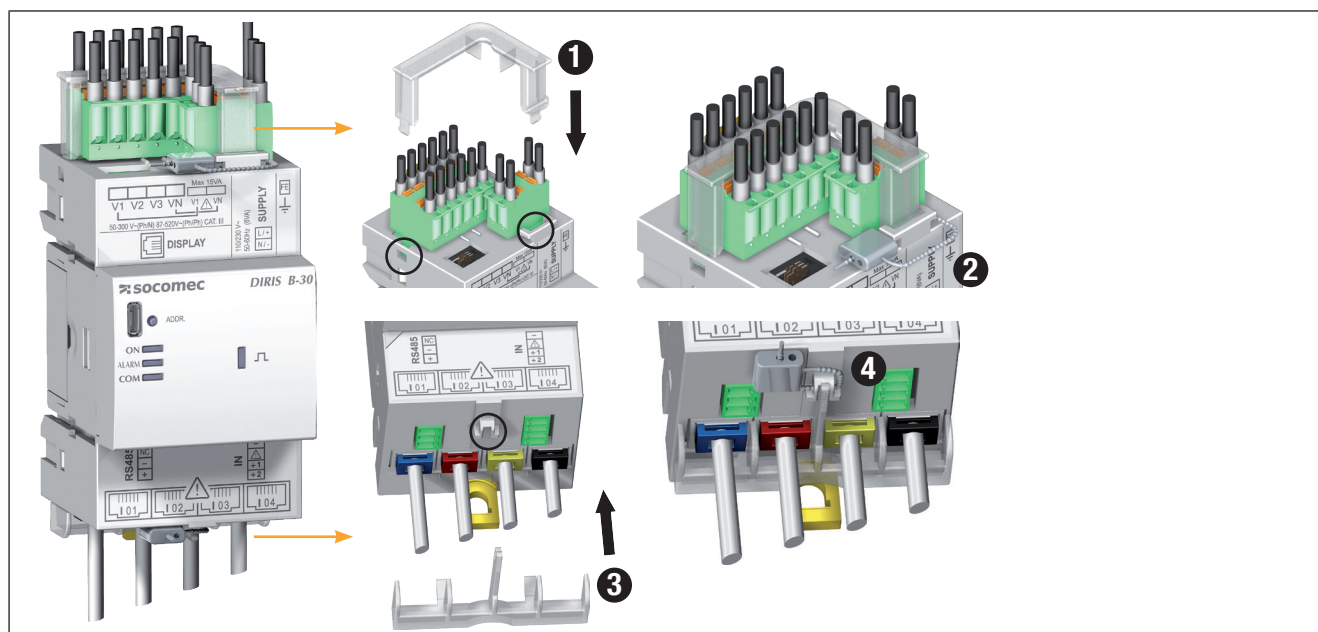


## 5.3. Installing the optional modules

### 5.3.1. Installing an optional module on DIRIS B

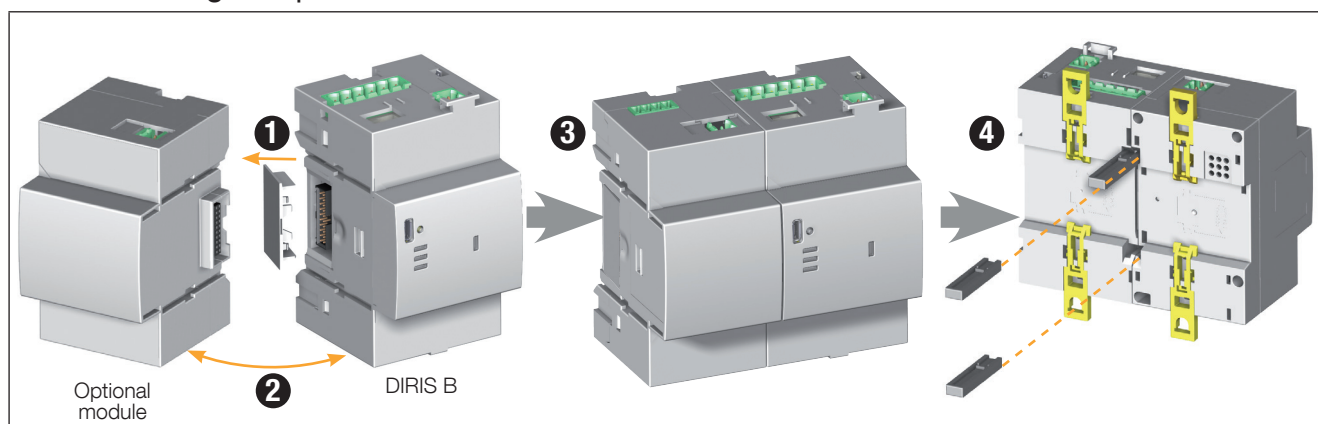

### 5.3.2. Installing an optional module on an optional module

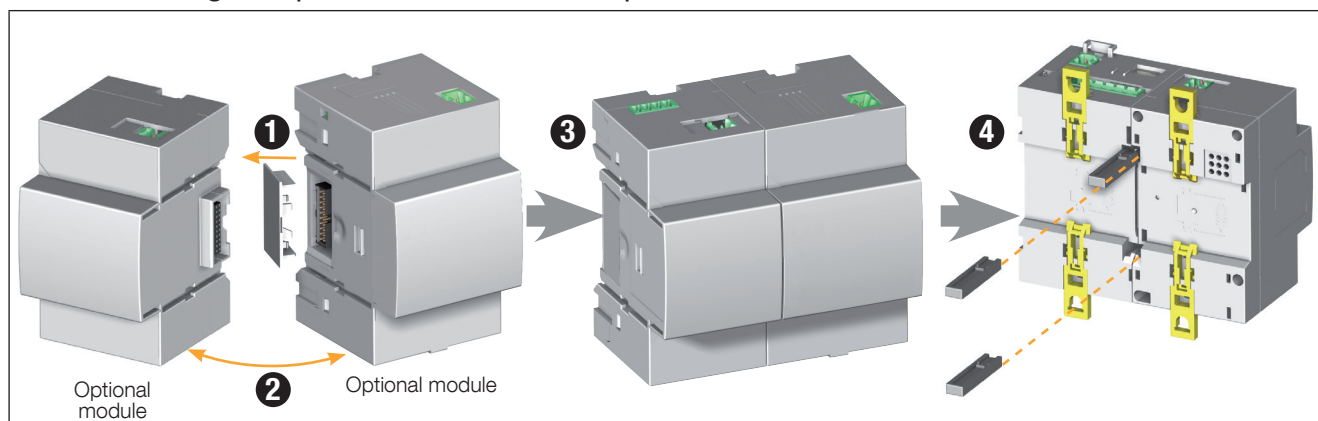

The following guidelines for installation must be observed:

- A maximum of 4 optional modules can be installed on the DIRIS B
- One single temperature module (DIRIS O-it) may be used.
- One single RS485 communication module (DIRIS O-m) may be used and must always be positioned last during installation
- The DIRIS B assembly with its optional modules must be installed on a DIN rail or base plate.


## 5.4. Installing TE solid-core sensors

### 5.4.1. Mounting accessories



The list of mounting accessories supplied with the sensors are listed below:

|                        |              |              |  |  |  |  |
|------------------------|--------------|--------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Reference              |              | Pitch        | DIN rail and plate mounting                                                       | DIN rail mounting                                                                 | Plate mounting                                                                      | Busbar mounting                                                                     |
| 4829 0500<br>4829 0501 | <b>TE-18</b> | <b>18 mm</b> | x 1                                                                               |                                                                                   |                                                                                     |                                                                                     |
| 4829 0502              | <b>TE-25</b> | <b>25 mm</b> |                                                                                   | x 2                                                                               | x 4                                                                                 |                                                                                     |
| 4829 0503              | <b>TE-35</b> | <b>35 mm</b> |                                                                                   | x 2                                                                               | x 4                                                                                 | x 2                                                                                 |
| 4829 0504              | <b>TE-45</b> | <b>45 mm</b> |                                                                                   | x 2                                                                               | x 4                                                                                 | x 2                                                                                 |
| 4829 0505              | <b>TE-55</b> | <b>55 mm</b> |                                                                                   | x 2                                                                               | x 4                                                                                 | x 2                                                                                 |
| 4829 0506              | <b>TE-90</b> | <b>90 mm</b> | x 2                                                                               |                                                                                   | x 6                                                                                 |                                                                                     |

### 5.4.2. DIN rail mounting

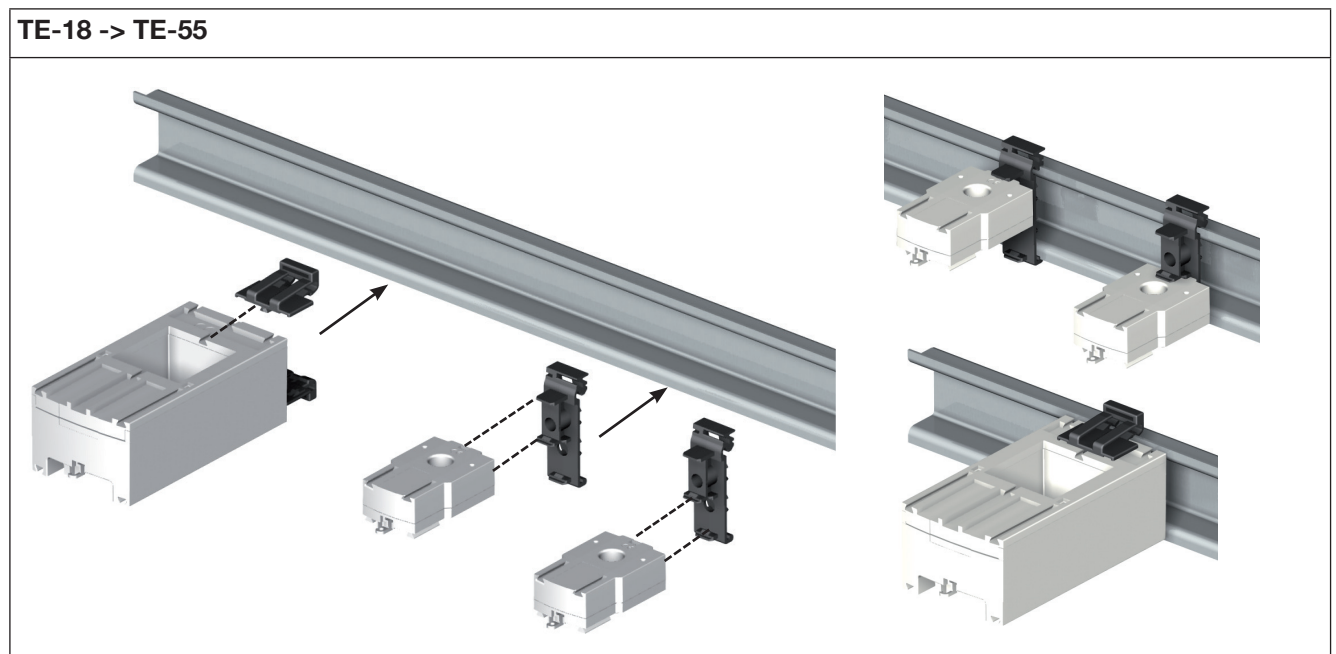

Removing clamps

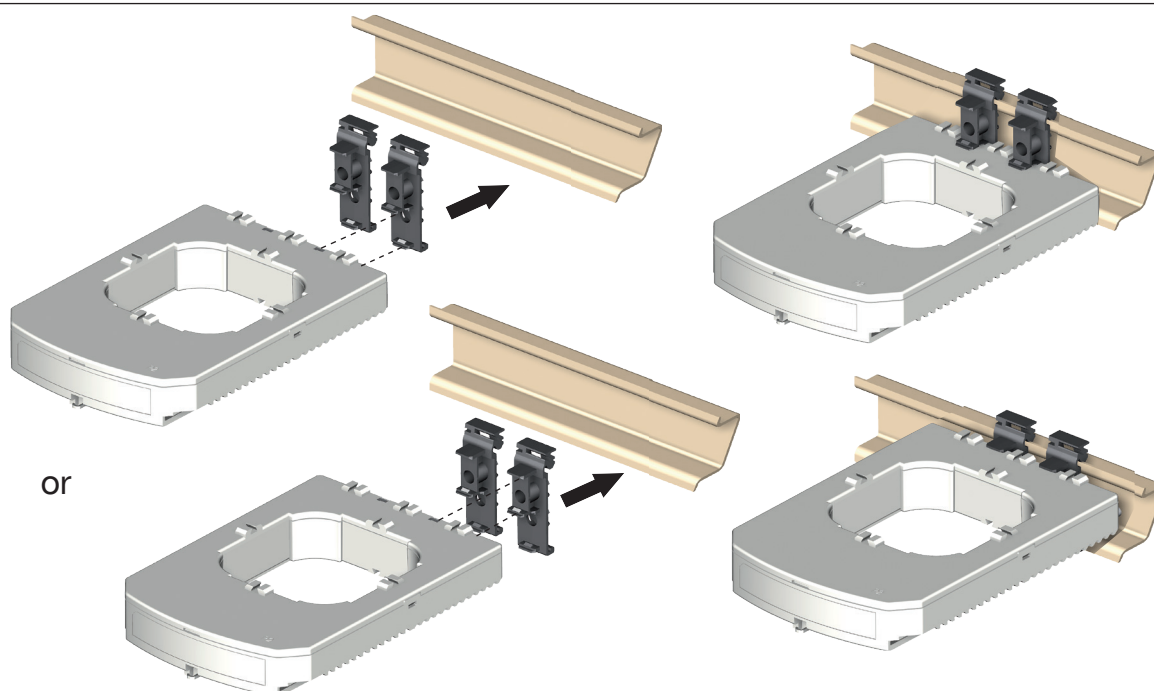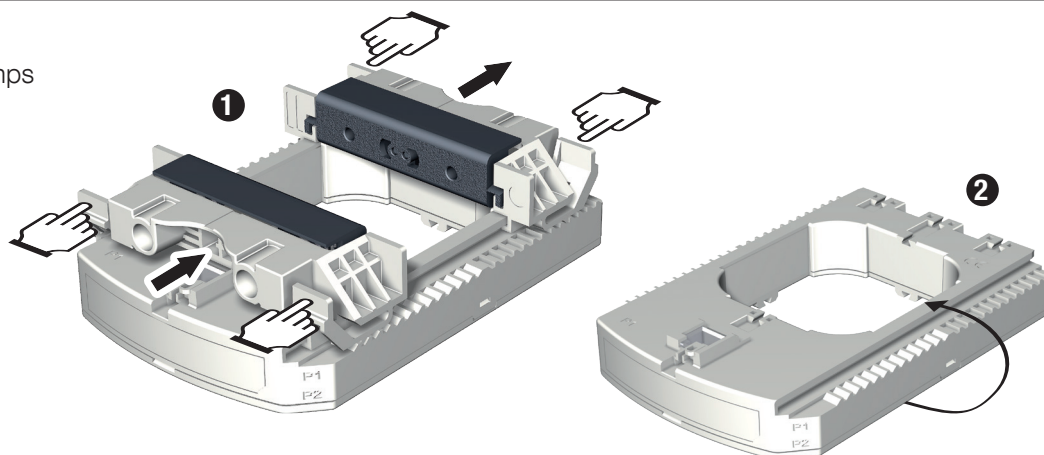


or


NB: Install sensor TE-90 to the DIN rail to make it easier to install. This is a temporary installation. Use the clamps to install the TE-90 sensors on the DIN rail.

### 5.4.3. Plate mounting



#### TE-18

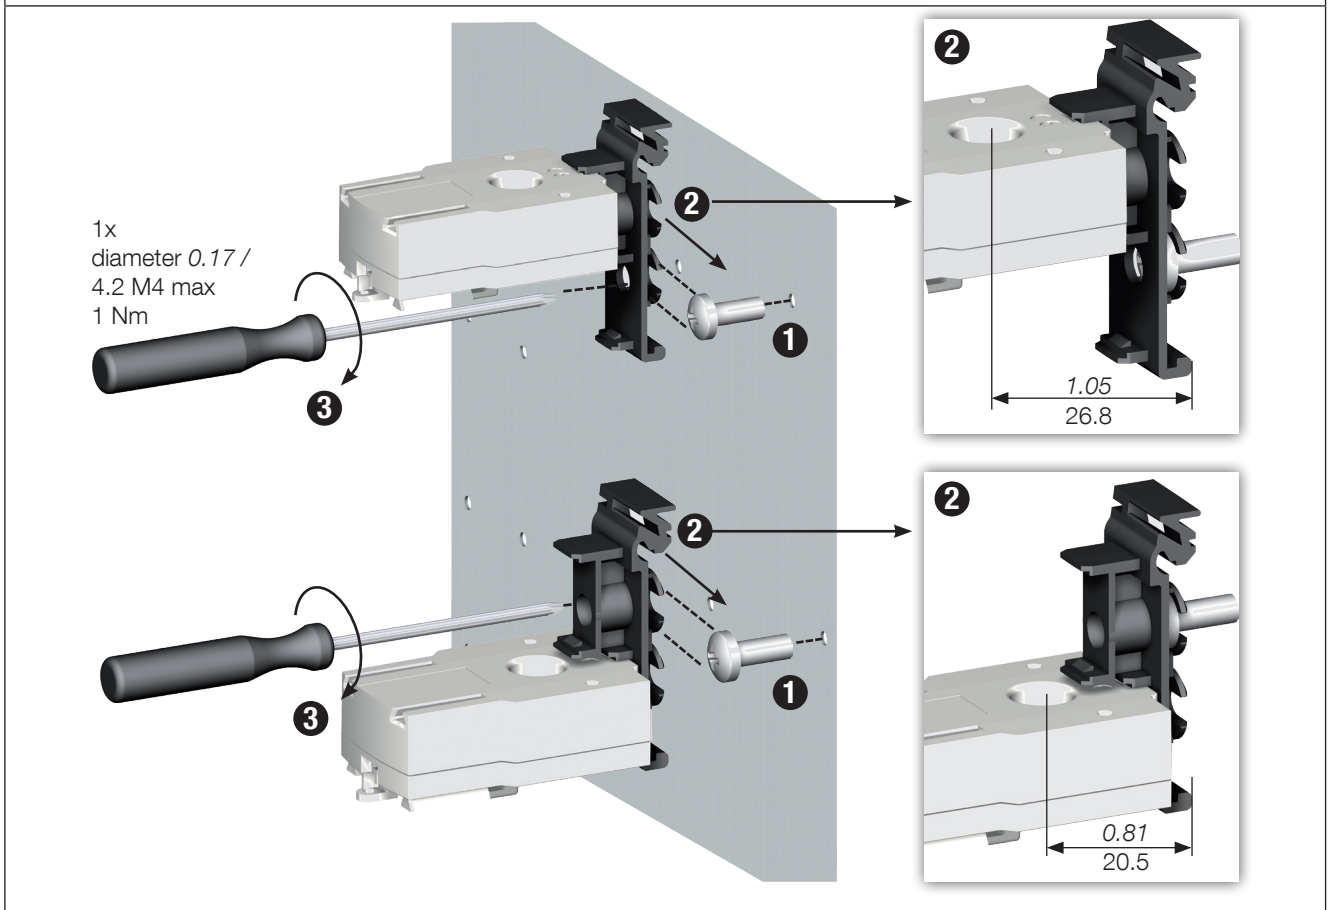

#### TE-25 - > TE-55




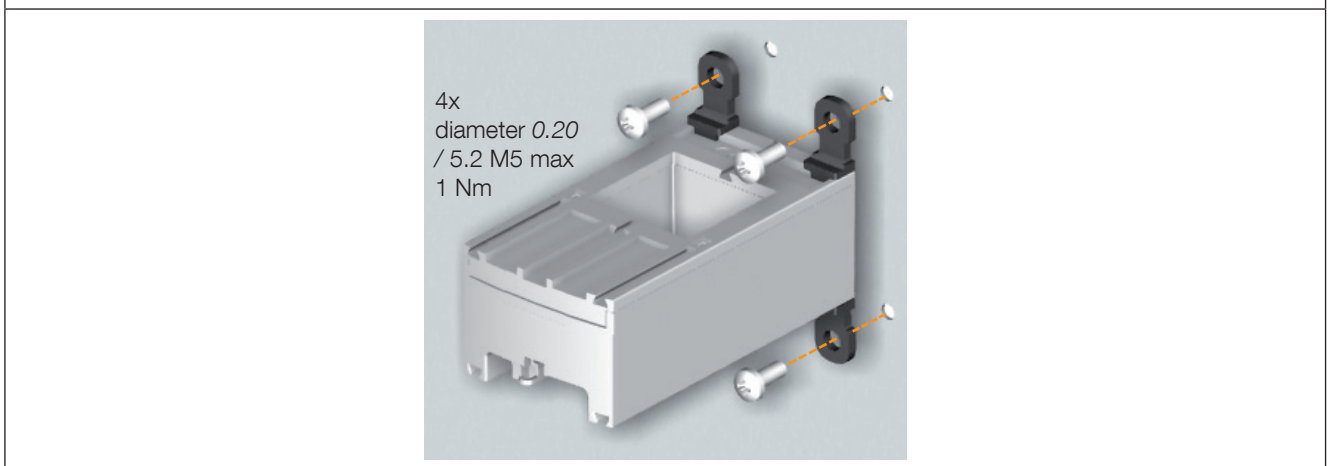


Removing clamps

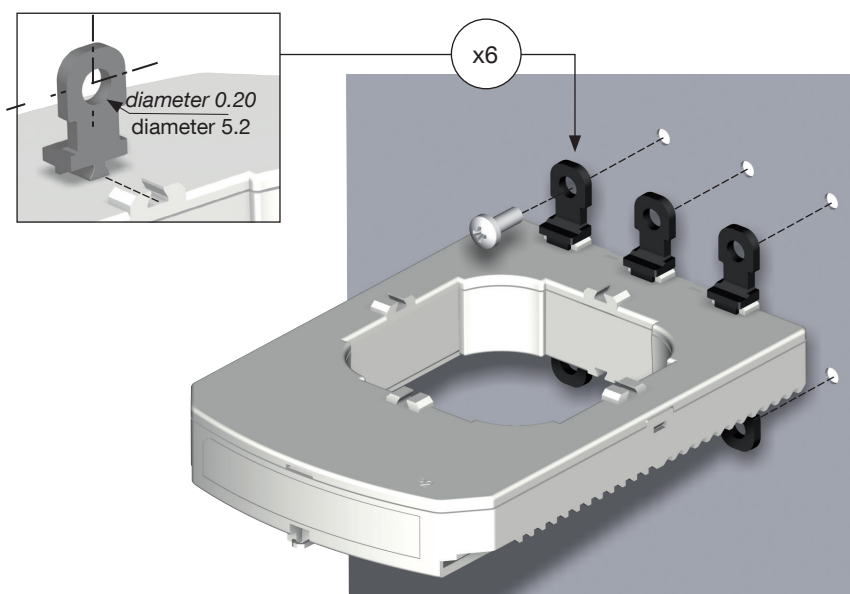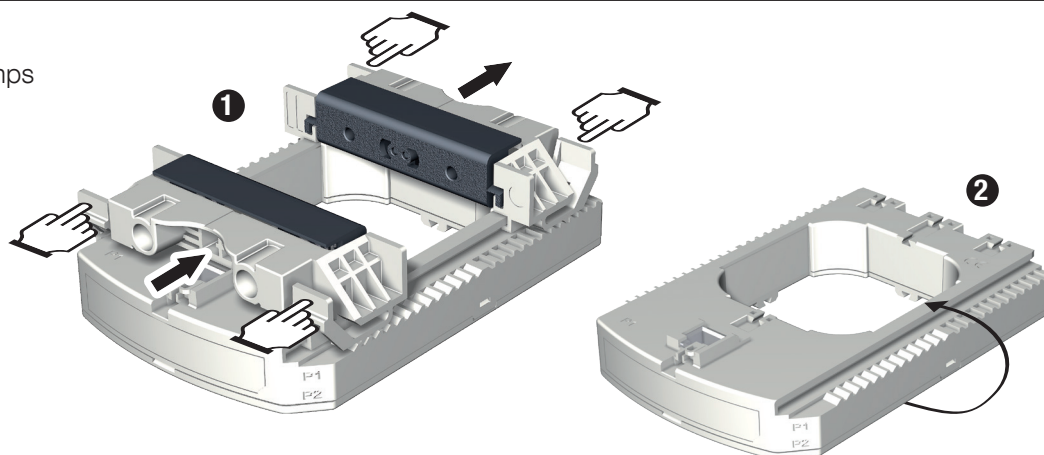

NB: Use the clamps to install the TE-90 sensors on the board.

#### 5.4.4. Installing on a cable with clamping collar
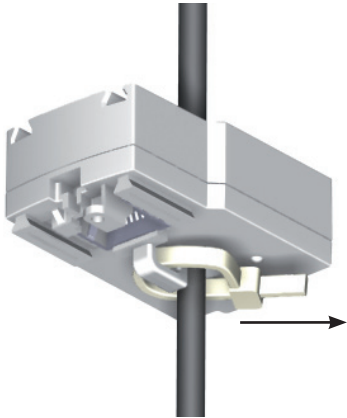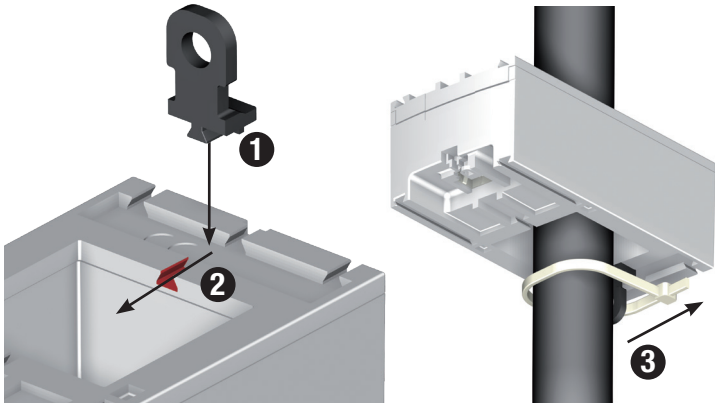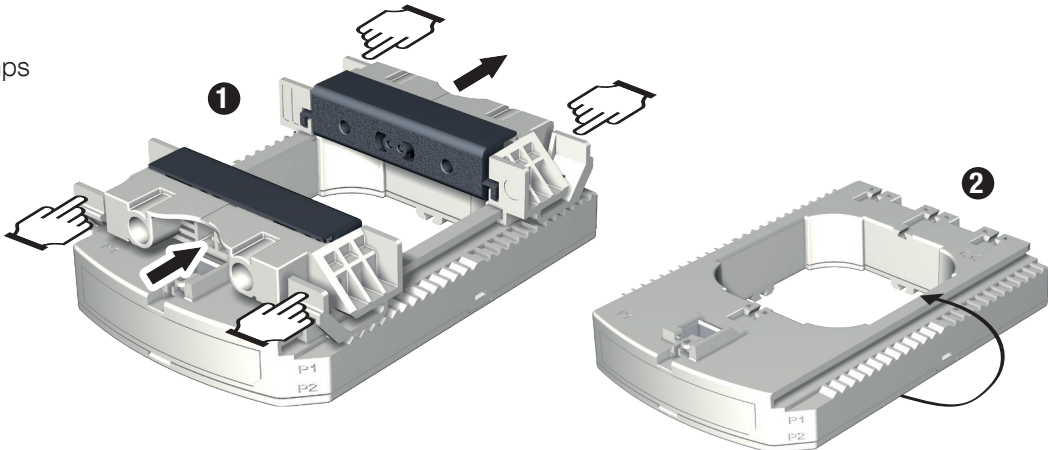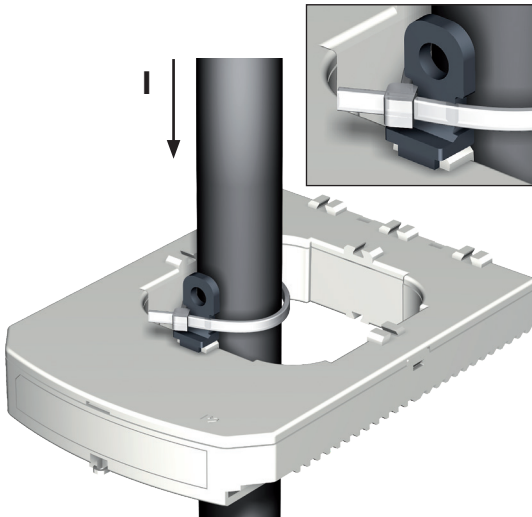
| TE-18                                                                                                      | TE-25 - > TE-55                                                                    |
|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|                           |  |
| TE-90                                                                                                      |                                                                                    |
| <p>Removing clamps</p>  |                                                                                    |
|                        |                                                                                    |


NB: Use the clamps to install the TE-90 sensors on a cable with clamping collar.




Do NOT clamp or pull out NON-INSULATED conductors carrying DANGEROUS VOLTAGE which could cause an electric shock, burn or arc flash.  
Ref. IEC 61010-2-032

## 5.4.5. Bar mounting

### TE-35 - > TE-55



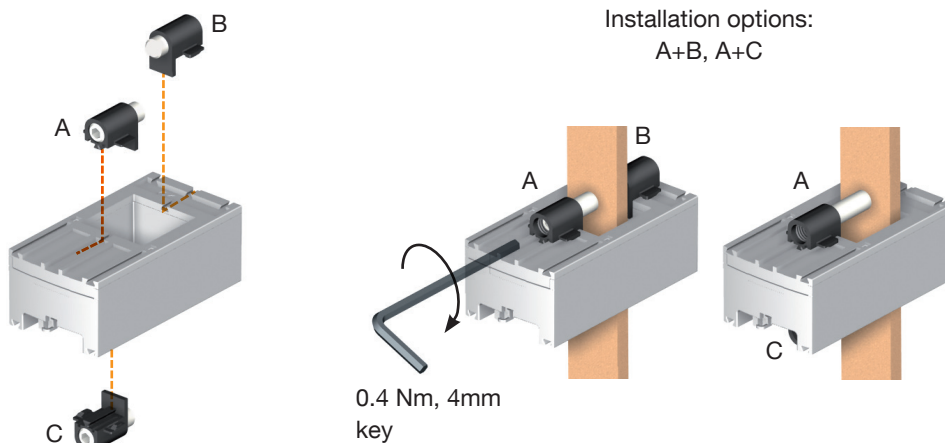


### TE-90


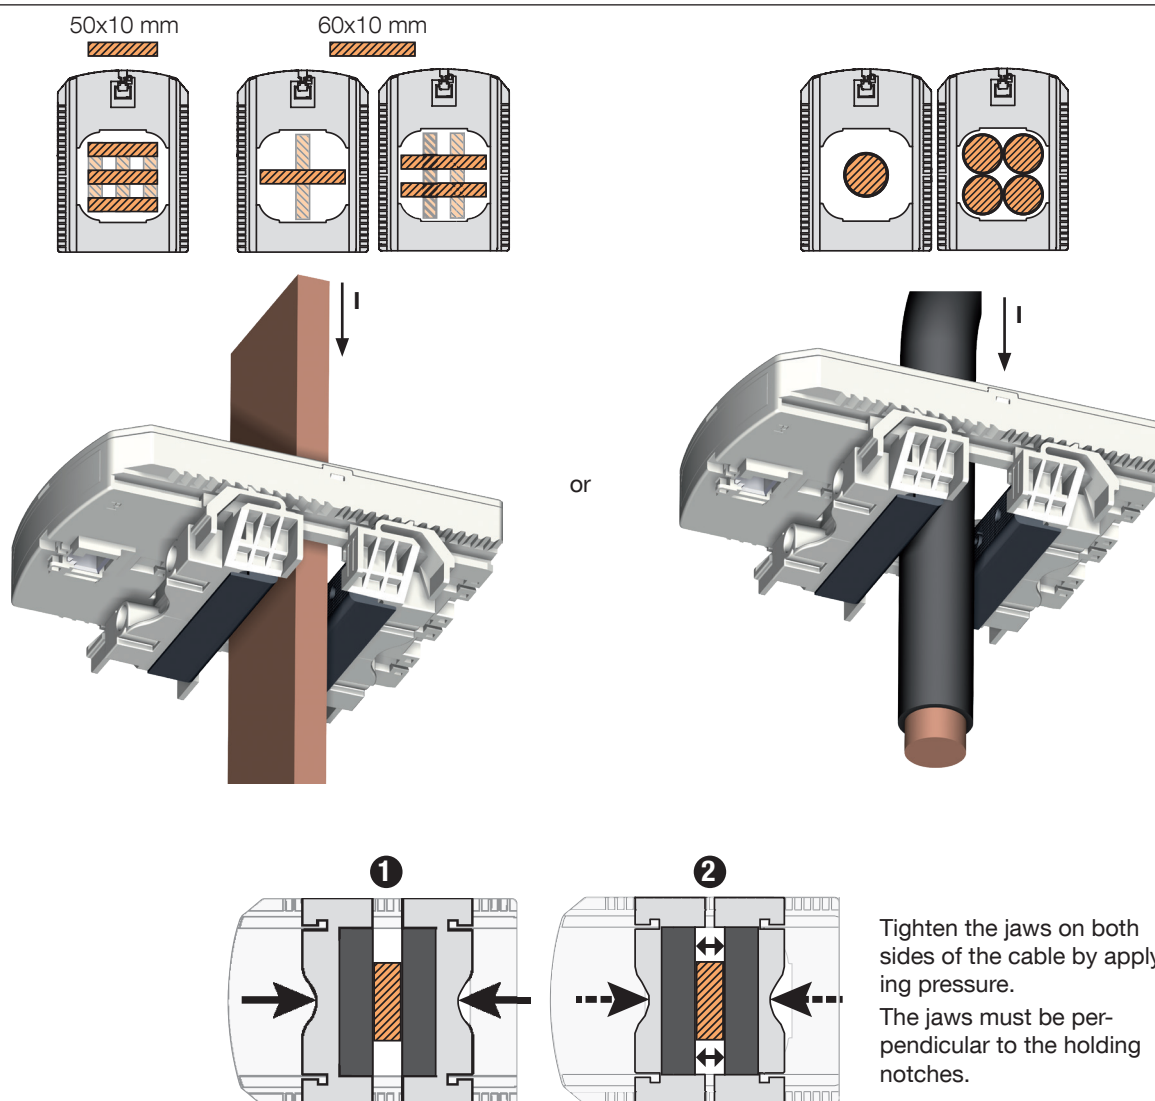


Do NOT clamp or pull out NON-INSULATED conductors carrying DANGEROUS VOLTAGE which could cause an electric shock, burn or arc flash.  
Ref. IEC 61010-2-032

5.4.6. Sensors assembly

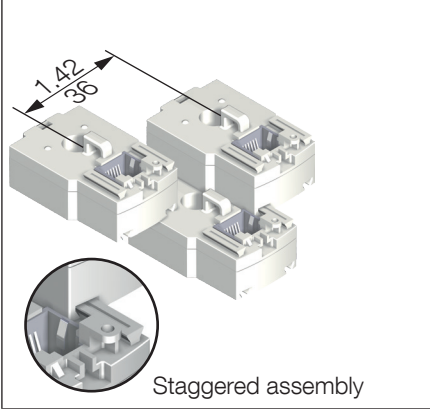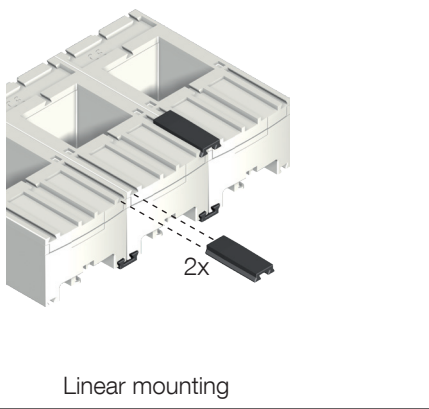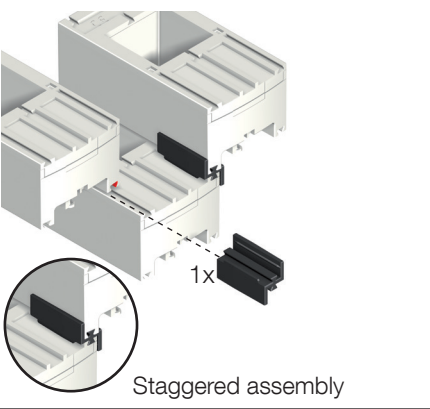
| TE-18                                                                                                       | TE-25 - > TE-55                                                                                           | TE-35 - > TE-55                                                                                               |
|-------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  <p>Staggered assembly</p> |  <p>Linear mounting</p> |  <p>Staggered assembly</p> |

Mounting accessories for sensor combination:
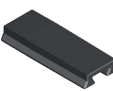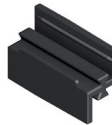
|                  |                                                                                   |                                                                                    |
|------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|                  |  |  |
| <b>Reference</b> | Linear assembly                                                                   | Staggered assembly                                                                 |
| 4829 0598        | x30                                                                               |                                                                                    |

These accessories must be ordered separately.

5.4.7. Sealing accessories for sensors

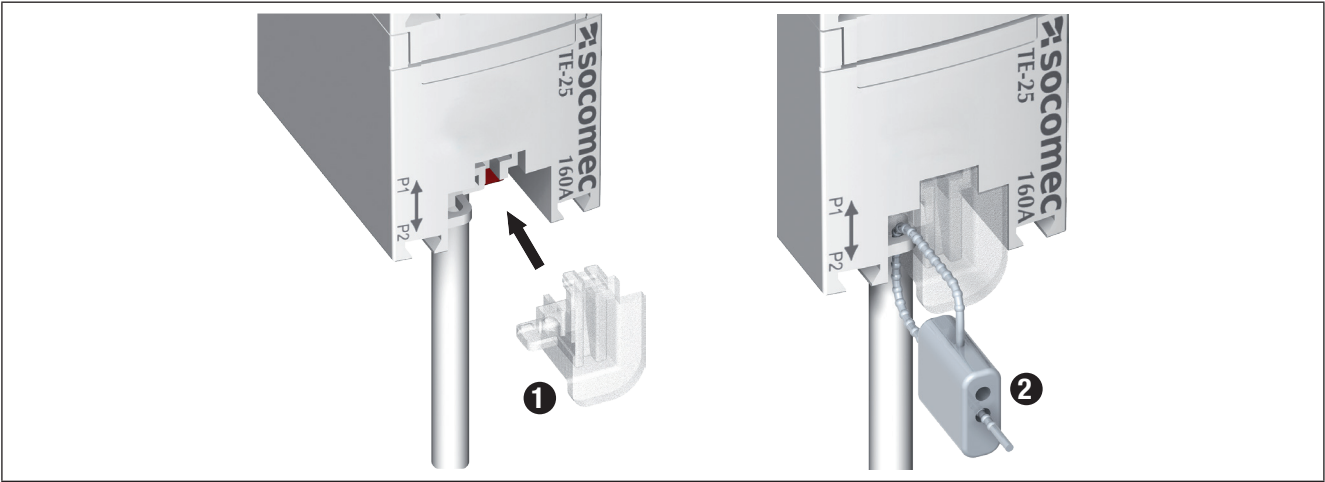


|                  |                           |
|------------------|---------------------------|
| <b>Reference</b> | Sealing case for terminal |
| 4829 0600        | x20                       |

These accessories must be ordered separately.

## 5.5. Installing TR split-core sensors

### 5.5.1. Cable mounting

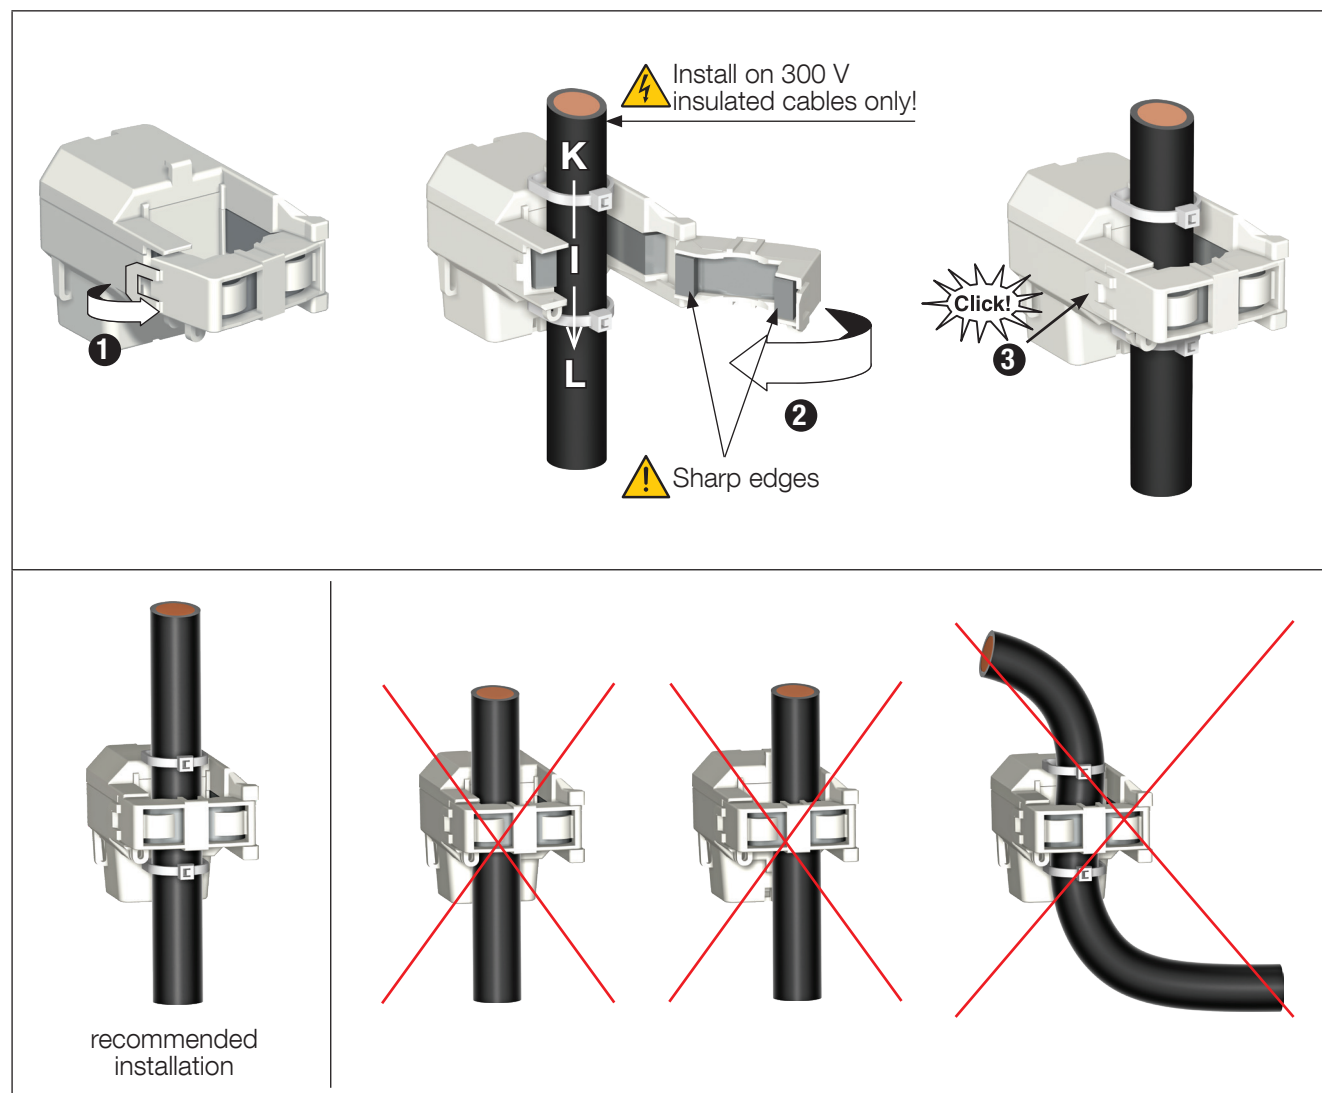



Do NOT clamp or pull out NON-INSULATED conductors carrying DANGEROUS VOLTAGE which could cause an electric shock, burn or arc flash.  
Ref. IEC 61010-2-032




Before closing the TR sensor, check that the air gap is clean (no contamination or corrosion)

## 5.6. Installing TF Flexible current sensors

### 5.6.1. Bar or cable mounting

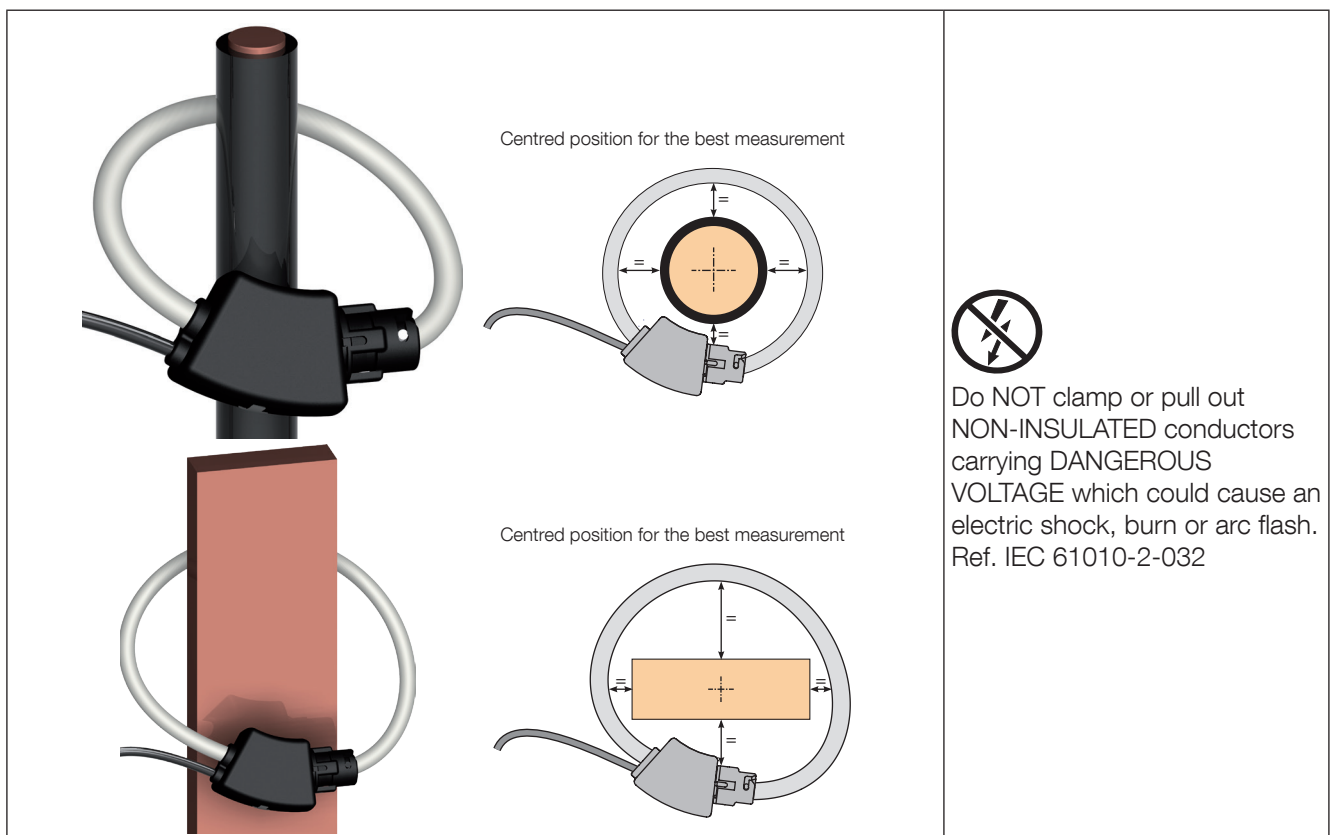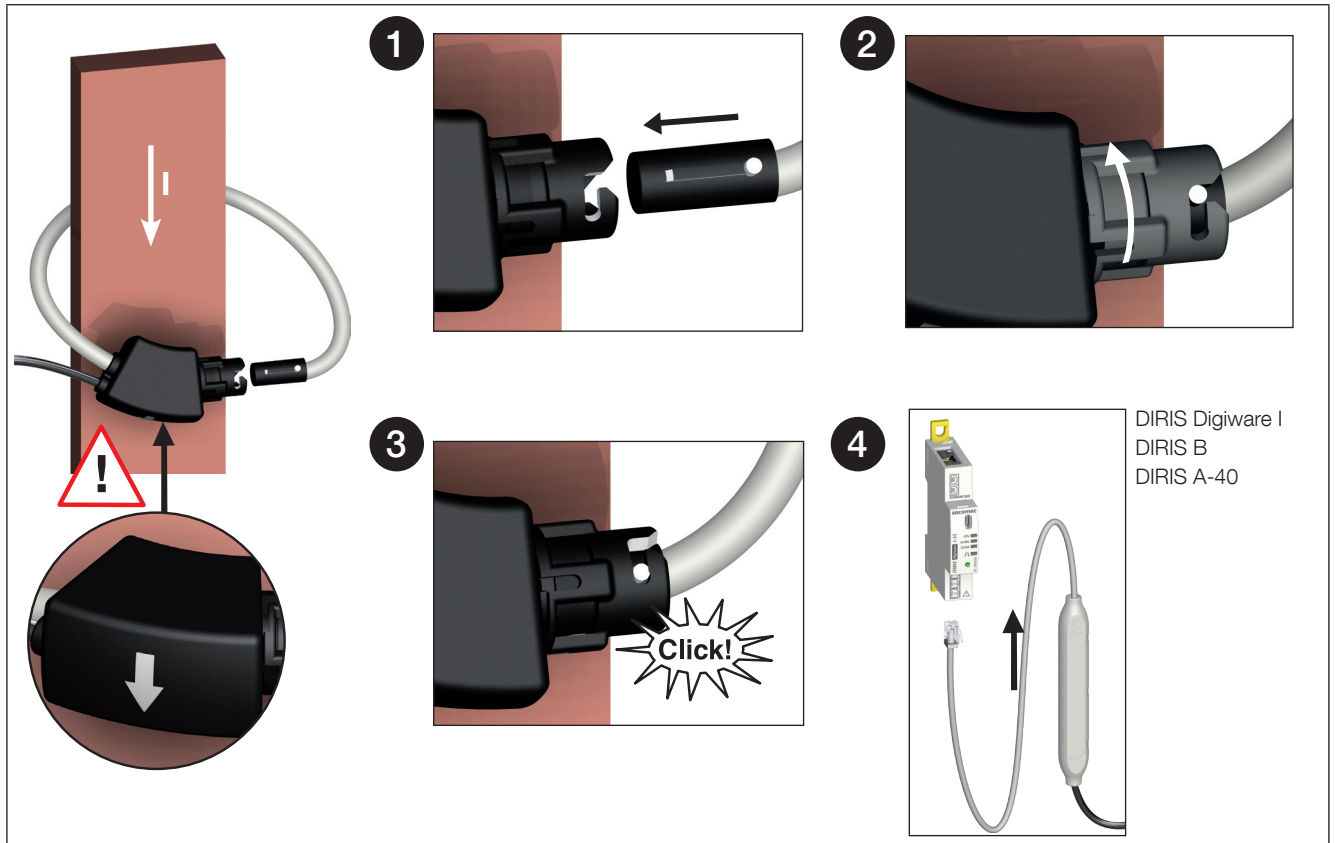


## 5.7. Installing the 5A adapter

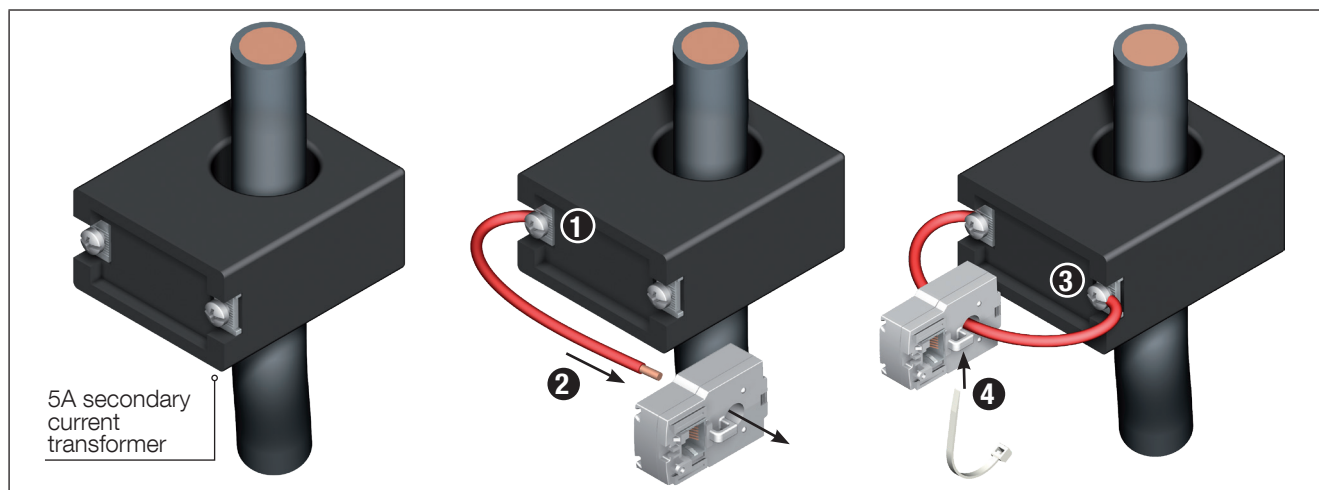

Do NOT clamp or pull out NON-INSULATED conductors carrying DANGEROUS VOLTAGE which could cause an electric shock, burn or arc flash.  
Ref. IEC 61010-2-032

## 6. CONNECTION


### 6.1. Connecting the DIRIS B

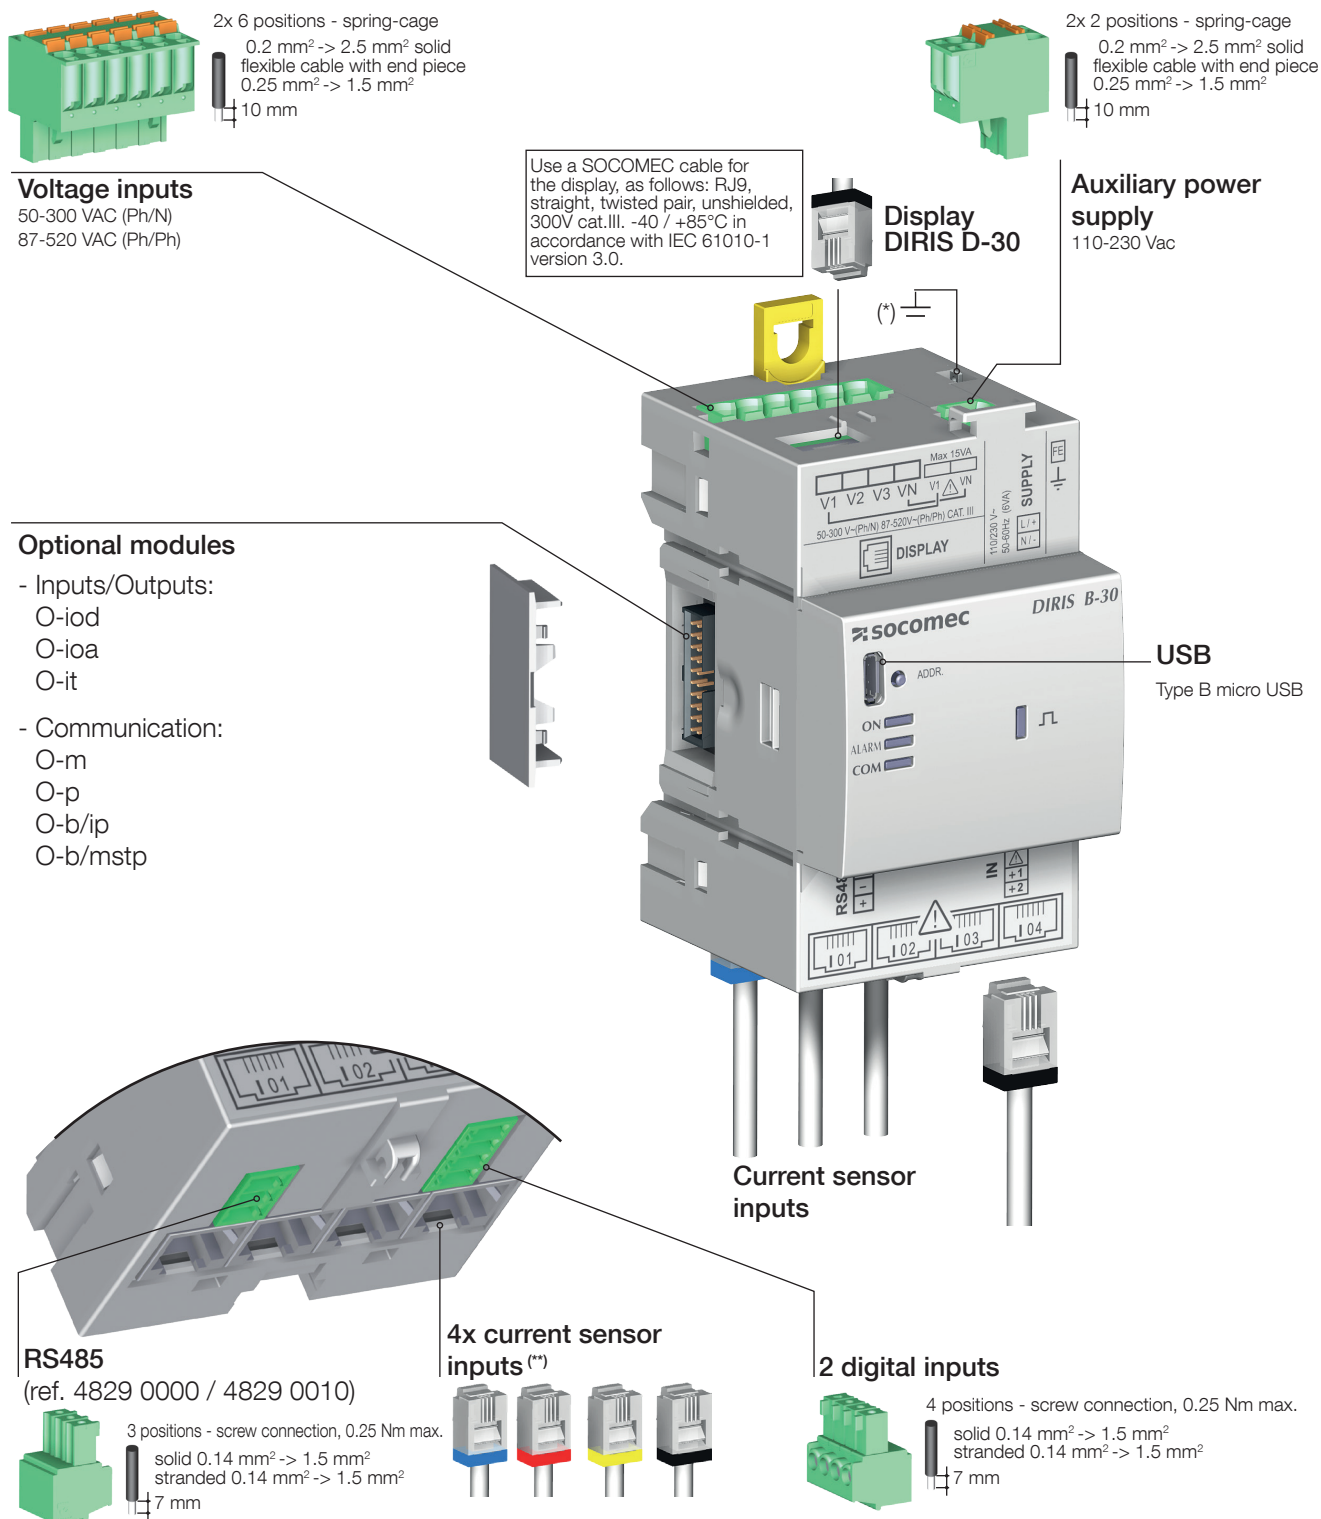

(\*) Earth must not be used in a neutral IT system


(\*\*) Always connect input I01 first.

## Current measurement

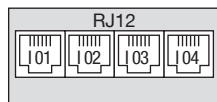


Always connect input I01 first.

## Voltage and auxiliary power supply measurement

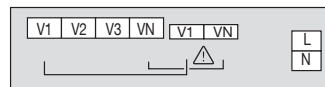


## Self-powered


Easy connection of the power supply from the measurement terminal (specific terminals)

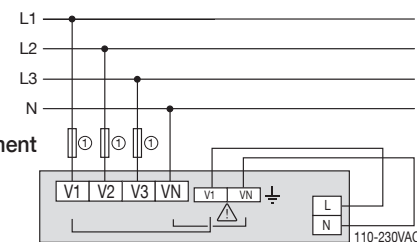


## Separated power supply

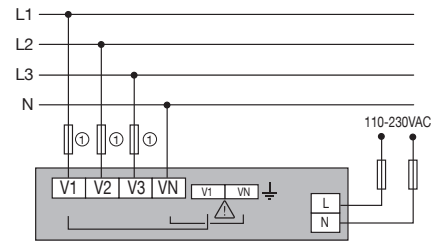


## 2 inputs supplied by the product

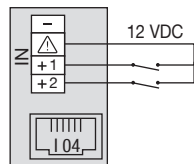

## 2 inputs with external power supply

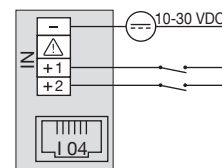


## RS485

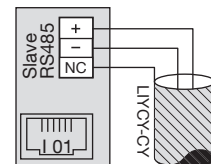

## RJ9 for DIRIS D-30 (Self-powered and data)




## Power supply of optional modules

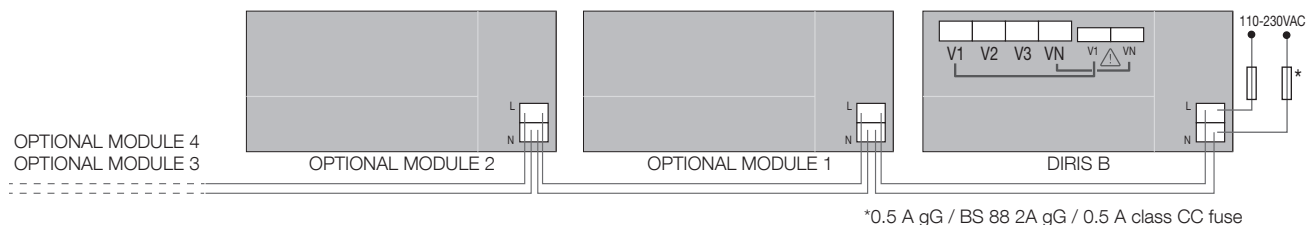


## 6.2. Connecting the optional modules

### 6.2.1. Input/output modules

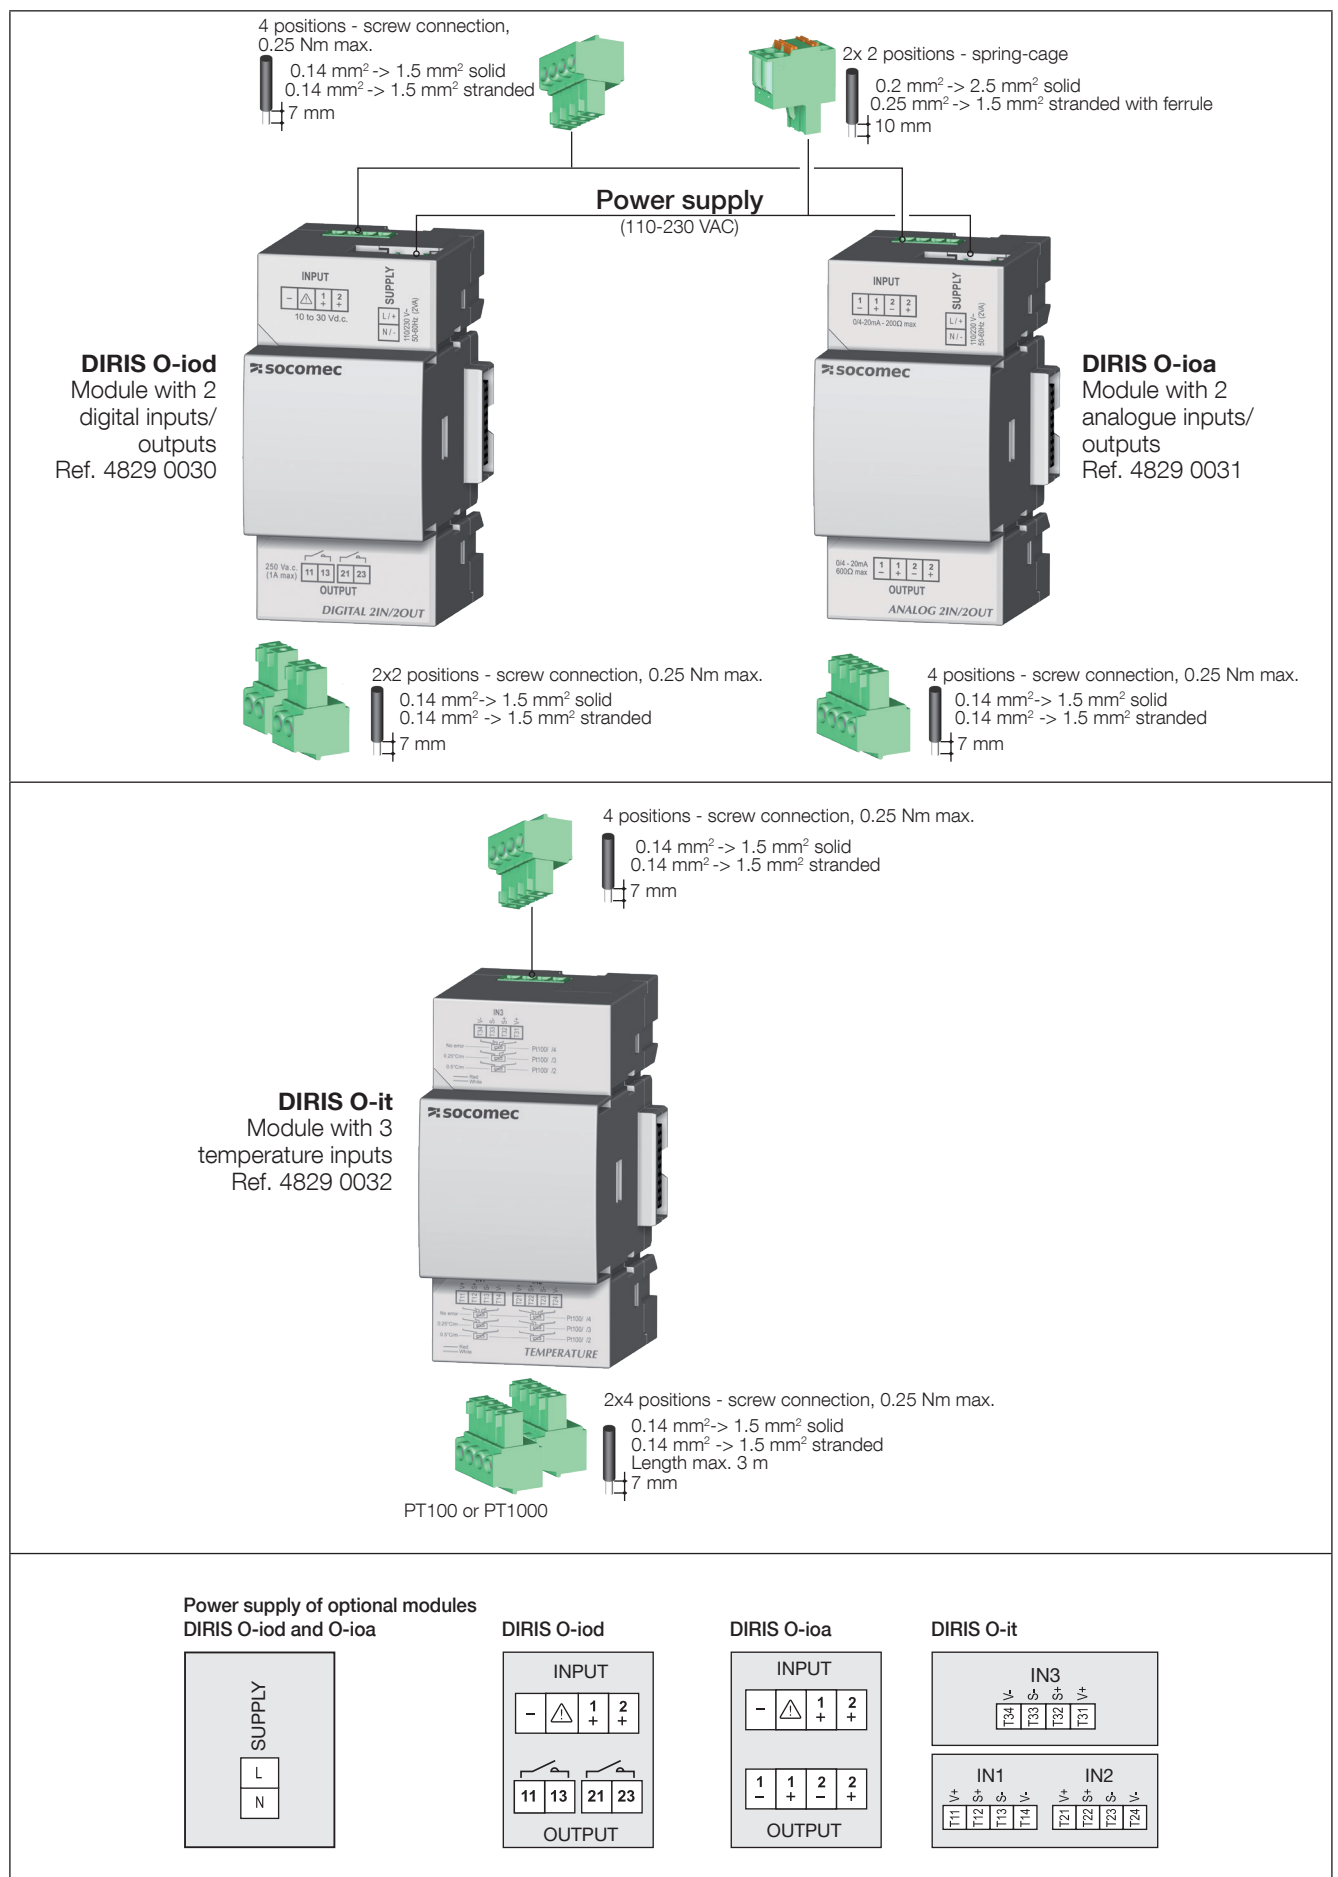


## 6.2.2. Communication modules

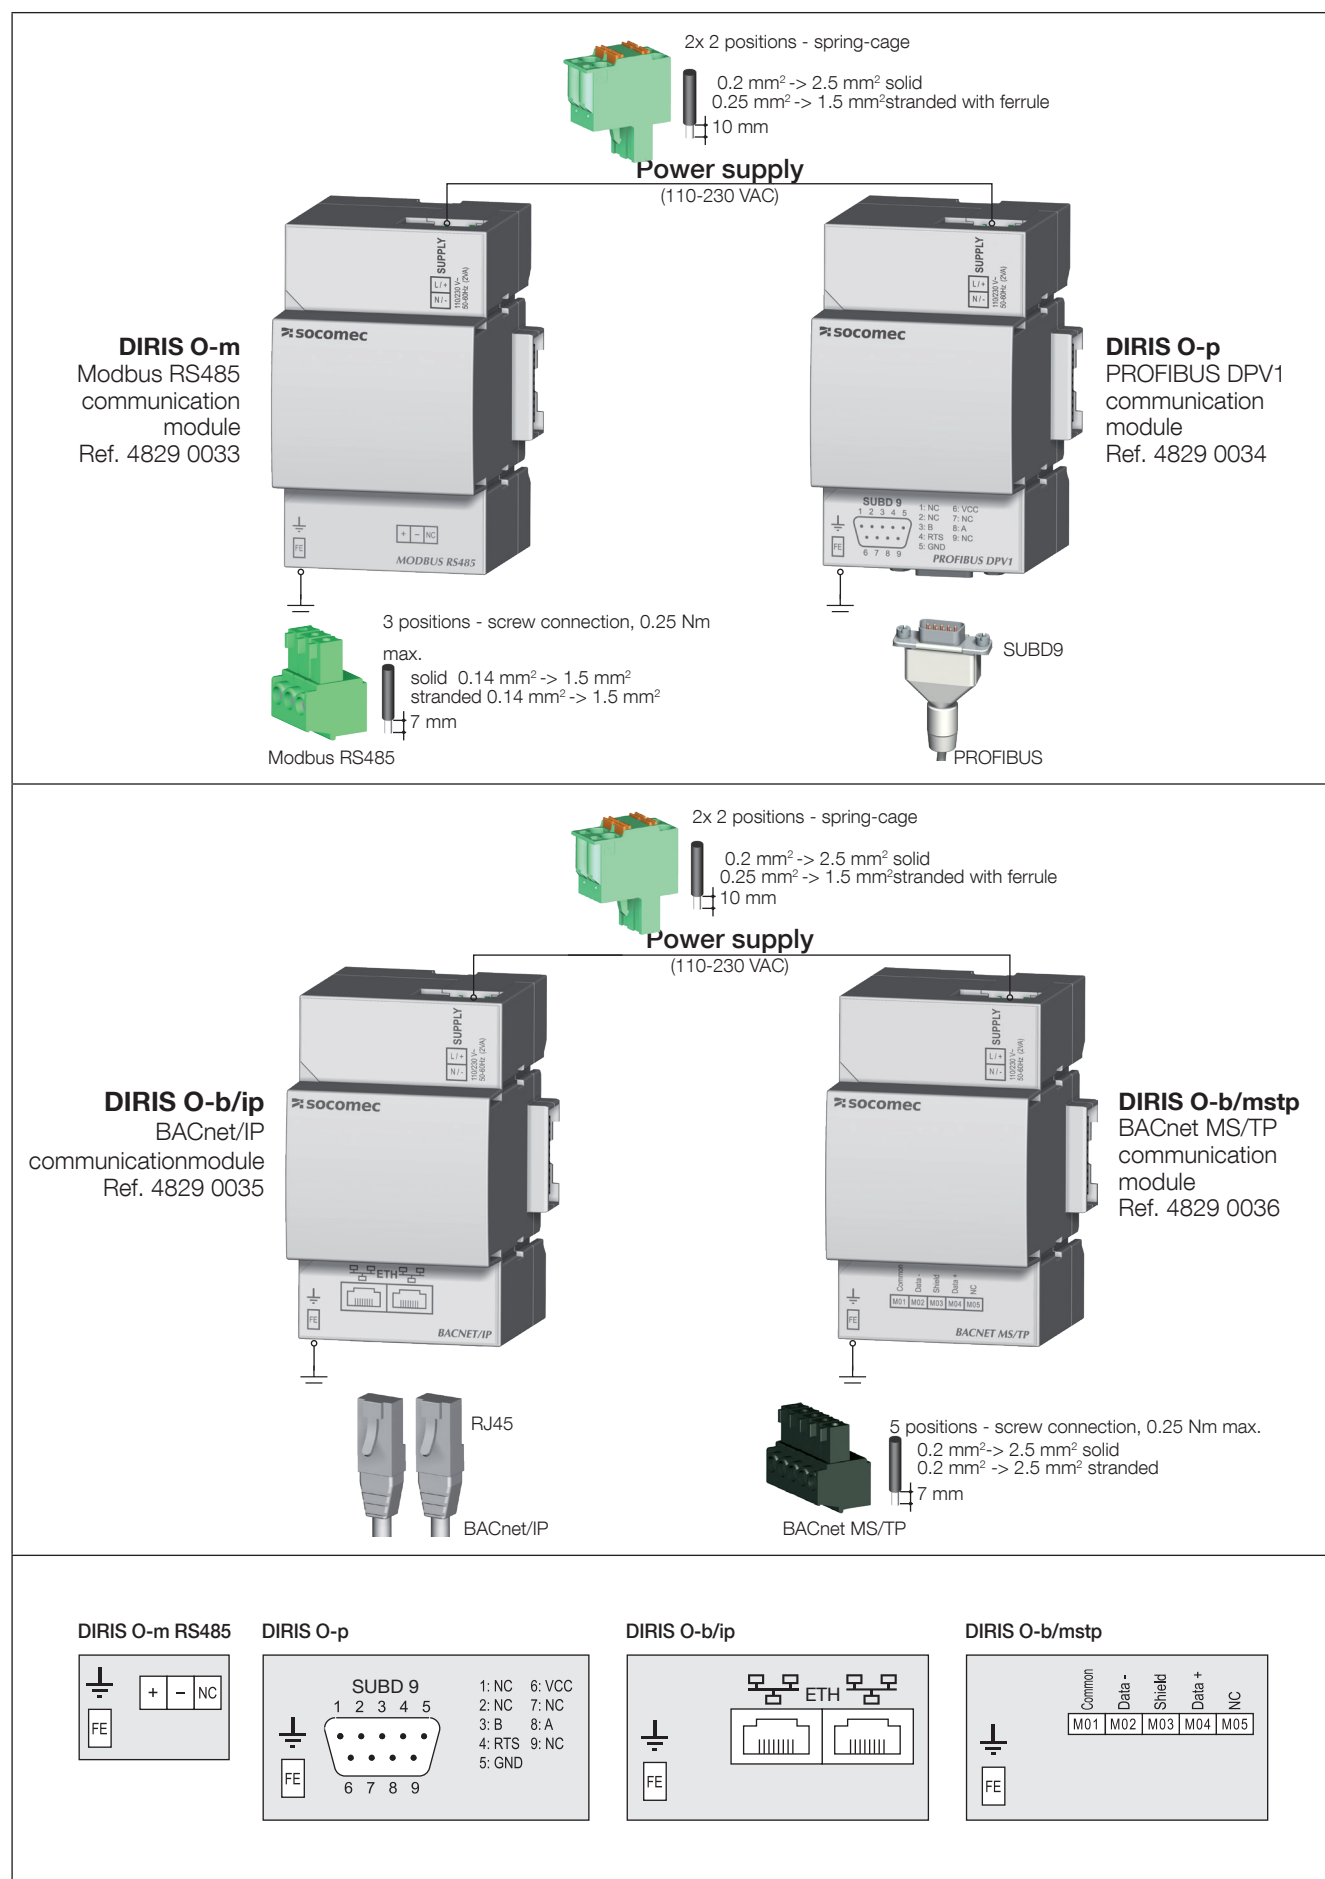

## 6.3. Connecting the current sensors


### 6.3.1. Connection concept

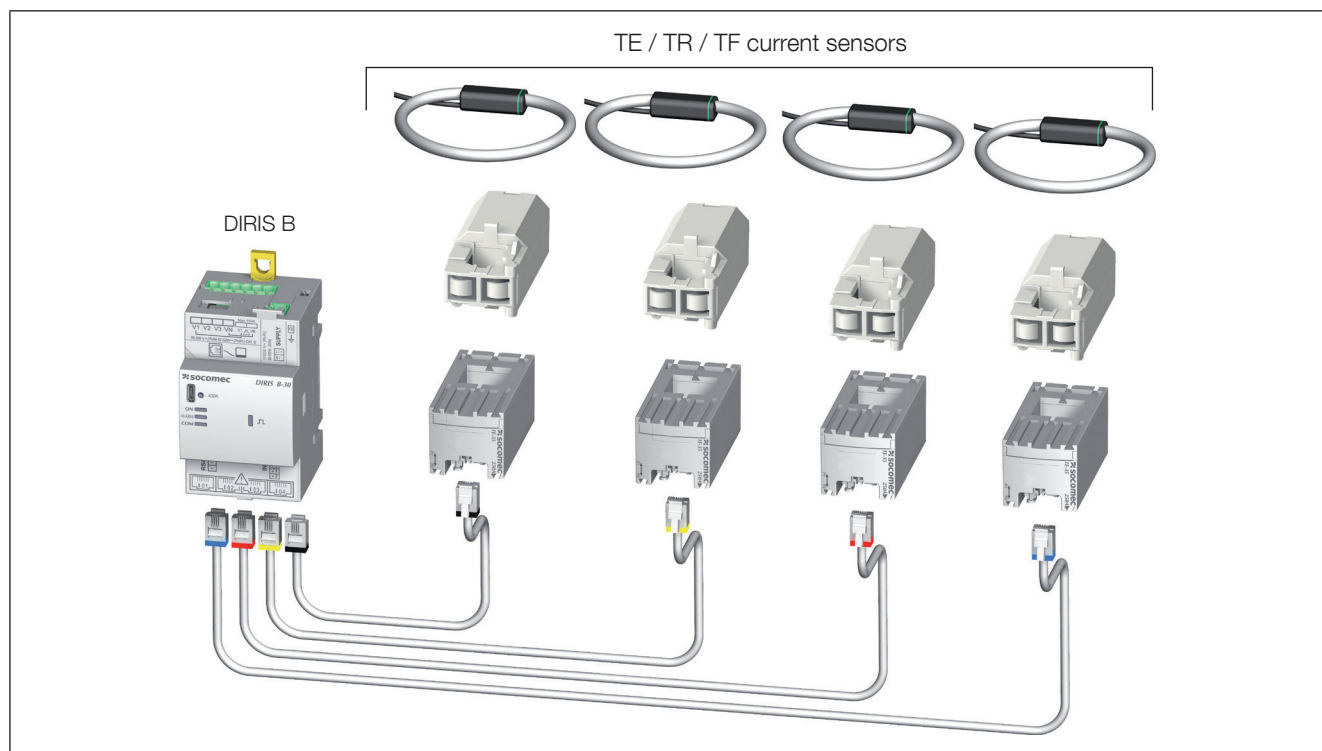

#### Recommendations:

- Use only SOCOMEC cables for the current sensors or equivalent cables of the following type: RJ12, straight, twisted pair, unshielded, 300V cat.III. -40 / +85°C in accordance with IEC 61010-1 Ed. 3.0.
- It is recommended that current sensors are installed in the same direction.

### 6.3.2. Details of the RJ12 connections for each current sensor

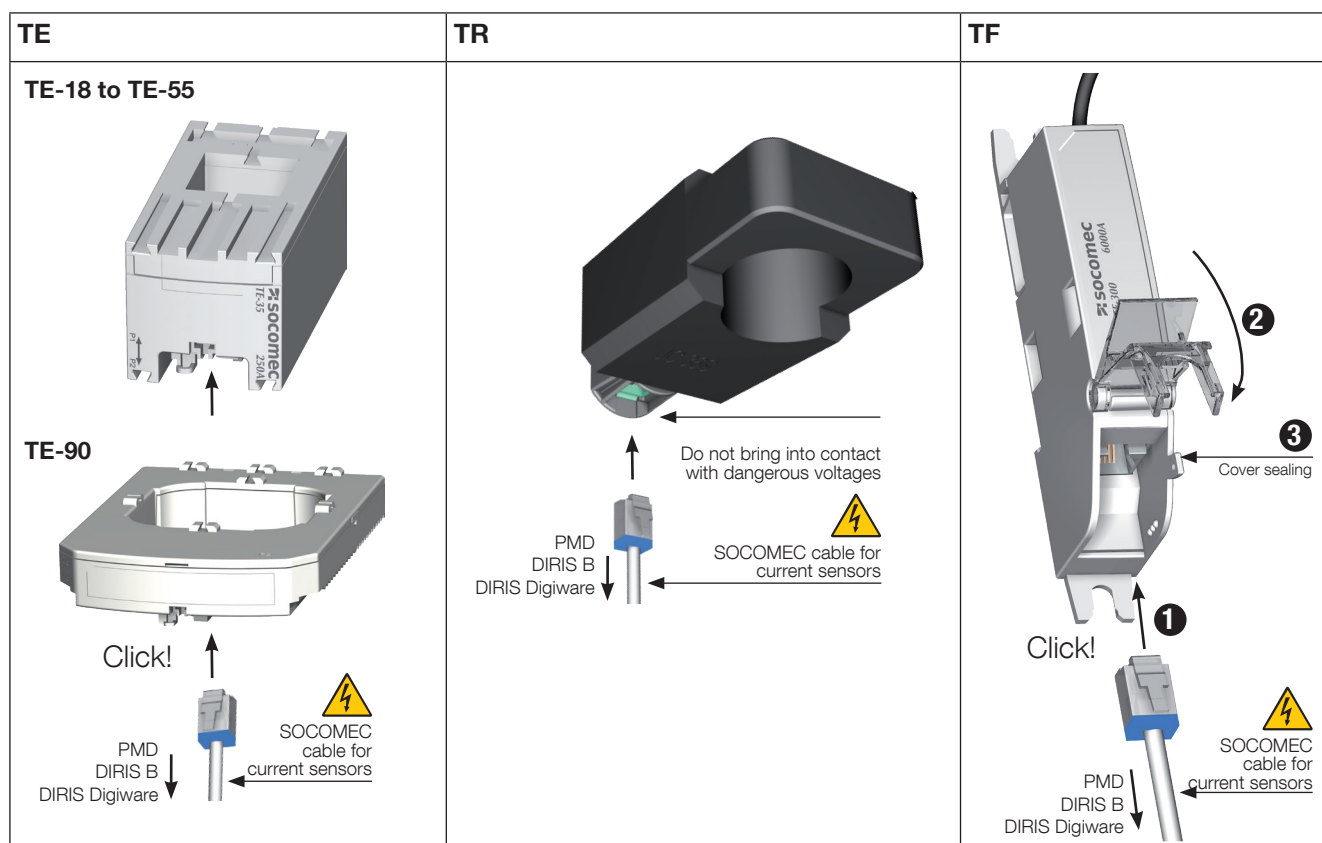

### 6.3.3. Connecting to the electrical network and loads

The DIRIS B can be used on either single-phase, two-phase or three-phase networks.

Different loads will then be measured simultaneously, allowing great flexibility in terms of where it is fitted in the installation. The loads are measured using several types of sensor (closed, split-core, flexible) selected depending on the application. The link between the DIRIS B and its associated sensors is performed using cables with RJ12 connectors. These connectors enable rapid, trouble-free installation, in complete safety, with no risk of the connector being inverted, and also offers automatic detection of the connected sensors.

In addition, the DIRIS B is able to identify the majority of load types to be measured: single-phase, three-phase with or without neutral using 1, 2, 3 or 4 sensors for balanced or unbalanced loads. Several loads can be measured simultaneously.

The overall accuracy of the DIRIS B + sensors measurement chain is guaranteed. To guarantee this accuracy, SOCOMEC cables must be used for the current sensors.

#### 6.3.3.1. Configurable loads based on the network type


The table below summarises the loads that it is possible to configure depending on the type of network at the installation.

| Network type | Configurable load                                                                  |
|--------------|------------------------------------------------------------------------------------|
| <b>1P+N</b>  | 1P+N – 1CT                                                                         |
| <b>2P</b>    | 2P – 1CT                                                                           |
| <b>2P+N</b>  | 2P+N – 2CT / 2P – 1CT / 1P+N – 1CT                                                 |
| <b>3P*</b>   | 3P – 3CT / 3P – 2CT / 3P – 1CT                                                     |
| <b>3P+N</b>  | 3P+N – 4CT / 3P+N – 3CT / 3P+N – 1CT / 3P – 3CT / 3P – 2CT / 3P – 1CT / 1P+N – 1CT |


(\*) Note: Single-phase loads cannot exist on a 3P network.

#### 6.3.3.2. Description of the main network and load combinations

##### Legend:

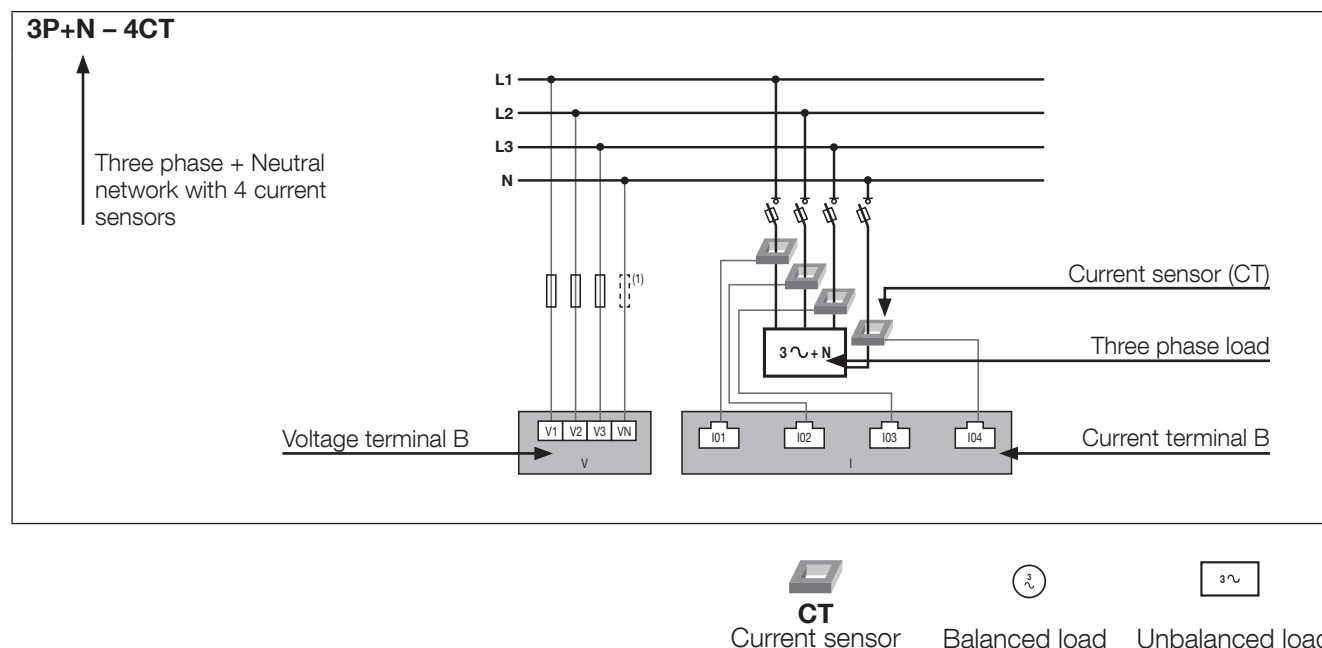


Each current input is individual; see below for some connection examples:

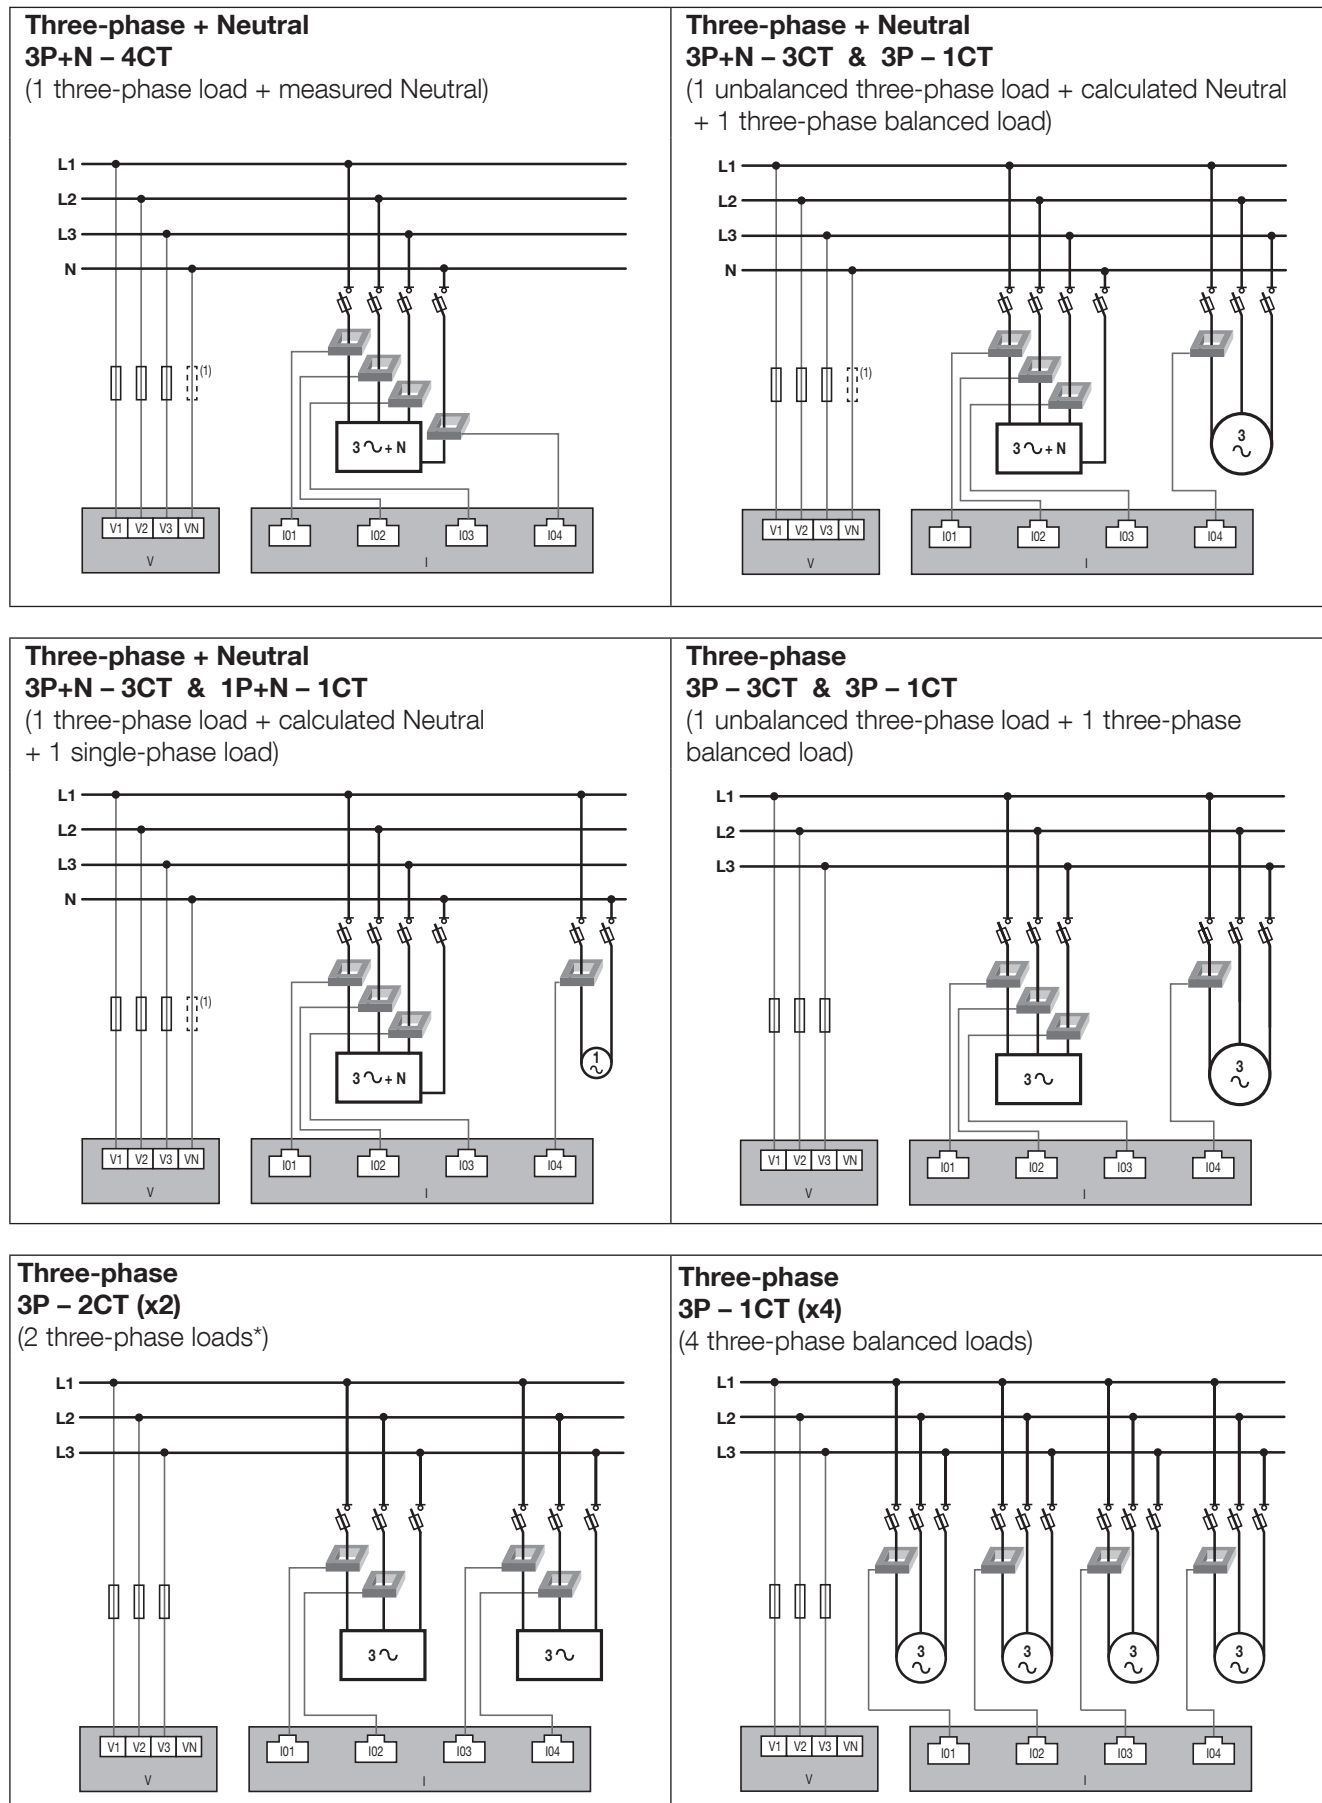

Fuse: 0.5 A gG / BS 88 2A gG / 0.5 A class CC


### Two-phase + Neutral 2P+N – 2CT (x2)

(2 two-phase loads)

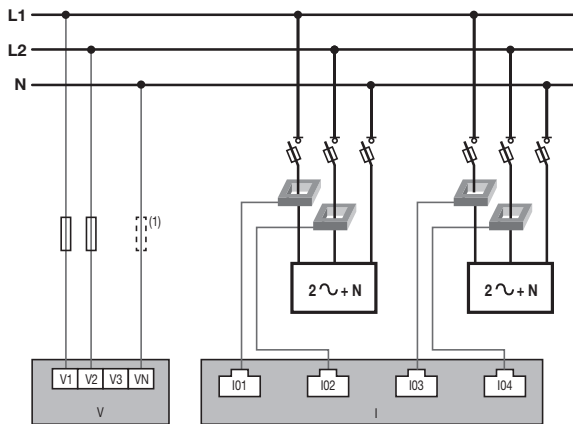


### Two-phase 2P – 1CT (x4)

(4 two-phase loads)

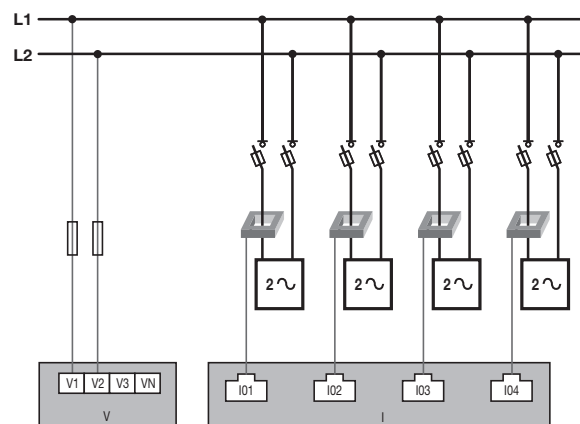

### Single-phase 1P+N – 1CT (x4)

(4 single-phase loads)

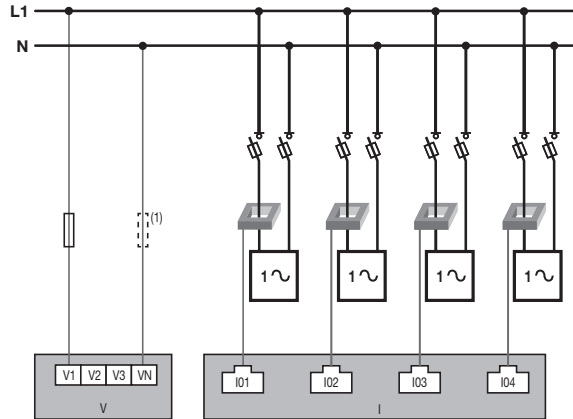

0.5 A gG / BS 88 2A gG / 0.5 A class CC fuse  
For self-supply modules, a fuse must be added to the neutral.

 Fuse: 0.5 A gG / BS 88 2A gG / 0.5 A class CC

### Notes relating to connections:

The **Easy Config** software can also be used to select numerous other configuration variants for the types of loads and associated network voltages.

**3P – 2CT:** this connection reduces the accuracy of the phases, the current for which is worked out by vector calculation, by 0.5%.

**3P – 1CT:** this connection requires a three-phase network that is perfectly balanced.

### 6.3.4. Connection of the functional earth


It is recommended that the functional earth is connected to guarantee optimum measuring accuracy and better emissivity/immunity for the electromagnetic compatibility (class B in conducted emission). Earth must not be used in a neutral IT system.

## 7. STATUS AND AUTO-ADDRESSING LEDS

### 7.1. Status LEDs

These LEDs can be used to find out the status of the product at any time.

The addressing button is used to automatically assign a Modbus address from the gateway.

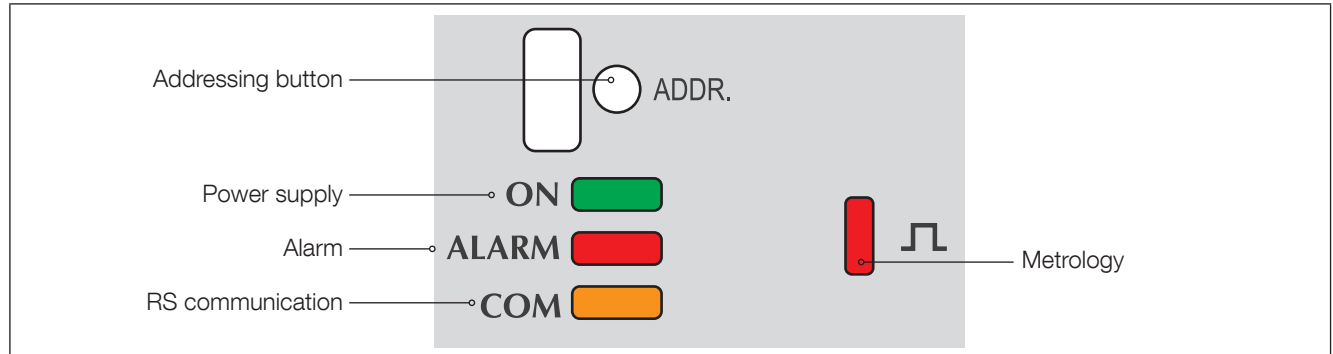

| LED state     | Fixed                                                                                                           | Blinking                                                                                   | Pulse                                                       |
|---------------|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| <b>ON</b>     | In operation                                                                                                    | 10 seconds - on request via a Modbus control to identify the device (remote screen, etc.)  | 1 second to start-up                                        |
| <b>/ALARM</b> | An alarm (logical/analogue, etc.) is active (does not take priority if there is a setup alarm at the same time) | At least one setup alarm is active (current sensor disconnected, V/I not compatible, etc.) | 1 second to start-up                                        |
| <b>COM</b>    | Addressing problem.                                                                                             | Address OK                                                                                 | 1 second to start-up and when a frame received is processed |
|               | -                                                                                                               | -                                                                                          | Corresponds to the metrological pulse weight                |

### 7.2. Auto-addressing

Auto-addressing mode is used to automatically allocate addresses to products connected to the gateway. This mode is only compatible with DIRIS B and Digiware type PMDs. The addresses will be allocated manually on the other PMD (DIRIS A) and meters (COUNTIS).

Two modes are available:


- Mode 1 - Auto-detection and automatic addressing
- Mode 2 - Auto-detection and address selection

Mode 1 is without external equipment (see description below).

Mode 2 is carried out from a PC equipped with Easy Config. This mode is described in the Easy Config manual.

## Description of mode 1

Flashing LED  LED on continuously 

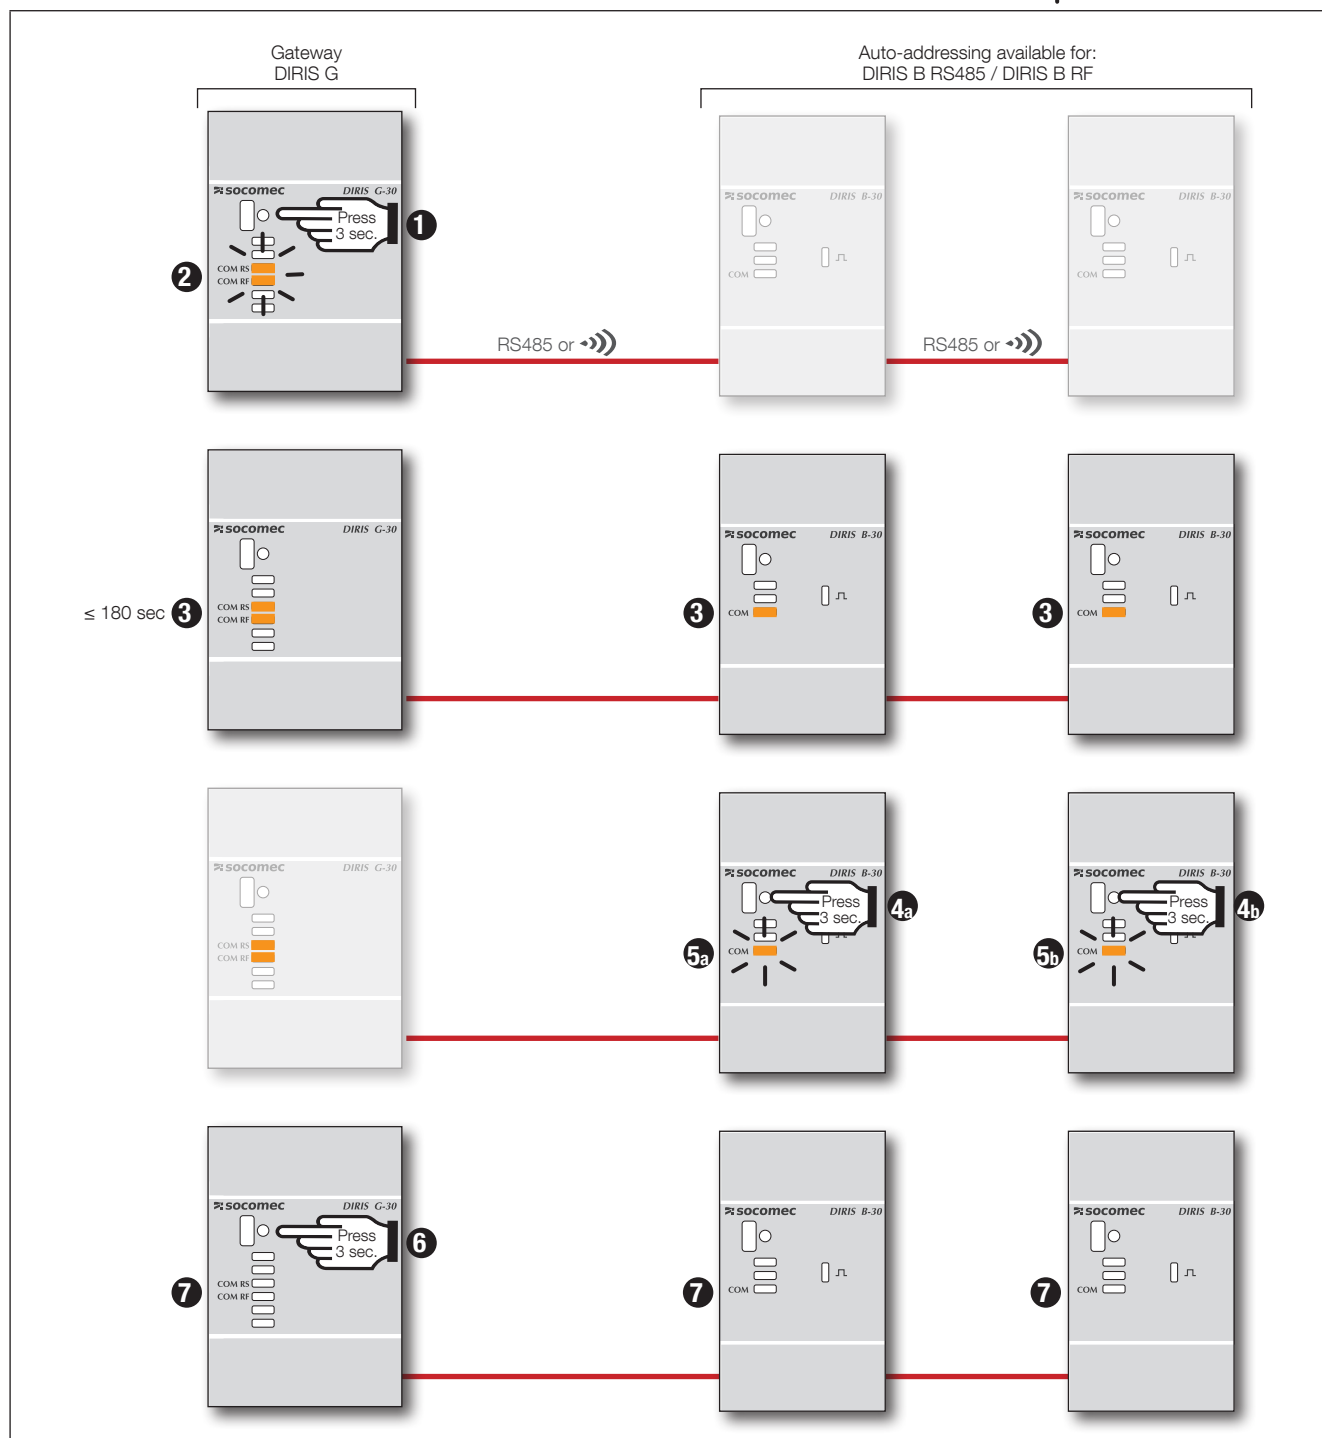


Note: During the auto-addressing process, the RS485 line is reserved for allocating addresses and no other exchange of data is possible at this time

## 8. COMMUNICATION

### 8.1. General information

Depending on the reference, the DIRIS B communicates via RS485 using the Modbus protocol or via a radio (RF) link. With a RS485 link, the DIRIS B-10 (ref.4829 0010) and DIRIS B-30 (ref.4829 0000) can be connected directly to a PC, to a PLC or to the DIRIS G-30, G-40, G-50 and G-60 gateways (see corresponding manual for more details) to use the data. With an RF link, the DIRIS B-30 RF (ref.4829 0002) communicates with the DIRIS G-40 and G-60 gateways in RS485/RF version (reference: 4829 0301 and 4829 0303).

Example of an installation integrating DIRIS B-30 RF, DIRIS B RS485 and other products with a DIRIS G-40 or G-60 gateway:

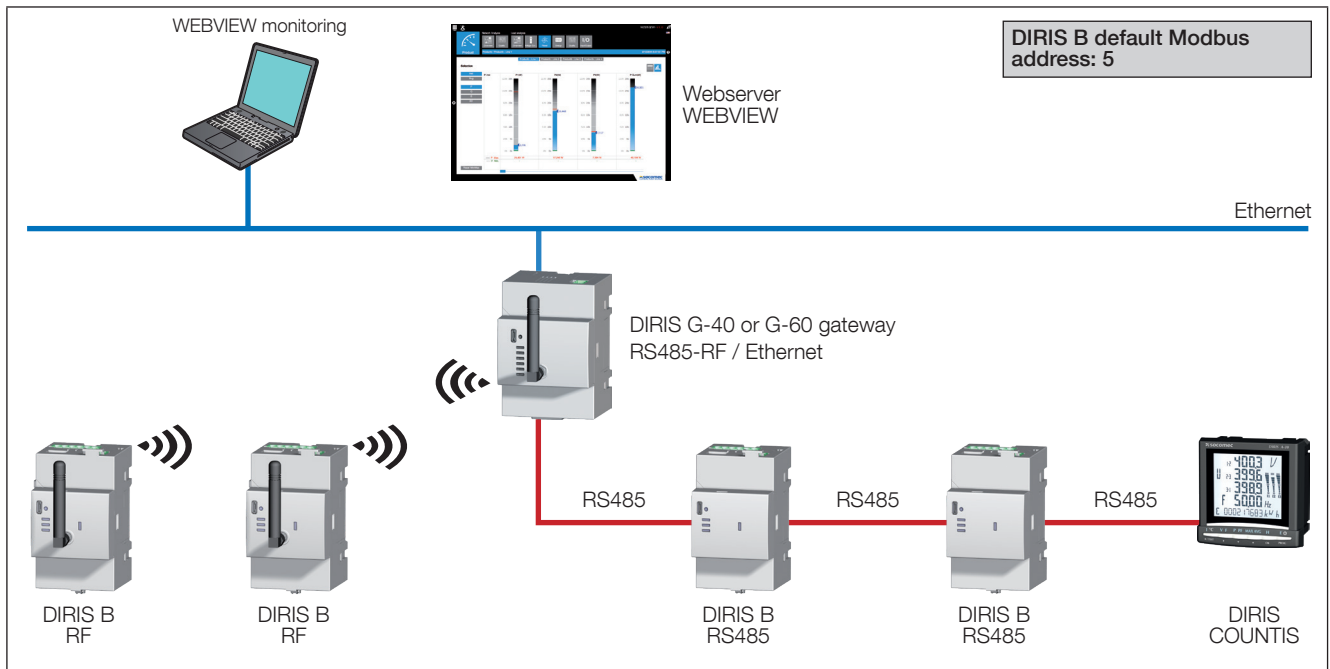


### 8.2. RS485 rules

RS485 communication is available on the DIRIS B-10 (ref. 4829 0010) and DIRIS B-30 RF (ref. 4829 0000). It is achieved via an RS485 serial link (2- or 3-wire) using the Modbus RTU protocol for using products from a PC, PLC or gateway.

The Modbus protocol requires a dialogue with a master/slave structure. The mode of communication is the RTU (Remote Terminal Unit). In a standard configuration, an RS485 link enables the interconnection of 32 products to a PC, a PLC or the gateway over a distance of 1200 metres.

Connection between the DIRIS B RS485 and the DIRIS G gateway:

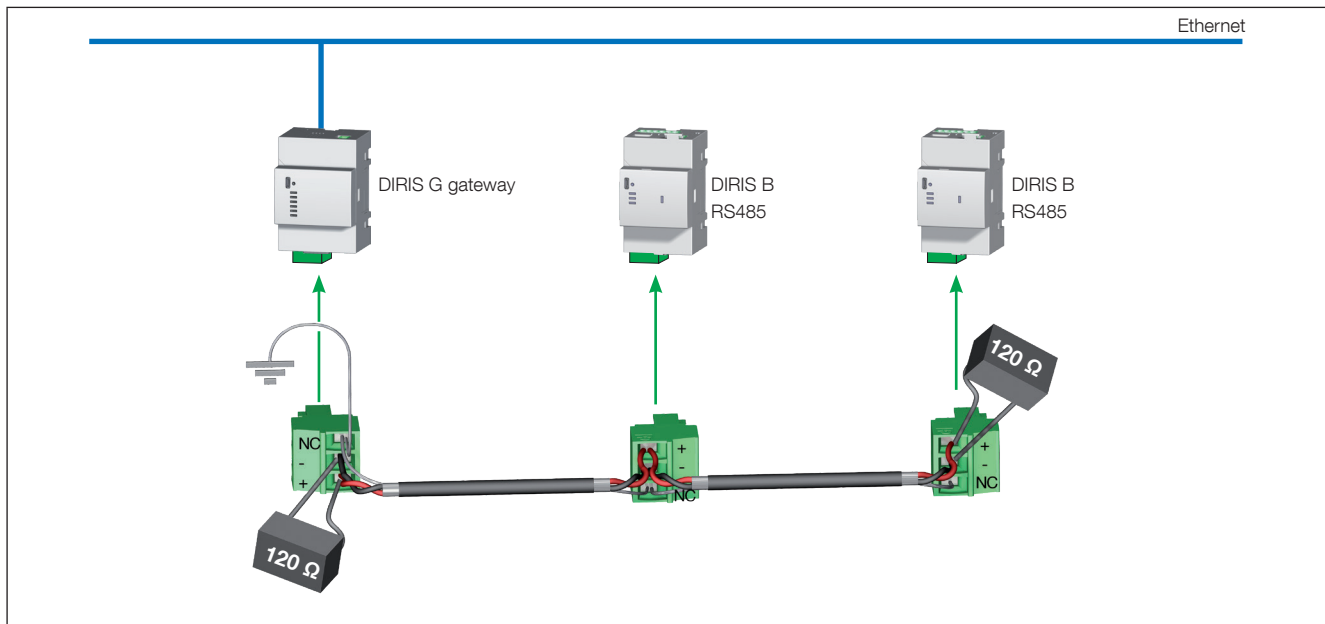

A LIYCY type connecting cable with a shielded twisted pair is required. In a disturbed environment or large network (in terms of length or number of products) the use of a type LIYCY-CY twisted pair with general shielding is recommended.

A 120-ohm resistor must be placed at both ends of the link.

A 120-ohm resistor is supplied with each DIRIS B and with each DIRIS G gateway.

### 8.3. Radio-frequency (RF) rules


Wireless radio-frequency (RF) communication is available on DIRIS B-30, ref. 4829 0002. The frames are transferred via a radio frequency in the bandwidth frequency 868MHz. The DIRIS B-30 which use wireless communication will be combined with the DIRIS G-40 and G-60 gateways in the RS485/RF version and will be seen as Modbus RTU slaves by these gateways.

These gateways collect data from the wireless DIRIS B-30 and also from the DIRIS B or other products (Countis, Diris...) with a cabled RS485 link. This data can then be transferred to a PC via an Ethernet link with Modbus TCP protocol.

The WEBVIEW web server embedded in the gateway offers advanced data Monitoring and Reporting functions (refer to the corresponding manual for more details).

The DIRIS B-30 equipped with a wireless communication link are particularly useful for using loads located in isolated, remote areas, without the need to set up a cabled communication link.

Example of an installation integrating DIRIS B-30 RF with a DIRIS G-40 or G-60 gateway:

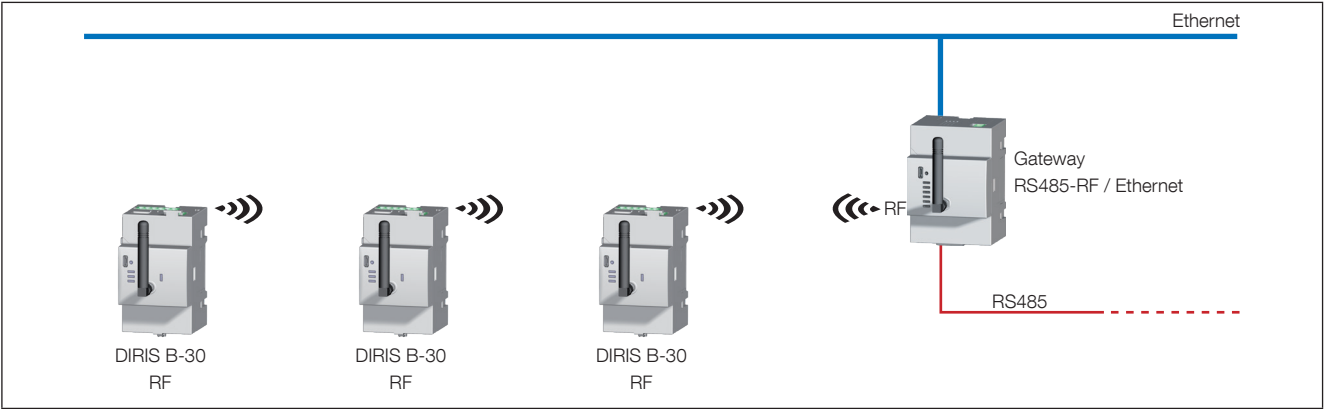

### 8.3.1. Installation

Only use antennae recommended by SOCOMEC.

The DIRIS B-30 RF communicates over a distance of 300 metres in free-field conditions.

The permitted occupancy rate depends on the frequency used. The frequency is selected using the Easy Config configuration tool.

The table below describes the permitted occupancy rate based on the selected frequency and the resulting maximum number of DIRIS B-30 RF which can be connected.

| Channel no. | Frequency (MHz) | Permitted occupancy rate | Maximum number of DIRIS B-30 RF connected |
|-------------|-----------------|--------------------------|-------------------------------------------|
| 420         | 868.1000        | 1%                       | 16                                        |
| 436         | 868.3000        | 1%                       | 16                                        |
| 452         | 868.5000        | 1%                       | 16                                        |
| 472         | 868.7500        | 0.10%                    | 3                                         |
| 488         | 868.9500        | 0.10%                    | 3                                         |
| 504         | 869.1500        | 0.10%                    | 3                                         |
| 534*        | 869.5250        | 10%                      | 32                                        |
| 539         | 869.5875        | 10%                      | 32                                        |

According to EN300 220: radiated radio and REC7003 emissions: use of the RF 868 MHz bandwidth.

Note: in order to observe a frequency spacing of 200 kHz, channels 534 and 539 cannot be used at the same time.

\*Default channel.

### 8.3.2. EC Declaration of Conformity

The EC Declaration of Conformity for the DIRIS B is available here:

[www.socomec.com/en/diris-b](http://www.socomec.com/en/diris-b)



## 8.4. Communication tables

The communication tables and associated explanations can be found on the documentations page for the DIRIS B on the SOCOMEC website at the following address:

[www.socomec.com/en/diris-b](http://www.socomec.com/en/diris-b)

The communication tables are sent via Modbus.



## 9. CONFIGURATION

Configuration can be carried out using the Easy Config configuration software or directly from the remote display. The Easy Config software is used to configure the DIRIS B directly via RS485 or USB. Easy Config must be installed before using the USB connection.


If the DIRIS B is combined with the DIRIS G-30, G-40, G-50 or G-60 gateway, it can be configured through this via Ethernet or USB.

To set the parameters from the remote display, refer to the manual for the display.


### 9.1. Configuration using Easy Config

#### 9.1.1. Connection modes


##### Configuration using Easy Config directly (USB)

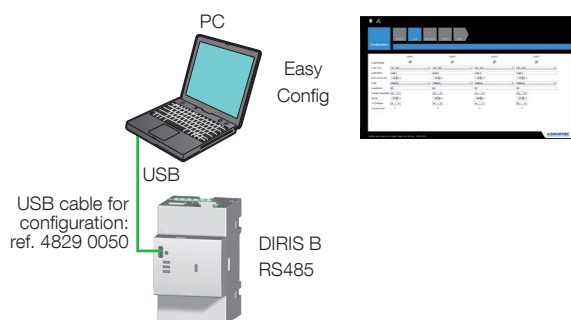


##### Configuration using Easy Config via a DIRIS G gateway (USB)

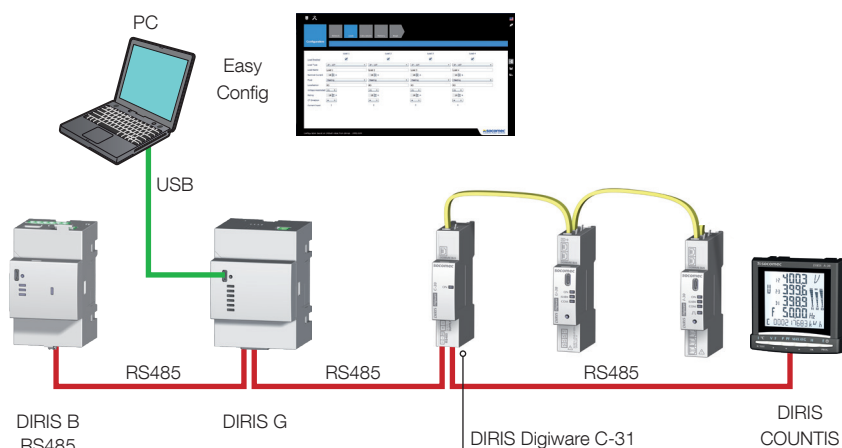


##### Configuration using Easy Config via a DIRIS G monitor (USB)

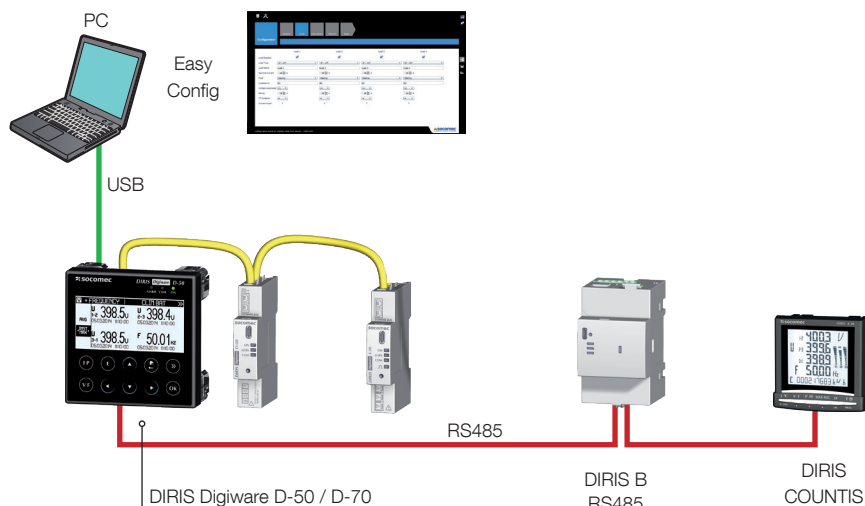

## Configuration using Easy Config via a DIRIS G gateway (Ethernet)

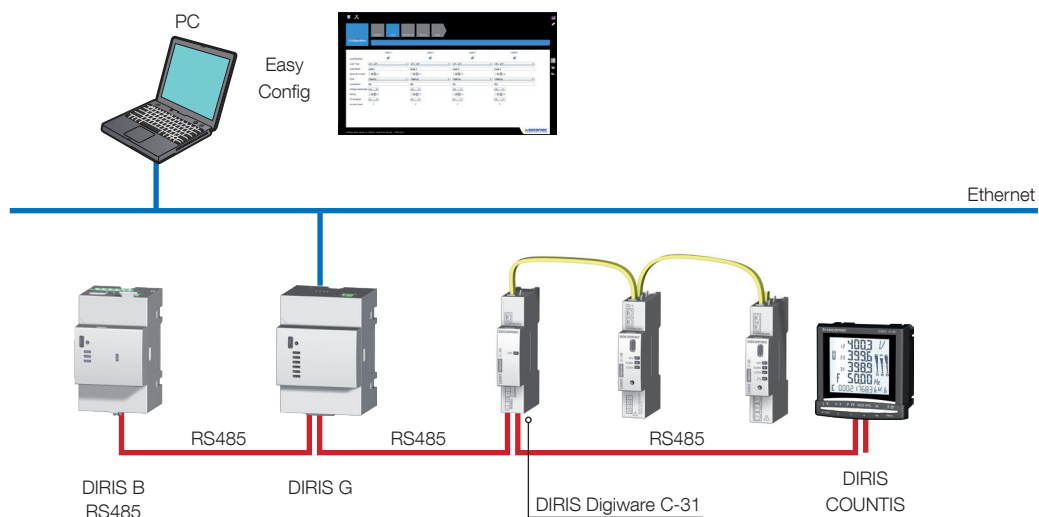

## Configuration using Easy Config via a DIRIS D-50 / D-70 monitor (Ethernet)

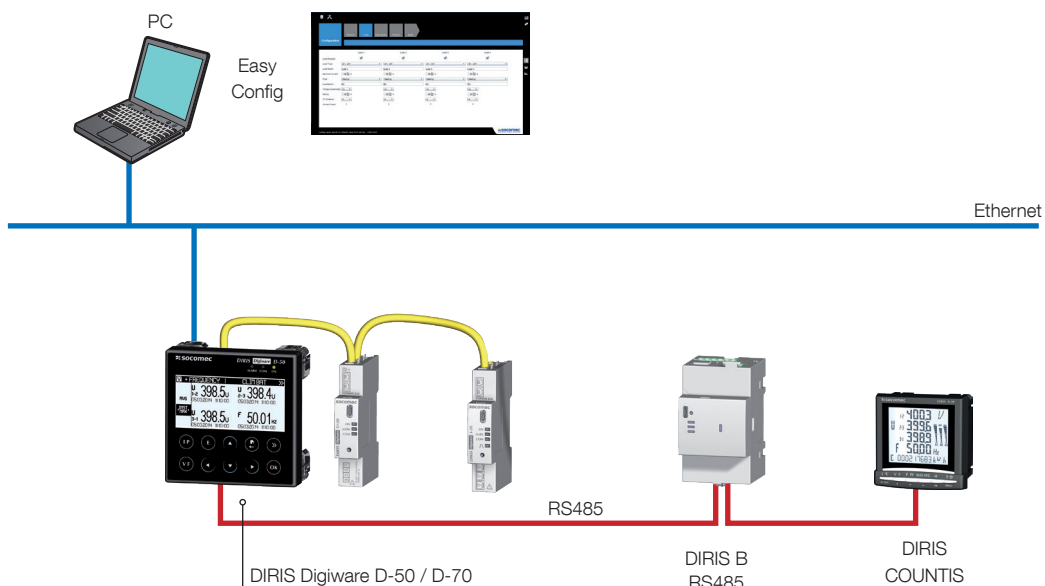

## 9.1.2. Using Easy Config

Easy Config is configuration software used to set product parameters easily and quickly. Parameters are set in successive steps:

Network → Loads → Measurement method → Values to be stored → Alarms → End configuration

(1)

The screenshot shows the 'EASY CONFIG TOOL V2.5' interface. The top navigation bar includes icons for Network, Loads, Calculations, Memory, Alarms, Multi Tariff, I/O, Quality, COM Module, and Final Action. The 'Loads' tab is selected. The main area displays the 'Load 1' configuration screen. A blue box labeled (1) highlights the top navigation bar. Another blue box labeled (2) highlights the 'Load 1' configuration fields, which include: Load Enabled (checked), Load Type (3P + N - 4CT), Load Name (Load 1), Nominal Current (20 A), Usage (Heating), Voltage Associated (V1, V2, V3, Vn), Rating (20 A, 20 A, 20 A, 20 A), CT Direction (+, +, +, +), and Current Input (1, 2, 3, 4). The bottom status bar shows 'New File : DIRIS B-30' and 'Profile Level : User'.

For each setting selected (1) a customised screen appears, depending on the connected product (2).

### Network configuration

In the electrical network configuration menu, the user selects the type of network (three-phase, single-phase, etc.), the nominal voltage, the network frequency, the direction of phase rotation and whether or not a voltage transformer is used.

The screenshot shows the 'EASY CONFIG TOOL V2.5' interface with the 'Network' tab selected. The main area displays the 'Network configuration' screen. The fields include: Network Type (3P + N), Nominal Voltage (400 V), Nominal Frequency (50 Hz), Phase Rotation (V1 - V2 - V3), Voltage Transformer (No), Primary (400 V), and Secondary (100 V). Each field has a question mark icon to its right. The bottom status bar shows 'New File : DIRIS B-30' and 'Profile Level : User'.

## Configuring the loads

The number and type of loads can be accessed in the load configuration menu. The user can also define its nominal current, the name of the load, its usage and its location within the electrical installation.

The screenshot shows the 'EASY CONFIG TOOL V2.5' interface with the 'Loads' tab selected. The main area displays four load configurations (Load 1 to Load 4) with the following settings:

| Load 1                                            | Load 2                                            | Load 3                                            | Load 4                                            |
|---------------------------------------------------|---------------------------------------------------|---------------------------------------------------|---------------------------------------------------|
| Load Enabled: <input checked="" type="checkbox"/> | Load Enabled: <input checked="" type="checkbox"/> | Load Enabled: <input checked="" type="checkbox"/> | Load Enabled: <input checked="" type="checkbox"/> |
| Load Type: 1P + N - ICT                           | Load Type: 1P + N - ICT                           | Load Type: 1P + N - ICT                           | Load Type: 1P + N - ICT                           |
| Load Name: Load 1                                 | Load Name: Load 2                                 | Load Name: Load 3                                 | Load Name: Load 4                                 |
| Nominal Current: 20 A                             | Nominal Current: 20 A                             | Nominal Current: 20 A                             | Nominal Current: 20 A                             |
| Usage: Heating                                    | Usage: Heating                                    | Usage: Heating                                    | Usage: Heating                                    |
| Voltage Associated: V1                            | Voltage Associated: V1                            | Voltage Associated: V1                            | Voltage Associated: V1                            |
| Rating: 20 A                                      | Rating: 20 A                                      | Rating: 20 A                                      | Rating: 20 A                                      |
| CT Direction: +                                   | CT Direction: +                                   | CT Direction: +                                   | CT Direction: +                                   |
| Current Input: 1                                  | Current Input: 2                                  | Current Input: 3                                  | Current Input: 4                                  |

The bottom status bar shows 'New File : DIRIS B-30' and 'Profile Level : User'.

## Calculation method

The calculation methods for the various electrical parameters and the integration time are defined in this screen.

The screenshot shows the 'EASY CONFIG TOOL V2.5' interface with the 'Calculations' tab selected. The main area displays the following settings:

|                                      |                |                    |     |         |
|--------------------------------------|----------------|--------------------|-----|---------|
| Integration Period Inst. Values      | 5              | Multiple of 200 ms | 1.0 | Seconds |
| Integration Period Histo Avg. Values | 15 Minutes     |                    |     |         |
| Integration Period Load Curves       | 10 Minutes     |                    |     |         |
| Synchronisation                      | Internal clock |                    |     |         |

The bottom status bar shows 'New File : DIRIS B-30' and 'Profile Level : User'.

## Alarms

The type of alarm and the configuration are set in Easy Config, see section "10. ALARMS", page 50 for more details.

### 9.1.3. Synchronisation of products

From Easy Config, synchronisation is completed from an SNTP server or manually. The time may be displayed on connected products automatically based on a configurable update schedule.

DIRIS G-30/G-40/G-50/G-60

EASY CONFIG TOOL V2.2

SNTP server settings

Activation: Yes

SNTP server IP address: 0.0.0.0

SNTP Server Port: 123

Slave Time Diffusion

Automatic slaves time update: Yes

Gateway time update frequency: 60 s

Slaves time update frequency: 30 s

Slaves Information Diffusion

Slaves load curve synchronisation method: Disabled

Slaves load curve integration time: 15 Min

Slaves historical values synchronisation method: Disabled

Slaves historical values integration time: 60 Min

Date/Time

Time Zone: UTC

Send Date/Time to device

Automatic: Sync from PC Date/Time

Manual: 5/15/2014 3:04:28 PM Send

New File : DIRIS G-30/G-40/G-50/G-60

Profile Level : Super User


socomec



So that all connected products display the same time, use the DIRIS G gateway or the multipoint DIRIS Digiware D-50 / D-70 screen for synchronisation.  
Do not use the synchronisation function on a single-point DIRIS D-30 screen as part of a multiproduct configuration.

9.2. Configuration from the DIRIS D-30 remote display

9.2.1. Connection mode

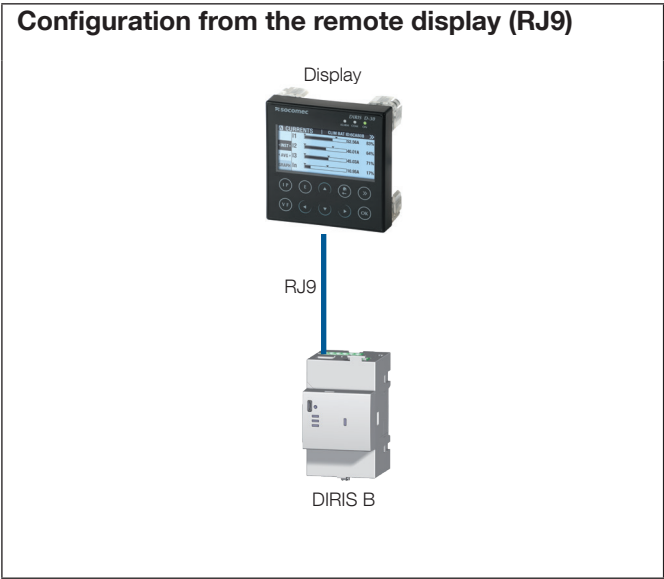

Refer to the manual for the DIRIS D-30 display for more details.

Connection cables for the remote display (RJ9):

| Length (m) | Quantity | Reference |
|------------|----------|-----------|
| 1.5        | 1        | 4829 0280 |
| 3          | 1        | 4829 0281 |

If the cables used are equivalent to SOCOMEC cables, ensure the specifications given in the recommendations section “6.1. Connecting the DIRIS B”, page 31 are observed, and that they are a maximum of 3 metres in length.

# 10. ALARMS

Alarms are available only on the DIRIS B-30 RS (ref. 4829 0000) and DIRIS B-30 RF (ref. 4829 0002).

## 10.1. Alarms upon events

On the DIRIS B-30 RS and RF, alarms can be generated when a threshold is exceeded for the electrical measurements, consumption, variations in level or change in input status. Also, combinations can be made on the alarms created.

up to 50 alarms detected are saved and timestamped; an alarm can have 3 distinct statuses: Alarm active, Alarm completed, Alarm completed and acknowledged. Alarms can be acknowledged either automatically or by user action, as required.


Up to 8 alarms for an electrical measurement are configured per item of equipment and 4 for changes in status of a digital input.

The alarms are configured via the Easy Config software.

### 10.1.1. Electrical parameters

- Alarm upon variation in the instantaneous or average value of an electrical value: Current, voltage, frequency, power, power factor, Cos phi, total harmonic distortion
- Selection of the hysteresis and high/low threshold
- Setting a time delay at the start and end of the alarm
- For the associated total harmonic distortion, voltage and current three-phase values, an alarm may be generated if the condition is fulfilled on a combination of phases:
  - On a single-phase: Phase1, Phase2, Phase3
  - On all the phases simultaneously: Phase1 and Phase2 and Phase3
  - On one phase of the three phases: Phase1 or Phase2 or Phase3

Example of configuring an alarm on the current via Easy Config:

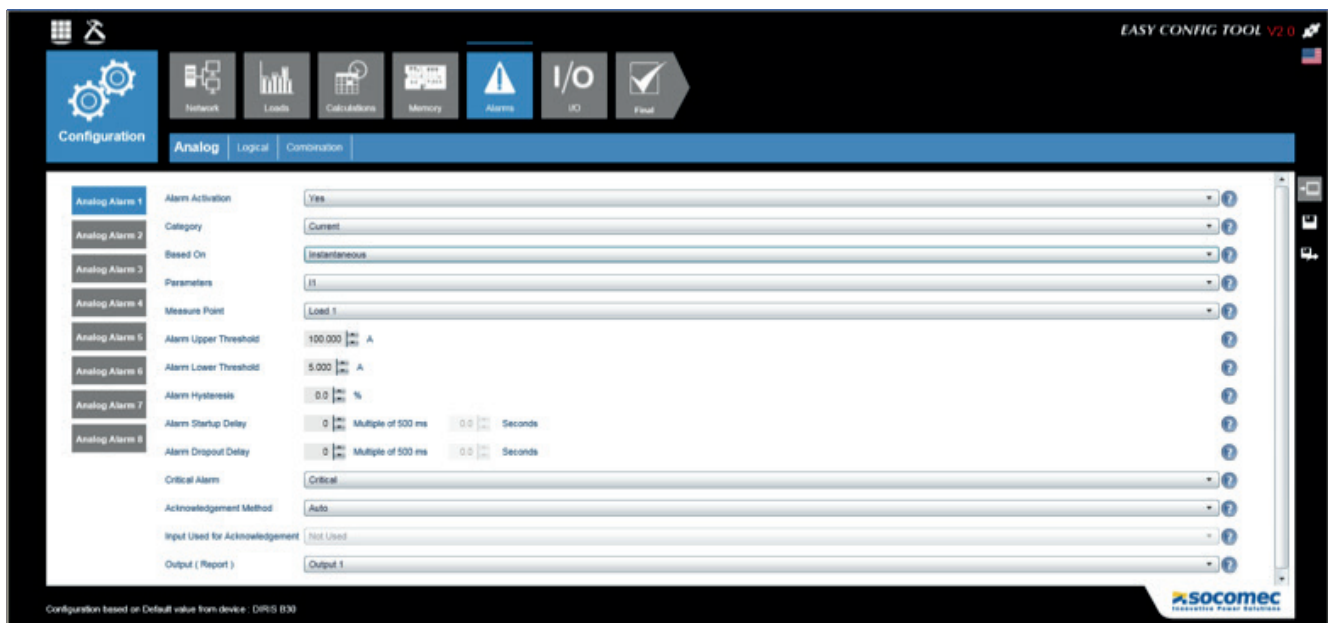

### 10.1.2. Voltage and current unbalance (in a three-phase network)

- Alarms on voltage unbalances: Unba, Unb
- Alarm upon current unbalance: Inba, Inb
- Selection of the hysteresis and high/low threshold
- Setting a time delay at the start and end of the alarm

### 10.1.3. EN 50160 voltage quality events

- Alarms on quality events for the voltage provided: voltage dips (Udip), temporary overvoltages (Uswl) and voltage outages (Uint), taking the occurrence into account: number, reference period.

### 10.1.4. Consumption

- Alarm on the energies: Ea+, Ea-, Er+, Er-, Eap (total or partial)
- Choice of a high (consumption too high) or low (consumption too low) threshold


### 10.1.5. Analogue inputs

- Alarm upon variations in the temperature or analogue input
- Selection of the hysteresis and high/low threshold
- Setting a time delay at the start and end of the alarm

### 10.1.6. Digital inputs

- Alarm upon change of status for a digital input
- Choice of a rising or falling edge
- Setting a time delay at the start and end of the alarm

*Example of configuring an alarm on a digital input via Easy Config:*

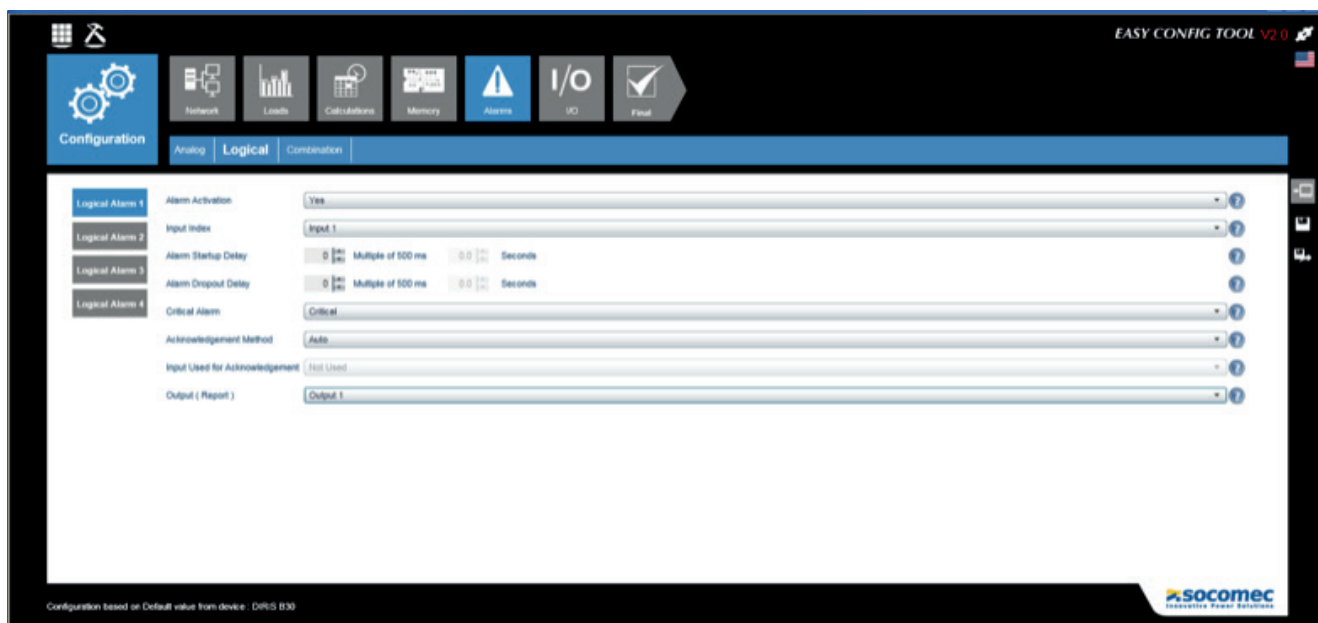

### 10.1.7. Combination of alarms

- 4 boolean combinations (OR, AND) on the defined alarms (electrical values, energy, inputs, etc.)

Example of configuring an alarm on a digital input via Easy Config:



## 10.2. Setup alarms

If an installation error is detected during setup, an alarm will be automatically generated.

### 10.2.1. Current/voltage compatibility

- Alarm upon connection error between the current and the voltage
- Requires a certain load level:  $0.6 < PF < 1$  and  $I > 2\% I_n$

### 10.2.2. Incorrect direction of rotation (three-phase network)

- Alarm upon identification of the incorrect direction of phase rotation (for example 3-2-1 instead of 1-2-3)

### 10.2.3. Faulty current sensor

- Alarm for detecting the absence of a current sensor

## 10.3. Setting up alarms

The installation alarms are automatically detected and alarms upon events are configured with the Easy Config software.

There are several ways of identifying the presence of an alarm:

### 10.3.1. ALARM LED on front

- Blinking: Setup alarm
- Fixed: Alarm upon event (takes priority if there is a commissioning alarm at the same time)

### 10.3.2. Activation of an output

- If an output is present on the product, it can be activated when an alarm is detected

### 10.3.3. Activation of an input

- If an input is present, the alarm can be acknowledged from this input. Acknowledgement of an alarm can only be taken into account if the alarm is complete

#### 10.3.4. RS485 Modbus

- Information on the alarms with timestamping available via the RS485 communication bus
- Sends alarm acknowledgement

#### 10.3.5. Display and WEBVIEW

- Information on the alarms with timestamping
- Sends alarm acknowledgement

# 11. FEATURES

## 11.1. DIRIS B features

### 11.1.1. Mechanical features

|                                                 |                                                                   |
|-------------------------------------------------|-------------------------------------------------------------------|
| Casing type                                     | DIN-rail mounting module and base                                 |
| Casing protection index                         | IP20 / IK06                                                       |
| Index of protection of front side               | IP40 on the nose in modular assembly / IK08                       |
| Sealing for the voltage and current connections | Sealable enclosure option for DIRIS B and sensors: ref: 4829 0597 |
| Weight                                          | DIRIS B-10: 160 g<br>DIRIS B-30 RS: 160 g<br>DIRIS B-30 RF: 175 g |

### 11.1.2. Electrical specifications

| Auxiliary power supply |                                                                                                                                                            |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alternative voltage    | 110-230 VAC $\pm 15\%$ (Ph/N or Ph/Ph) Cat III                                                                                                             |
| Frequency              | 50/60 Hz                                                                                                                                                   |
| Power consumption      | < 2VA without display, < 6VA with display DIRIS D-30                                                                                                       |
| Connection             | Removable spring-cage terminal block, 2x 2 positions,<br>0.5 - 2.5 mm <sup>2</sup> solid cable or 0.25 - 1.5 mm <sup>2</sup> stranded cable with end piece |

### 11.1.3. Input characteristics

| Input               |                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------|
| Number              | 2                                                                                                  |
| Type / Power supply | Optocoupler internal (12VDC $\pm 10\%$ )<br>or external (10-30VDC $\pm 10\%$ ) polarisation        |
| Input function      | Logic status, pulse meter or synchronisation pulse status (input 1)                                |
| Connection          | Removable screw terminal block, 4 positions, stranded or solid<br>0.14 - 1.5 mm <sup>2</sup> cable |

### 11.1.4. Measuring characteristics

| Measurement accuracy                    |                                                                                                      |
|-----------------------------------------|------------------------------------------------------------------------------------------------------|
| Accuracy                                | According to IEC 61557-12<br>PMD DD classification in association with specified census (TE, TR, TF) |
| Measuring energy and power              |                                                                                                      |
| Active energy and active power accuracy | 0.2 DIRIS B class only<br>Class 0.5 with TE or TF sensors<br>Class 1 with TR sensors                 |
| Accuracy of reactive energy             | Class 2 with TE, TR or TF sensors                                                                    |
| Power factor measurement                |                                                                                                      |
| Accuracy                                | Class 0.5 with TE or TF sensors<br>Class 1 with TR sensors                                           |
| Voltage measurement                     |                                                                                                      |
| Characteristics of the network measured | 50-300 VAC (Ph/N) - 87-520 VAC (Ph/Ph) - CAT III                                                     |
| Frequency range                         | 45 - 65Hz                                                                                            |
| Frequency accuracy                      | Class 0.02                                                                                           |
| Network type                            | Single-phase/ Two-phase / Two-phase with neutral / Three-phase / Three-phase with neutral            |

|                                    |                                                                                                                                                             |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement by voltage transformer | Primary: 400 000 VAC<br>Secondary: 60, 100, 110, 173, 190 VAC                                                                                               |
| Input consumption                  | ≤ 0,1 VA                                                                                                                                                    |
| Permanent overload                 | 300 VAC Ph/N                                                                                                                                                |
| Accuracy of voltage measurement    | Class 0.2                                                                                                                                                   |
| Connection                         | Removable spring-cage terminal block, 2 x 6 positions,<br>0.5 - 2.5 mm <sup>2</sup> solid cable or 0.25 - 1.5 mm <sup>2</sup> stranded cable with end piece |
| <b>Measurement of currents</b>     |                                                                                                                                                             |
| Number of current inputs           | 4                                                                                                                                                           |
| Associated current sensors         | Solid-core TE, split-core TR & iTR, flexible TF current sensors                                                                                             |
| Accuracy                           | 0.2 DIRIS B class only<br>Class 0.5 with TE or TF sensors<br>Class 1 with TR sensors                                                                        |
| Connection                         | Specific Socomec cable with RJ12 connectors                                                                                                                 |

### 11.1.5. Communication specifications

|                         |                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------|
| <b>DIRIS B-30 RS485</b> |                                                                                                    |
| Connection              | RS485                                                                                              |
| Connection type         | 2 - 3 half duplex wires                                                                            |
| Protocol                | Modbus RTU                                                                                         |
| Baudrate                | 1200 - 115200 bauds                                                                                |
| Function                | Data configuration and reading                                                                     |
| Connection              | Removable screw terminal block, 3 positions, stranded or solid<br>0.14 - 1.5 mm <sup>2</sup> cable |
| <b>DIRIS B-30 RF</b>    |                                                                                                    |
| Connection              | Wireless radio-frequency                                                                           |
| Frequency range         | 868 MHz (low frequency: 868.1 MHz and high: 869.5875 MHz)                                          |
| Baudrate                | 38400 bauds                                                                                        |
| Function                | Configuration and reading of data via the DIRIS G-40 or G-60 gateway                               |
| <b>USB</b>              |                                                                                                    |
| Connection              | USB 2                                                                                              |
| Protocol                | Modbus RTU on USB                                                                                  |
| Function                | DIRIS B configuration                                                                              |
| Connection              | Type B micro USB connector                                                                         |

### 11.1.6. Environmental specifications

|                             |                                                   |
|-----------------------------|---------------------------------------------------|
| Operating temperature       | -10 - +70°C (IEC 60068-2-1/IEC 60068-2-2)         |
| Storage temperature         | -25 - +85°C (IEC 60068-2-1/IEC 60068-2-2)         |
| Operating humidity          | 55°C / 97% HR (IEC 60068-2-30)                    |
| Operating altitude          | < 2,000 m                                         |
| Vibration                   | 0.35 mm, 25 Hz, 20 min/axe (IEC 61557-12)         |
| Rated impulse voltage       | IEC 60947-1 V. IMP: 6.4kV                         |
| PEP ecopassport - ISO 14025 | DIRIS B: SOCO-2014-01-v1-fr, SOCO-2014-01-v1-en   |
| Impact resistance           | Front panel: 5J - casing: 1J (IEC 61010-1 Ed 3.0) |

### 11.1.7. Electromagnetic compatibility

|                                                  |                               |
|--------------------------------------------------|-------------------------------|
| Immunity to electrostatic discharges             | IEC 61000-4-2 LEVEL III       |
| Immunity to radiated radio-frequency fields      | IEC 61000-4-3 LEVEL III       |
| Immunity to electrical fast transients/bursts    | IEC 61000-4-4 LEVEL IV        |
| Immunity to impulse waves                        | IEC 61000-4-5 LEVEL IV        |
| Immunity to conducted disturbances               | IEC 61000-4-6 LEVEL III       |
| Immunity to power frequency magnetic fields      | IEC 61000-4-8 400A/m LEVEL IV |
| Conducted emissions                              | CISPR11 Group1 - CLASS B      |
| Radiated emissions                               | CISPR11 Group1 - CLASS B      |
| Immunity to voltage dips and short interruptions | IEC 61000-4-11 LEVEL III      |

### 11.1.8. Safety

|            |                                                                                          |
|------------|------------------------------------------------------------------------------------------|
| Safety     | Compliance with Low Voltage Directive 2006/95/EC of 12th December 2006 (EN 61010-1:2010) |
| Insulation | Installation category III (300VAC Ph/N), degree of pollution 2                           |
| UL         | UL 61010-1 conformity                                                                    |

### 11.1.9. Service life

|                             |             |
|-----------------------------|-------------|
| MTTF (mean time to failure) | > 100 years |
|-----------------------------|-------------|

## 11.2. DIRIS O optional modules characteristics

| Mechanical features                                |                                                                                                                                                         |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Casing type                                        | Modular for DIN rail mounting                                                                                                                           |
| Power supply <sup>(1)</sup>                        |                                                                                                                                                         |
| Alternative voltage                                | 110-230 VAC $\pm 15\%$                                                                                                                                  |
| Frequency                                          | 50/60 Hz                                                                                                                                                |
| Connection                                         | Removable spring-cage terminal block, 2x 2 positions, 0.5 - 2.5 mm <sup>2</sup> solid cable or 0.25 - 1.5 mm <sup>2</sup> stranded cable with end piece |
| (1) No power supply to DIRIS O-it.                 |                                                                                                                                                         |
| DIRIS O-iod - 2 digital inputs/2 digital outputs   |                                                                                                                                                         |
| Number of inputs                                   | 2 per optional module - 4 optional modules max.                                                                                                         |
| Type                                               | Optocoupler internal (12VDC $\pm 10\%$ ) or external (10-30VDC $\pm 10\%$ ) polarisation                                                                |
| Function                                           | Logic status or pulse meter                                                                                                                             |
| Input connection                                   | Removable screw terminal block, 4 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable (max. length 1000 m)                                    |
| Number of outputs                                  | 0 output that can be used with DIRIS G                                                                                                                  |
| Type                                               | Relay / 230 V $\pm 15\%$ - 1A                                                                                                                           |
| Function                                           | Configurable alarm (current, power, etc.) on threshold overruns or remote controlled status                                                             |
| Output connections                                 | 2 removable screw terminal blocks, 2 x 2 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable                                                  |
| UL                                                 | UL 61010-1 conformity                                                                                                                                   |
| DIRIS O-ioa - 2 analogue inputs/2 analogue outputs |                                                                                                                                                         |

|                                                   |                                                                                                                          |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Number of inputs                                  | 2 per optional module - 4 optional modules max.                                                                          |
| Type                                              | 4-20 mA                                                                                                                  |
| Function                                          | Connection of analogue sensors (pressure, humidity, temperature, etc.)                                                   |
| Input connection                                  | Removable screw terminal block, 4 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable                          |
| Number of outputs                                 | 2 per optional module - 4 optional modules max.                                                                          |
| Type                                              | 4-20 mA                                                                                                                  |
| Function                                          | Sends an image of the measurements (power, currents, etc.) to automated machines                                         |
| Output connection                                 | Removable screw terminal block, 4 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable                          |
| UL                                                | UL 61010-1 conformity                                                                                                    |
| <b>DIRIS O-it - 3 temperature inputs</b>          |                                                                                                                          |
| Number of inputs                                  | 3 external inputs + 1 ambient measurement<br>Max 1 optional module                                                       |
| Dynamic                                           | -20 °C to 150 °C                                                                                                         |
| Type                                              | PT100 or PT1000                                                                                                          |
| Function of inputs 1, 2 and 3                     | Temperature measurement                                                                                                  |
| Connection                                        | 3 removable screw terminal blocks, 3 x 4 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable (max. length 3 m) |
| UL                                                | UL 61010-1 conformity                                                                                                    |
| <b>DIRIS O-m - RS485 communication</b>            |                                                                                                                          |
| Connection                                        | RS485<br>2 - 3 half duplex wires                                                                                         |
| Protocol                                          | Modbus RTU                                                                                                               |
| Baudrate                                          | 1200 - 115200 bauds                                                                                                      |
| Function                                          | Additional RS485 communication                                                                                           |
| Connection                                        | Removable screw terminal block, 3 positions, stranded or solid 0.14 - 1.5 mm <sup>2</sup> cable                          |
| <b>DIRIS O-p - PROFIBUS communication</b>         |                                                                                                                          |
| Connection                                        | RS485                                                                                                                    |
| Protocol                                          | PROFIBUS DPV1                                                                                                            |
| Start-up time                                     | 35 s                                                                                                                     |
| Function                                          | PROFIBUS communication                                                                                                   |
| Connection                                        | SubD9 connector                                                                                                          |
| <b>DIRIS O-b/ip - BACnet IP communication</b>     |                                                                                                                          |
| Protocol                                          | BACnet IP                                                                                                                |
| Baudrate                                          | 10 - 100 Mbit/s                                                                                                          |
| Start-up time                                     | 1 min 15 s                                                                                                               |
| Function                                          | BACnet IP communication                                                                                                  |
| Connection                                        | RJ45 port                                                                                                                |
| <b>DIRIS O-b/mstp - BACnet MSTP communication</b> |                                                                                                                          |
| Connection                                        | RS485                                                                                                                    |
| Protocol                                          | BACnet MSTP                                                                                                              |
| Baudrate                                          | 9600 - 76800 bauds                                                                                                       |
| Start-up time                                     | 1 min 15 s                                                                                                               |
| Function                                          | BACnet MSTP communication                                                                                                |
| Connection                                        | Removable screw terminal block, 5 positions, stranded or solid 0.2 - 2.5 mm <sup>2</sup> cable                           |

## 11.3. DIRIS D-30 display characteristics

### 11.3.1. Mechanical features

|                   |                                             |
|-------------------|---------------------------------------------|
| Type of screen    | Capacitive touch-screen technology, 10 keys |
| Screen resolution | 350 x 160 pixels                            |
| Weight (g)        | 160                                         |

### 11.3.2. Single product connection

|                      |                       |
|----------------------|-----------------------|
| RJ9                  | Self-powered and data |
| Micro-USB            | Upgrade               |
| Degree of protection | IP65 (front)          |

### 11.3.3. Electrical specifications

|                   |                      |
|-------------------|----------------------|
| Power supply      | 24 VDC +10 % / -20 % |
| Power consumption | 2 VA                 |

### 11.3.4. Environmental specifications

|                       |              |
|-----------------------|--------------|
| Storage temperature   | -20 to +70°C |
| Operating temperature | -10 to +55°C |
| Humidity              | 95% at 40°C  |
| Installation category | CAT III      |
| Degree of pollution   | 2            |

## 11.4. TE, TR and RF sensor features

| TE - closed sensor TE-18 to TE-90           |                                                                                  |            |            |            |           |                               |                           |
|---------------------------------------------|----------------------------------------------------------------------------------|------------|------------|------------|-----------|-------------------------------|---------------------------|
| Model                                       | TE-18                                                                            | TE-18      | TE-25      | TE-35      | TE-45     | TE-55                         | TE-90                     |
| Nominal current range I <sub>n</sub> (A)    | 5 - 20                                                                           | 25 - 63    | 40 - 160   | 63 - 250   | 160 - 630 | 400 - 1000                    | 600 - 2000 <sup>(1)</sup> |
| Actual measured current range (A)           | 0.1 - 24                                                                         | 0.5 - 75   | 0.8 - 192  | 1.26 - 300 | 3.2 - 756 | 8 - 1200                      | 12 - 2200                 |
| Max. current (A)                            | 24                                                                               | 75.6       | 192        | 300        | 756       | 1200                          | 2400                      |
| Weight (g)                                  | 24                                                                               | 24         | 69         | 89         | 140       | 187                           | 163                       |
| Max. voltage                                | 300 V                                                                            |            |            |            |           | 600V                          |                           |
| Rated withstand voltage                     | 3 kV                                                                             |            |            |            |           | 3.6 kV AC 1 min               |                           |
| Frequency                                   | 50/60 Hz                                                                         |            |            |            |           |                               |                           |
| Intermittent overload                       | 10x I <sub>n</sub> in 1 second                                                   |            |            |            |           | 40x I <sub>n</sub> in 0.5 sec |                           |
| Measurement category                        | CAT III                                                                          |            |            |            |           |                               |                           |
| Protection degree                           | IP30 / IK06                                                                      |            |            |            |           | IP30                          |                           |
| Operating temperature                       | -10 - +70°C                                                                      |            |            |            |           |                               |                           |
| Storage temperature                         | -25 - +85°C                                                                      |            |            |            |           |                               |                           |
| Relative humidity                           | 95% RH without condensation                                                      |            |            |            |           |                               |                           |
| Altitude                                    | < 2,000 m                                                                        |            |            |            |           |                               |                           |
| PEP ecopassport - ISO 14025                 | TE sensors: SOCO-2014-03-v1-fr, SOCO-2014-03-v1-en                               |            |            |            |           |                               |                           |
| UL                                          | UL 61010                                                                         |            |            |            |           |                               |                           |
| Connection                                  | SOCOMEK RJ12 cable, straight, twisted pair, unshielded, 300V cat.III. -40/+85°C. |            |            |            |           |                               |                           |
| <sup>(1)</sup> > 2000 A with 5A TC adapter. |                                                                                  |            |            |            |           |                               |                           |
| TR - split-core sensor                      |                                                                                  |            |            |            |           |                               |                           |
| Model                                       | TR-10                                                                            | TR-16      | TR-24      | TR-36      |           |                               |                           |
| Nominal current range I <sub>n</sub> (A)    | 25 - 75                                                                          | 32 - 100   | 63 - 200   | 200 - 600  |           |                               |                           |
| Actual measured current range (A)           | 0.5 - 90                                                                         | 0.64 - 120 | 1.26 - 200 | 4 - 720    |           |                               |                           |
| Max. current (A)                            | 90                                                                               | 120        | 240        | 720        |           |                               |                           |
| Weight (g)                                  | 74                                                                               | 117        | 211        | 311        |           |                               |                           |
| Max. voltage                                | 300 V                                                                            |            |            |            |           |                               |                           |
| Rated withstand voltage                     | 3 kV                                                                             |            |            |            |           |                               |                           |
| Frequency                                   | 50/60 Hz                                                                         |            |            |            |           |                               |                           |
| Intermittent overload                       | 10x I <sub>n</sub> in 1 second                                                   |            |            |            |           |                               |                           |
| Measurement category                        | CAT III                                                                          |            |            |            |           |                               |                           |
| Protection degree                           | IP20 / IK06                                                                      |            |            |            |           |                               |                           |
| Operating temperature                       | -10 - +70°C                                                                      |            |            |            |           |                               |                           |
| Storage temperature                         | -25 - +85°C                                                                      |            |            |            |           |                               |                           |
| Relative humidity                           | 95% RH without condensation                                                      |            |            |            |           |                               |                           |
| Altitude                                    | < 2,000 m                                                                        |            |            |            |           |                               |                           |
| PEP ecopassport - ISO 14025                 | TR sensors: SOCO-2014-04-v1-fr, SOCO-2014-04-v1-en                               |            |            |            |           |                               |                           |
| UL                                          | UL 61010                                                                         |            |            |            |           |                               |                           |
| Connection                                  | SOCOMEK RJ12 cable, straight, twisted pair, unshielded, 300V cat.III. -40/+85°C. |            |            |            |           |                               |                           |

| TF - Flexible current sensor      |                                                                                   |            |             |
|-----------------------------------|-----------------------------------------------------------------------------------|------------|-------------|
| Model                             | TF-55                                                                             | TF-120     | TF-300      |
| Nominal current range In (A)      | 150 - 600                                                                         | 500 - 2000 | 1600 - 6000 |
| Actual measured current range (A) | 3 - 720                                                                           | 10 - 2400  | 32 - 7200   |
| Weight (g)                        | 114                                                                               | 142        | 220         |
| Max. voltage                      | 600 V                                                                             |            |             |
| Rated withstand voltage           | 3.6 kV                                                                            |            |             |
| Frequency                         | 50 / 60 Hz                                                                        |            |             |
| Intermittent overload             | 10x In in 1 second                                                                |            |             |
| Measurement category              | CAT III                                                                           |            |             |
| Protection degree                 | IP30 / IK07                                                                       |            |             |
| Operating temperature             | -10 - +70°C                                                                       |            |             |
| Storage temperature               | -25 - +75°C                                                                       |            |             |
| Relative humidity                 | 95% RH without condensation                                                       |            |             |
| Altitude                          | < 2,000 m                                                                         |            |             |
| UL                                | UL 61010 conformity                                                               |            |             |
| Connection                        | SOCOMECS RJ12 cable, straight, twisted pair, unshielded, 300V cat.III. -40/+85°C. |            |             |

## 12. PERFORMANCE CLASSES

Performance classes are drawn up in compliance with IEC 61557-12 version 1 (08/2007)

|                                                                       |                                                                                                    |
|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Classification of the DIRIS B                                         | DD in combination with specified sensors (TE, TR, TF)                                              |
| Temperature                                                           | K55                                                                                                |
| Overall operating performance class for active power or active energy | 0.5 in combination with TE or TF<br>solid-core sensors 1 in combination with TR split-core sensors |

### 12.1. Specification of the characteristics

| Symbol                              | Function                                                                                                     | Overall operating performance class for DIRIS B + associated sensors* (TE, TR, TF) in compliance with IEC 61557-12 | Measurement range                                    |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| Pa                                  | Total active power                                                                                           | 0.2% DIRIS B only<br>0.5 with TE or TF sensors<br>with TR sensors                                                  | 10% ... 120% In<br>2% ... 120% In<br>2% ... 120% In  |
| Q <sub>A</sub> , Q <sub>V</sub>     | Total reactive power (arithmetic, vectorial)                                                                 | 1 with TE, iTR or TF sensors<br>2 with TR sensors                                                                  | 5% ... 120% In                                       |
| S <sub>A</sub> , S <sub>V</sub>     | Total apparent power (arithmetic, vectorial)                                                                 | 0.5 with TE or TF sensors<br>1 with TR sensors                                                                     | 10% ... 120% In                                      |
| Ea                                  | Total active energy                                                                                          | 0.2% DIRIS B only<br>0.5 with TE or TF sensors<br>1 with TR sensors                                                | 10% ... 120% In<br>2% ... 120% In<br>2% ... 120% In  |
| Er <sub>A</sub> , Er <sub>V</sub>   | Total reactive energy (arithmetic, vectorial)                                                                | 2 with TE, TR or TF sensors                                                                                        | 5% ... 120% In                                       |
| Eap <sub>A</sub> , Eap <sub>V</sub> | Total apparent energy (arithmetic, vectorial)                                                                | 0.5 with TE or TF sensors<br>1 with TR sensors                                                                     | 10% ... 120% In                                      |
| f                                   | Frequency                                                                                                    | 0.02                                                                                                               | 45 ... 65 Hz                                         |
| I, IN                               | Phase current, measured neutral current                                                                      | 0.2 DIRIS B only<br>0.5 with TE or TF sensors<br>1 with TR sensors                                                 | 5% ... 120% In<br>10% ... 120% In<br>10% ... 120% In |
| INc                                 | Calculated neutral current                                                                                   | 1 with TE or TF sensors<br>2 with TR sensors                                                                       | 10% ... 120% In                                      |
| U                                   | Voltage (Lp-Lg or Lp-N)                                                                                      | 0.2                                                                                                                | 50 ... 300 VAC Ph/N                                  |
| PF <sub>A</sub> , PF <sub>V</sub>   | Power factor (arithmetic, vectorial)                                                                         | 0.5 with TE or TF sensors<br>1 with TR sensors                                                                     | 0.5 lagging to 0.8 leading                           |
| Pst, Plt                            | Flicker (short-term, long-term)                                                                              | -                                                                                                                  | -                                                    |
| Udip**                              | Voltage dip (Lp-Lg or Lp-N)                                                                                  | 0.5                                                                                                                | -                                                    |
| Uswl**                              | Temporary overvoltages (Lp-Lg or Lp-N)                                                                       | 0.5                                                                                                                | -                                                    |
| Uint**                              | Voltage outage (Lp-Lg or Lp-N)                                                                               | 0.2                                                                                                                | -                                                    |
| Unba                                | Voltage amplitude unbalance (Lp-N)                                                                           | 0.5                                                                                                                | -                                                    |
| Unb                                 | Voltage phase and amplitude unbalance (Lp-Lg or Lp-N)                                                        | 0.2                                                                                                                | -                                                    |
| THDu, THD-Ru                        | Total harmonic distortion rate of the voltage (relative to the fundamental, relative to the efficient value) | 1                                                                                                                  | Orders 1 to 63                                       |
| Uh**                                | Voltage harmonics                                                                                            | 1                                                                                                                  | -                                                    |
| THDi, THD-Ri                        | Total harmonic distortion rate of the current (relative to the fundamental, relative to the efficient value) | 1 with TE, TR or TF sensors                                                                                        | Orders 1 to 63                                       |
| Ih**                                | Current harmonics                                                                                            | 1 with TE, TR or TF sensors                                                                                        | -                                                    |
| Msv                                 | Centralised remote control signals                                                                           | -                                                                                                                  | -                                                    |

\*With SOCOMEC connection cables.

\*\* Available only with the DIRIS B-30 RS (4829 0000) and DIRIS B-30 RF (4829 0002).

## 12.2. Evaluation of the power supply quality

| Symbol   | Function                                              | Overall operating performance class for DIRIS B + associated sensors (TE, TR, TF) in compliance with IEC 61557-12 | Measurement range                                    |
|----------|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| f        | Frequency                                             | 0.02                                                                                                              | 45 ... 65 Hz                                         |
| I, IN    | Phase current, measured neutral current               | 0.2 DIRIS B only<br>0.5 with TE or TF sensors<br>1 with TRsensors                                                 | 5% ... 120% In<br>10% ... 120% In<br>10% ... 120% In |
| INc      | Calculated neutral current                            | 1 with TE or TF sensors<br>2 with TRsensors                                                                       | 10% ... 120% In                                      |
| U        | Voltage (Lp-Lg or Lp-N)                               | 0.2                                                                                                               | 50 - 300 VAC Ph/N                                    |
| Pst, Plt | Flicker (short-term, long-term)                       | -                                                                                                                 | -                                                    |
| Udip**   | Voltage dip (Lp-Lg or Lp-N)                           | 0.5                                                                                                               | -                                                    |
| Uswl**   | Temporary overvoltages (Lp-Lg or Lp-N)                | 0.5                                                                                                               | -                                                    |
| Uint**   | Voltage outage (Lp-Lg or Lp-N)                        | 0.2                                                                                                               | -                                                    |
| Unba     | Voltage amplitude unbalance (Lp-N)                    | 0.5                                                                                                               | -                                                    |
| Unb      | Voltage phase and amplitude unbalance (Lp-Lg or Lp-N) | 0.2                                                                                                               | -                                                    |
| Uh**     | Voltage harmonics                                     | 1                                                                                                                 | -                                                    |
| Ih**     | Current harmonics                                     | 1 with TE, TR or TF sensors                                                                                       | -                                                    |
| Msv      | Centralised remote control signals                    | -                                                                                                                 | -                                                    |

\*\* Available only with the DIRIS B-30 RS (4829 0000) and DIRIS B-30 RF (4829 0002).



---

CORPORATE HQ CONTACT:  
SOCOMEC SAS  
1-4 RUE DE WESTHOUSE  
67235 BENFELD, FRANCE

---

<http://www.socomec.com>



546770B