


Technical details
Dimensions in mm


Dimensions of the interior installation depth with installed mounting plates.

The width of Mi Empty boxes Mi 9... enlarges about 15 mm because of the laterally mounted lid hinges, refer to product pages.


 = usable installation space with mounted cable glands

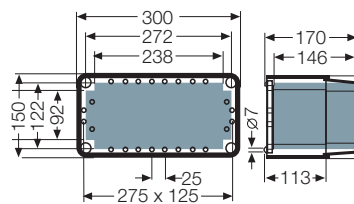


Mi 0100
Mi 0101
Mi 9100
Mi 9101

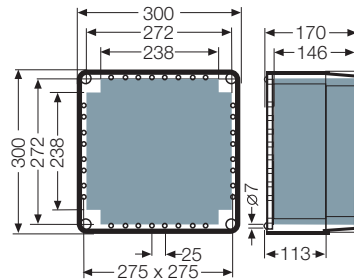


Mi 0200
Mi 0201
Mi 9200
Mi 9201

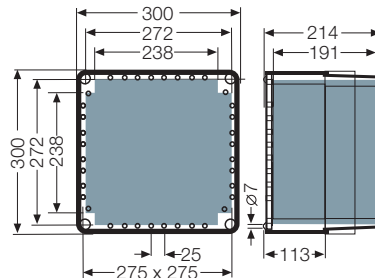


Mi 0210
Mi 0211
Mi 9210
Mi 9211

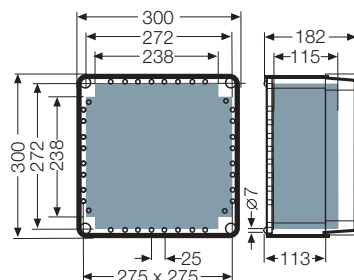


Mi 0220
Mi 0221

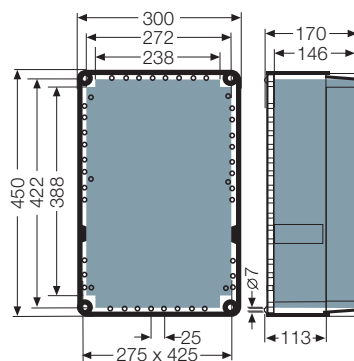


Mi 0300
Mi 0301
Mi 9310
Mi 9311

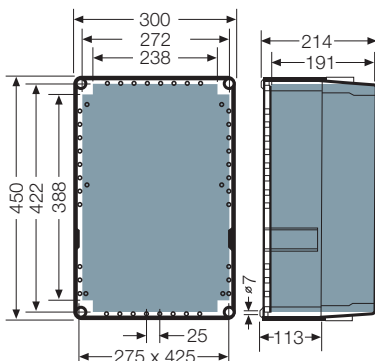


Mi 0310
Mi 0311
Mi 9310
Mi 9311

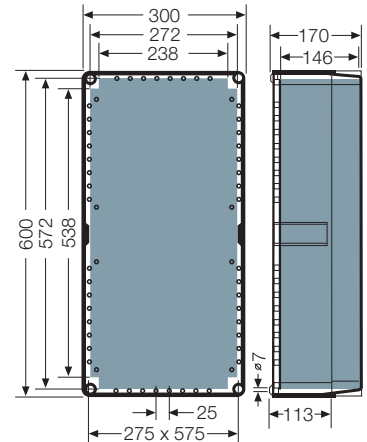


Mi 0400
Mi 0401
Mi 9400
Mi 9401

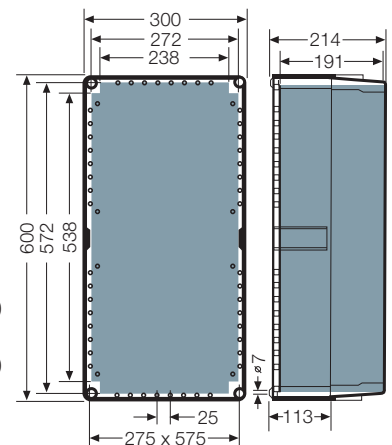

Mi 0410
Mi 0411
Mi 9410
Mi 9411

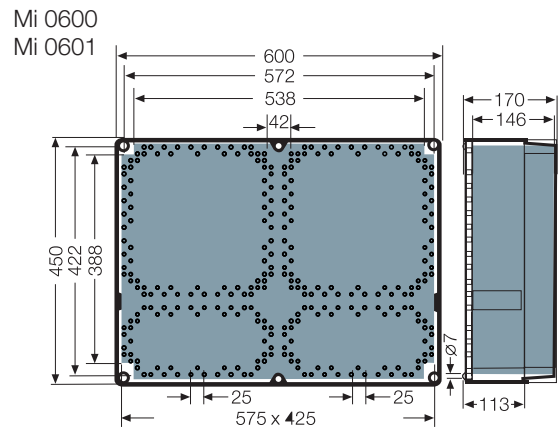

Mi 0600
Mi 0601

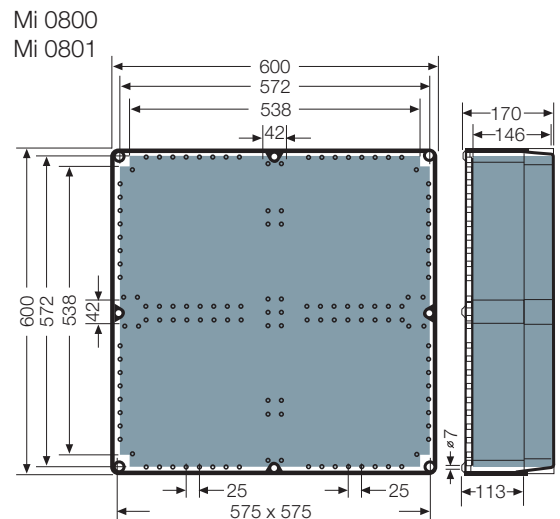

Mi 0800
Mi 0801

Installation of equipment in protection plates:

Pre-drill the sections at the corners, then saw away the section from the protection plate by using a piercing saw at middle to low cutting speed.

Use coarse toothed saw blades for plastics (e.g. Bosch T 101 B).

