


## DMX Live control and Stand Alone controller


- USB connection
- Up to 2 DMX512 universes
- 128k flash memory for storing stand alone programs
- 8 dry contact trigger ports via HE10 connector
- clock & calendar triggering function
- stand alone mode with 1 zone and 255 scenes

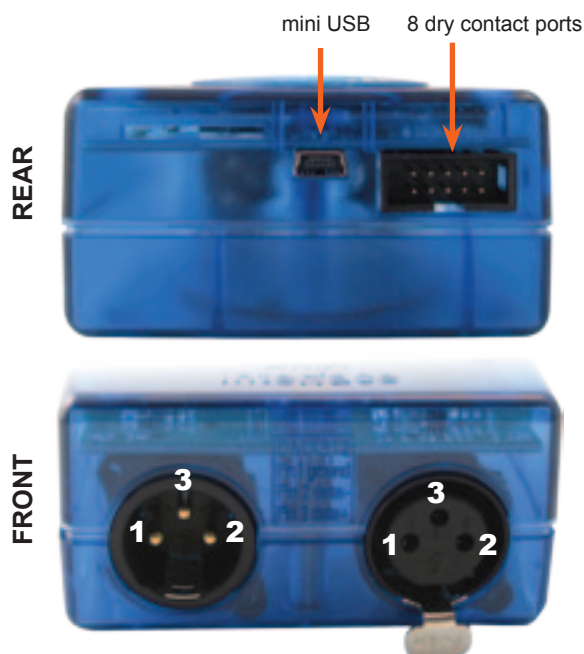

Universe #2\*  
1 DMX2 ground  
2 DMX2 data-  
3 DMX2 data+

Universe #1  
1 DMX1 ground  
2 DMX1 data-  
3 DMX1 data+


\*not compatible with SLESA-U8

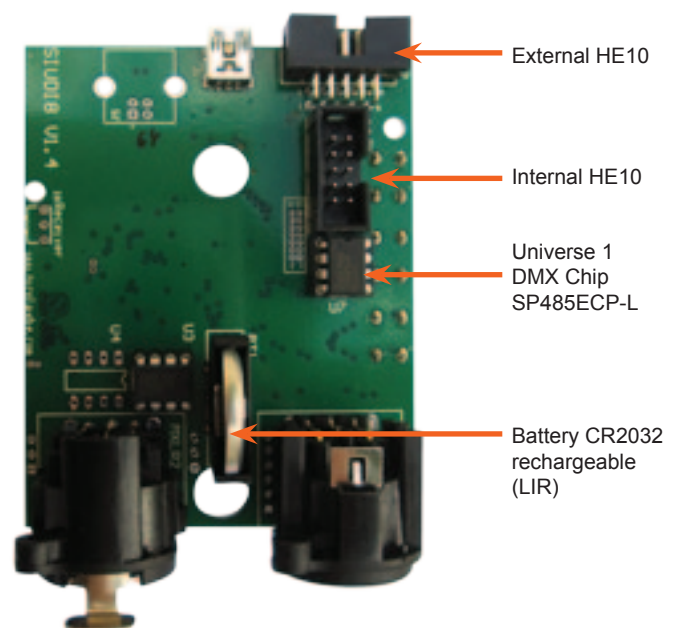

## SPECIFICATIONS


| Package        | Interface, cdrom, usb cable                                              |
|----------------|--------------------------------------------------------------------------|
| OS Requirement | Mac OSx 10.6/10.7/10.8 - Windows XP/VISTA/SEVEN/8 32/64 bits and USB 2.0 |
| Colors         | Blue, Orange, Gray, Green, Marine, White, Red                            |
| Connections    | XLR3, mini USB, 2 HE10, battery                                          |
| Power          | Power From 5V to 5.5V DC (AC/DC adapter in option, ref: POWER1_EU)       |
| Certifications | EC, EMC, ROHS, ETL, UL (some are in progress)                            |
| Interface      | 79x92x43 mm 120g                                                         |
| Package        | 140x135x50 mm 340g                                                       |
| Use            | Environement IP20 Temperature 0°C to 50°C                                |
| Buttons        | 2 buttons to change scene (previous/next) + 1 button to change dimmer    |

### External HE10



P1 PORT 1 P6 PORT 6  
P2 PORT 2 P7 PORT 7  
P3 PORT 3 P8 PORT 8  
P4 PORT 4 GND Ground  
P5 PORT 5


### Internal HE10




1 Ground 6 NEXT  
2 Dimmer 7 Zone  
3 DMX1+ 8 LED DMX  
4 PREVIOUS 9 VUSB  
5 DMX1- 10 LED USB



## LIVE USE WITH COMPUTER

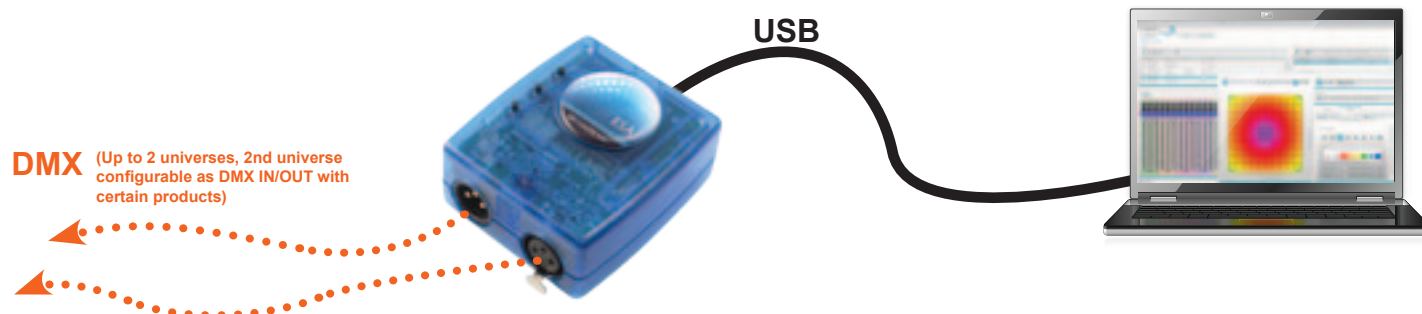

## STAND ALONE USE

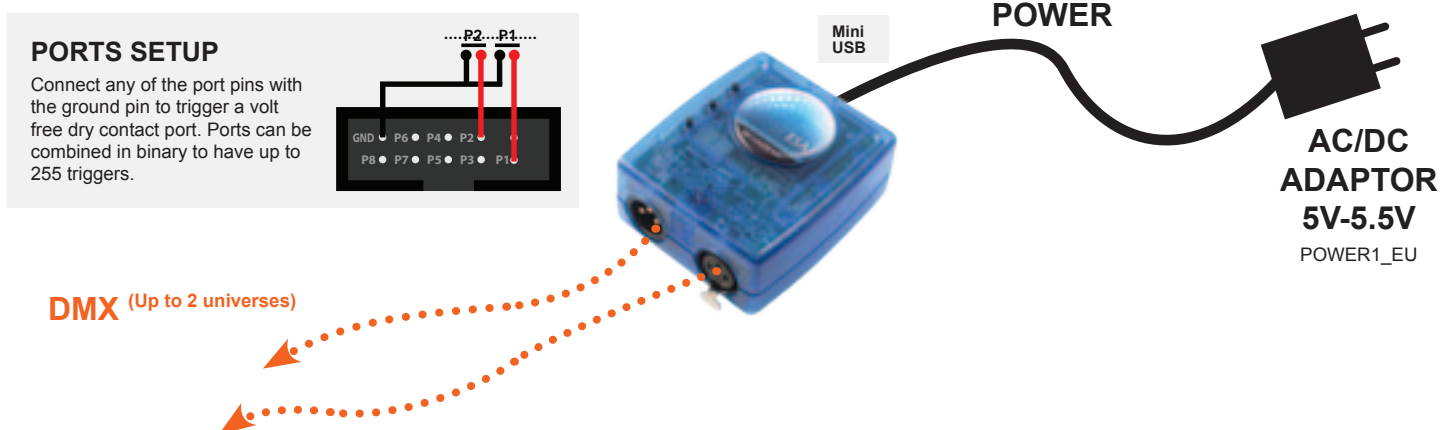

## SOFTWARE TOOLS.EXE to set parameters



### TOOLS TABS

#### Interface

Displays the serial number and firmware version

#### Stand Alone

Set the interface to stand alone mode

#### Firmware

Write the latest firmware

#### Test

Test DMX outputs and ports

#### Date / Time

Set date, time, and location coordinates

#### Parameters

Adjust special parameters

#### Dmx Timing

Adjust DMX output signal

### Software

- Easy Stand Alone software\* (PC)
- ESA2 software\* (PC & Mac)
- SL Suite 2 (PC, works only with SUITE2-EC versions)

\* SLESA-U8 limited to 1 universe