

Automatic Transfer Switching Equipment

ATyS p M



CONTENTS

1. GENERAL SAFETY INSTRUCTIONS	4
2. INTRODUCTION	5
2.1. The ATyS family product range	5
2.2. The ATyS M Range Key Features	6
2.2.1. Selection guide	7
3. QUICK START ATYS P M	8
4. ATYS P M VERSIONS	12
4.1. Product presentation	12
4.2. Specifications and advantages	12
4.3. Supply types	12
5. OPTIONAL ACCESSORIES	13
6. TECHNICAL DATA	14
7. ENVIRONMENTAL CONDITIONS	15
8. PRODUCT INSTALLATION	16
8.1. Changing the padlocking configuration	16
8.2. Recommended orientation	16
8.3. Dimensions	16
8.4. Back plate mounted	16
8.5. DIN rail mounted	17
9. INSTALLATION OF OPTIONAL ACCESSORIES	18
9.1. Auxilliary contacts	18
9.2. Voltage sensing and power supply tap	18
9.3. Bridging bars 4P	19
9.4. Terminal shrouds	19
10. INSTALLING WITHIN THE ATYS M ENCLOSURE	20
10.1. Polycarbonate enclosure	20
10.1.1. Wiring in a polycarbonate enclosure	20
10.1.2. Extension unit	20
11. CONNECTION OF THE POWER CIRCUITS	21
11.1. Ratings / cross-sections table of correspondence	21
11.2. Parallel pole set-up for a 4P device used in single phase	21
11.3. Network configurations	23
11.3.1. Voltage configurations for 230/400VAC versions	23
11.3.2. Voltage configurations for 127/230VAC versions	25
11.3.3. Three phase without neutral network	26
12. CONNECTION OF CONTROL/COMMAND CIRCUITS	27
12.1. Terminal connectors designation	28
12.2. Auxiliary contact operating schedule	29
13. OPERATION	30
13.1. Presentation of the product interface	30
13.1.1. Reset	31
13.2. Manual mode	31
13.2.1. Manual switching	31
13.3. Padlocking	32

13.4. Front keypad navigation and general information	32
13.4.1. Keypad.	32
13.4.2. Software version	32
13.4.3. Display presentation.	33
13.4.4. Events	34
13.4.4.1. Encoding principle	34
13.4.5. Events list	34
13.4.5.1. Error messages list	35
13.5. Programming	36
13.5.1. Programming with EasyConfig	36
13.5.2. Product programming with the front keypad	36
13.5.3. Programming mode	38
13.5.4. SETUP Menu.	40
13.5.5. Phase rotation check	42
13.5.6. VOLT. LEVELS Menu	43
13.5.7. Over-voltage and under-voltage	44
13.5.7.1. Voltage unbalance measurement	44
13.5.8. FREQ. LEVELS Menu.	45
13.5.8.1. Under-frequency or over-frequency	45
13.5.9. TIMERS Menu.	46
13.5.10. I-O menu	48
13.5.10.1. Inputs description	49
13.5.10.2. Outputs description	50
13.5.11. COMM Menu	53
13.6. Automatic mode	54
13.6.1. Sealable Auto/Manual cover	54
13.6.2. Possible actions	54
13.6.3. Priority source loss sequence (stable position) in M-G application	55
13.6.4. Priority source loss and restoration sequence (stable position) in M-M application	56
13.6.5. Priority source loss sequence (with trip) in M-M application	57
13.6.6. Priority source loss sequence (with trip) in M-G application	58
13.6.7. Priority source automatic restoration sequence	59
13.6.8. Priority source restoration sequence (stable position) in M-G application	60
13.6.9. Back-up source loss sequence (with trip) in M-G application	61
13.7. Control / Test operating mode	62
13.7.1. Test modes	62
13.7.2. Off load test (M-G application only)	62
13.7.2.1. On load test (M-G application only)	63
13.7.2.2. Changeover switch position I, 0 and II check (accessible in AUT mode)	63
13.8. Emergency breaking (trip function)	64
13.9. Communication (optional 9383 xxxx units only)	65
13.9.1. COMM Menu	65
13.9.2. General Information	65
13.9.3. Modbus® protocol	66
13.9.4. Function 3	67
13.9.5. Function 6	69
13.9.6. Functions 3, 6 and 16	70
14. PREVENTATIVE MAINTENANCE	73
15. TROUBLESHOOTING GUIDE	74

1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the ATyS M transfer switch manufactured by SOCOMEC.
- Whether the ATyS is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers recommendations, following good engineering practices and after having read and understood the details in the latest release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer to and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury and/or damage to equipment.
- This instruction manual must be made accessible so as to be easily available to anyone who may need to read it in relation with the ATyS.
- The ATyS meets the European Directives governing this type of product and includes CE marking on each product.
- No covers other than that for auto/manu on the ATyS should be opened (with or without voltage) as there may still be dangerous voltages inside the product such as those from external circuits.
- **Do not handle any control or power cables connected to the ATyS when voltage may be present on the product directly through the mains or indirectly through external circuits.**
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carry out any maintenance or other work on live parts or other parts in the vicinity of exposed live parts, ensure that the switch including all control and associated circuits are de-energized.

	DANGER	RISK: Electric shock, burns, death
	WARNING	RISK: Possible personal injury
	CAUTION	RISK: Equipment damage

- As a minimum the ATyS M comply with the following international standards:

- IEC 60947-6-1	- IEC 60947-3
- GB 14048-11	- IS 13947-3
- EN 60947-6-1	- EN 60947-3
- VDE 0660-107	- NBN EN 60947-3
- BS EN 60947-6-1	- BS EN 60947-3
- NBN EN 60947-6-1	

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.

2. INTRODUCTION

ATyS p M “Automatic Transfer Switching Equipment” (ATSE) is designed for use in power systems for the safe transfer of a load supply between a normal and an alternate source. The changeover is done in open transition and with minimum supply interruption during transfer ensuring full compliance with IEC 60947-6-1, GB 14048-11 and other international TSE standards as listed.

The ATyS p M is a full load break (switch type) derived transfer switching equipment where the main components are proven technology devices also fulfilling requirements in IEC 60947-3 standards.

As a Class PC ATSE, the ATyS p M is capable of “making and withstanding short circuit currents” assigned to IEC 60947-3 utilization categories of up to AC23A, GB 14048-11, IEC 60947-6-1 and equivalent standards with utilization categories of up to AC33B.


ATyS p M transfer switches ensure:

- Power Control and Safety between a normal and an alternate source.
- A complete product delivered as a fully assembled and tested solution.
- Intuitive HMI for emergency / local operation.
- Integrated and robust switch disconnection.
- Window with clearly visible position indication I – 0 - II.
- An inherent failsafe mechanical interlock.
- Stable positions (I – 0 – II) non affected by typical vibration and shocks.
- Constant pressure on the contacts non affected by network voltage.
- Energy Efficient with virtually no consumption whilst on the normal, alternate or off positions.
- Extremely rugged, error free and built in padlocking facility (configurable).
- Straight forward installation with effective ergonomics.
- Programmable secure motorization controls interface.
- User configurable I/O with communication through Modbus® (RS485) Optional
- ATS configuration through a keypad as well as through EasyConfig programming software.
- Auxiliary contacts for switch positions I – 0 - II (optional).
- “Product availability” output.
- Ample accessories to suit specific requirements.
- Fully integrated ATS controller specifically designed for Mains / Mains and Mains / Genset applications.

2.1. The ATyS family product range

Just the right ATyS for your application...

ATyS: Small Footprint

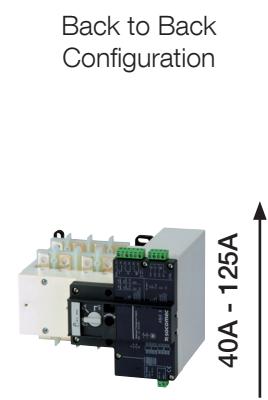

ATyS d S
Small Genset
with DPS

ATyS S (RTSE)
Small Gense



ATyS p
Power/Genset
Management

ATyS g
Simple Genset
Management

ATyS t
Transformer
Management

ATyS d
RTSE (DPS)

ATyS r
RTSE

(⁽¹⁾)ATyS RTSE

ATyS M: Modular Profile



ATyS p M
Evolved Genset
Management

ATyS g M
Simple Genset
Management

ATyS t M
Transformer (building)
Management


ATyS d M
RTSE (DPS)

Side by Side Configuration

⁽¹⁾ The UL version of ATyS r is available from 100 - 400A

2.2. The ATyS M Range Key Features


Selecting the right ATyS M will depend on the application, the functionality required as well as the nature of the installation in which the ATyS M will be installed. Below is an outline product selection chart listing the key features of each product to help you select the right ATyS M for your needs.

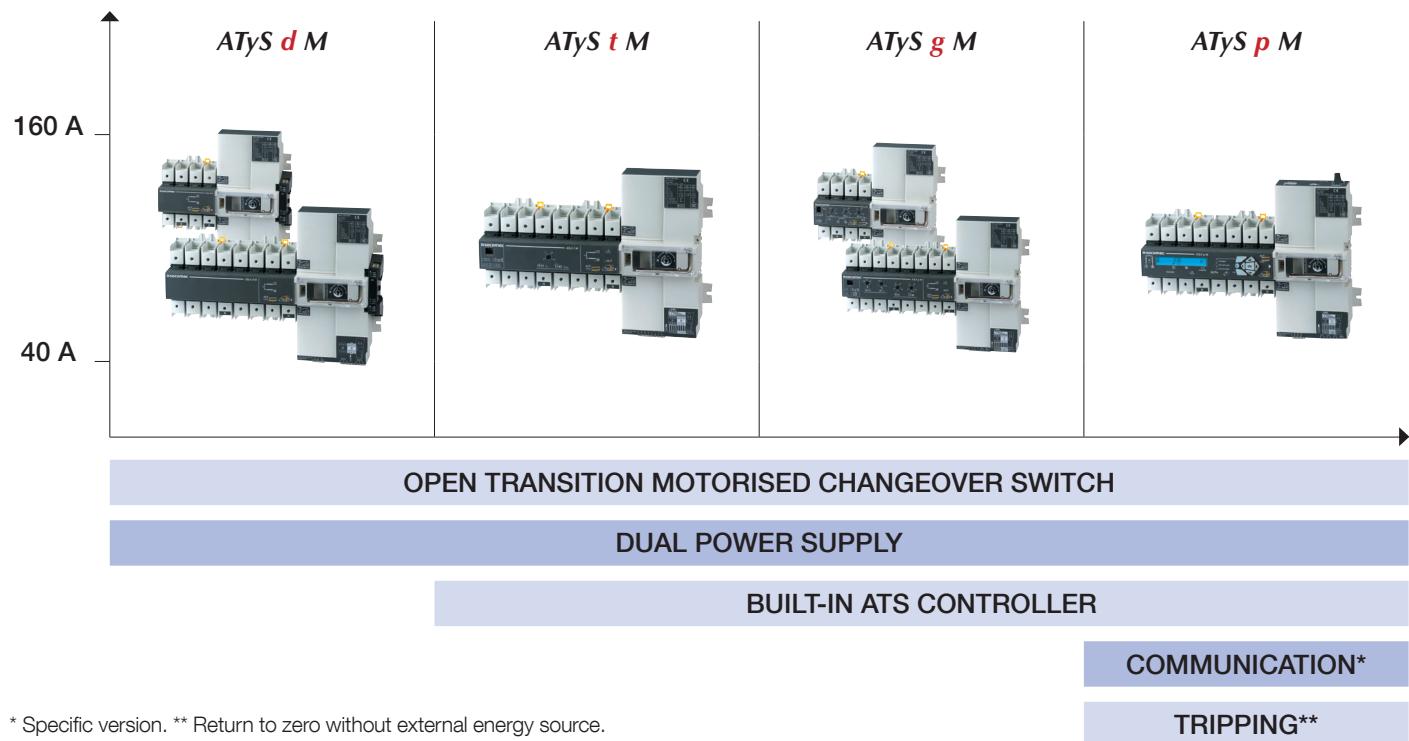

A product for virtually all power changeover applications from 40 to 160 A


- ▶ Network/Genset
- ▶ Genset/Genset
- ▶ Network/Network

Applications with an External ATS Control

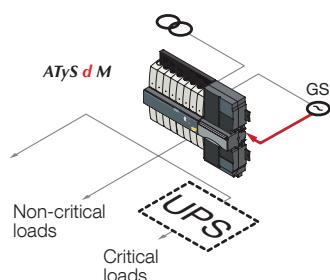


- ▶ Network/Network

Building applications

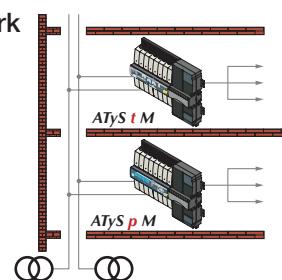


- ▶ Network/Genset

Genset Applications for Standby Power

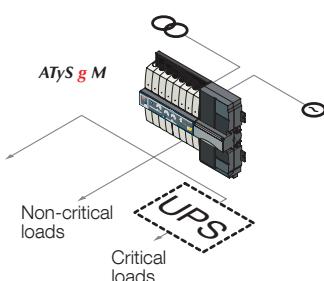

- ▶ Network/Genset
- ▶ Network/Network

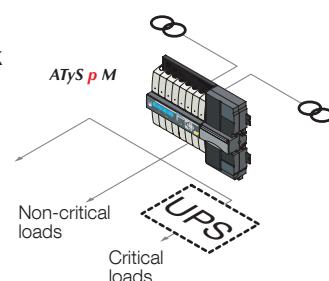

2.2.1. Selection guide

Six ratings 40/63/80/100/125/160 A

	ATyS d M	ATyS t M	ATyS g M	ATyS p M
Applications				
Normal/Backup without automatic controller	•			
Normal/Backup with built-in automatic controller		•	•	•
Stable positions	•	•	•	•
Load changeover	•			
FUNCTIONS				
Power supply				
External	•			
Integrated		•	•	•
Operation				
Backup manual operation of the 3 positions	•	•	•	•
Electrical (dry contact) control of positions I, 0 and II	•			•*
Automatic control of positions I, 0 and II		•	•	•
Return to 0 position feature upon loss of source				•
Monitoring				
3 voltages on networks I and II		•	•	•
Frequency on networks I and II		•	•	•
Phase rotation on networks I and II				•
Asymmetry of networks I and II				•
Automatic controller configuration				
By potentiometer and micro-switch		•	•	
By screen + keyboard				•
V _n , F _n , V threshold, F threshold		•	•	•
Driving with or without priority***		•	•	•
Adjustable operating timers		•	•	•
Preset configuration				
Control type (impulse or switch/contactor)	•			
Display				
Position, fully visualised breaking	•	•	•	•
LED: source status, automatic mode, fault LED		•	•	•
LED: switch positions, supply, tests, control				•
V, F, timers, number of operations, last event				•
REMOTE CONTROL				
Outputs				
Generator start/stop order			•	•
Product availability (not fault and not manual mode)			•	•*
Source available		•		•*
Programmable output (source, availability, fault)				•*
Inputs				
Test on load			•	•*
Retransfer			•	•*
Automatic mode inhibit		•	•	•*
Position O order		•	•	•*
Priority		•	•	•
Other programmable inputs (test off-load, position control, etc.)				•*
Remote control				
Human/Machine Interface (D10 and D20)				•
RS485 communication (MODBUS)				•**

* 3 inputs/3 outputs (programmable).

** Product reference is different: communication by RS485 connection (MODBUS) allows up to 31 ATyS M to be connected to a PC or a PLC over 1500 m.

3. QUICK START ATyS p M

QUICK START GUIDE

EN



542934G

Automatic
Transfer Switching Equipment

ATyS p M 40 - 160 A (4P)

Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition.
- The product reference corresponds to the order.
- Contents should include:
 - Qty 1 x ATyS M
 - Qty 1 x Emergency handle extension rod
 - Qty 1 x Set of terminals
 - Quick Start Guide

Warning

⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment. This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.


- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorized personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing). Failure to observe good engineering practices as well as to follow these safety instructions may expose the user and others to serious injury or death.

⚠ Risk of damaging the device
In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Installation standards must be respected.


Accessories

- Bridging bars 125A or 160A.
- Control voltage transformer (400Vac → 230Vac).
- Voltage sensing and power supply tap.
- Terminal shrouds.
- Auxiliary contact blocks.
- Polycarbonate enclosure.
- Polycarbonate extension box.
- Power Connection Terminals.
- ATyS D10 remote display unit.
- ATyS D20 remote control and display unit.

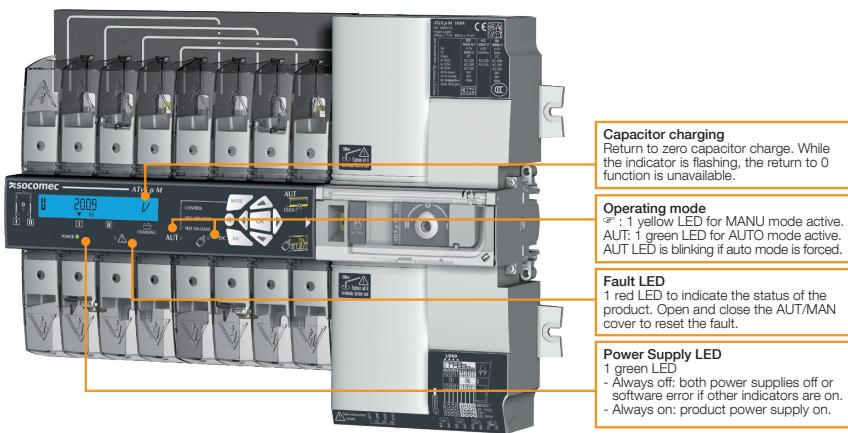


1 Installation

⚠ Caution: Ensure that the product is installed on a flat rigid surface.

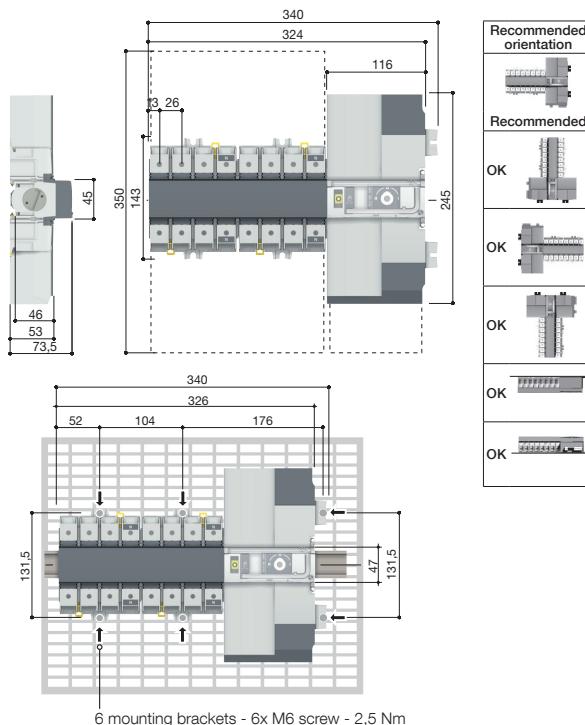


Padlocking configuration


⚠ The ATyS M is delivered with padlocking configured to the O position.

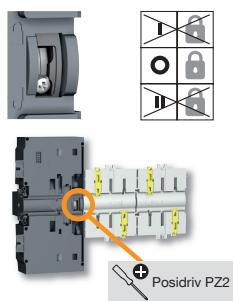

⚠ To allow padlocking in all positions (I - O - II), configure the ATyS M as follows before installation. (Screw is located at the back of the product).

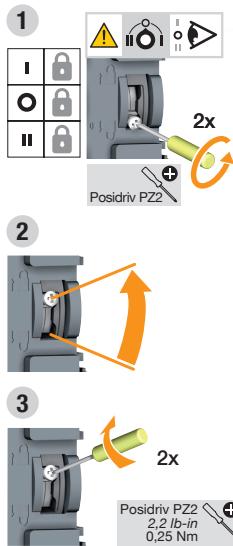

⚠ Tighten to avoid movement on the DIN rail.

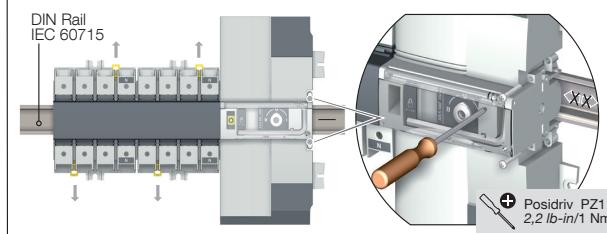

Full user manual:
www.socomec.com/
operating-instructions
www.socomec.com





2 Power Terminal Connections

⚠ It is essential to tighten all used terminals, with cables and/or bridging bars, before use.


Load side bridging bar.
40 - 125 A: 1309 4006
160 A: 1309 4016



Source supply side

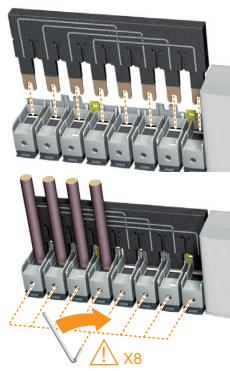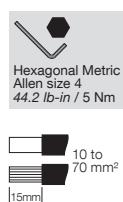

Voltage taps provide 2x ≤ 1.5mm² connections. They can be fitted in any terminals on the source supply side. Do not use on the load side when equipped with a bridging bar.

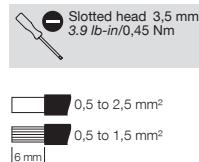


3 CONTROL / AUX POWER Terminals and wiring

TYPE	TERMINAL NO.	DESCRIPTION	CHARACTERISTICS	RECOMMENDED CONNECTION CROSS-SECTION
Inputs	207	Common point for inputs	Do not connect to any power supply Supply from the product	0.5 to 2.5 mm ² (rigid)
	208	I1: programmable input		
	209	I2: programmable input		
	210	I3: programmable input		
Outputs	43/44	O1: programmable output	Resistive load 2A 30Vdc 0.5A 230Vac Pmax: 60W or 115VA Umax: 30Vdc or 230Vac	0.5 to 1.5 mm ² (stranded)
	53/54	O2: programmable output		
	63/64	O3: programmable output		
	73/74	G: generator stat signal		
Remote interface connection	RJ	ATyS D10/D20 human/machine interface	Maximum distance 3 m	RJ45 8/8 straight cable Cat. 5
Serial connection (specific version)	RS485	Connection RS485 0: interconnection of cable shielding upstream and downstream of RS485 bus -: negative terminal of RS485 bus +: positive terminal of RS485 bus	RS485 bus insulated	LiCY shielded twisted pair, 0.5 to 2.5 mm ²


AUXILIARY CONTACTS

Fitting of auxiliary contacts:
1309 1001 or 1309 1011.



To fit an AC, the switch must first be put in position 0. An auxiliary contact module comprises: one NO/NC changeover contact for each position (I-0-II). To install use the long screws supplied with the module.



TYPE	TERMINAL NO.	STATUS OF THE CONTACT	DESCRIPTION	OUTPUT CHARACTERISTICS	RECOMMENDED CONNECTION CROSS-SECTION
Auxiliary contact block 1309 1001	11/12/14	11—14 —12	Changeover switch in position I	250V AC 5A AC1 - 30 Vdc 5A	0.5 to 2.5 mm ² (rigid)
	21/22/24	21—24 —22	Changeover switch in position II		
	01/02/04	01—04 —02	Changeover switch in position 0		
Auxiliary contact block 1309 1011	11/12/14	11—14 —12	Changeover switch in position I		0.5 to 1.5 mm ² (stranded)
	21/22/24	21—24 —22	Changeover switch in position II		
	01/02/04	01—04 —02	Changeover switch in position 0		

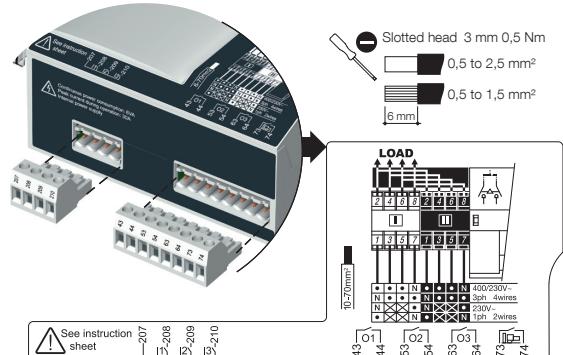

Ensure that the product is in Manual Mode (front cover open).

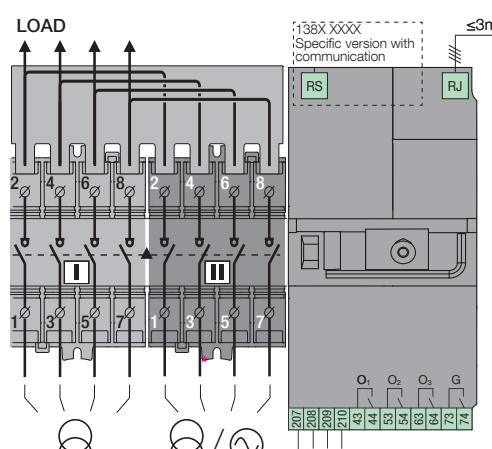


Communication RS485 connection (optional) 138X XXXX only

Reset

RJ45

ON/OFF



4 Check

Whilst in manual mode, check the wiring and if ok power up the product.



5 Programming


Programming access is possible in Automatic mode, when the product is in position I with source 1 available, and in Manual mode in any position and with at least one available source.

Note: for complete programming details download the instruction manual from the Socomec website.




5 Programming

To access programming
Default code: 1000

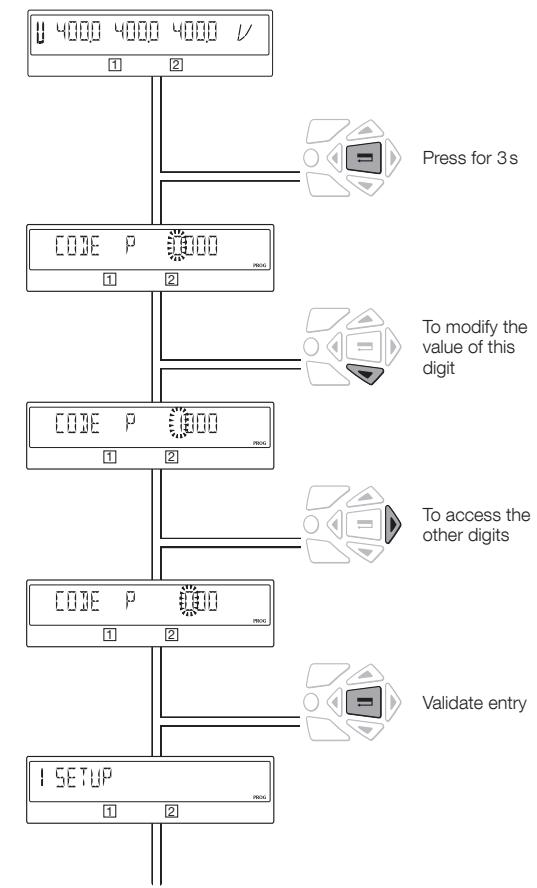

Browsing

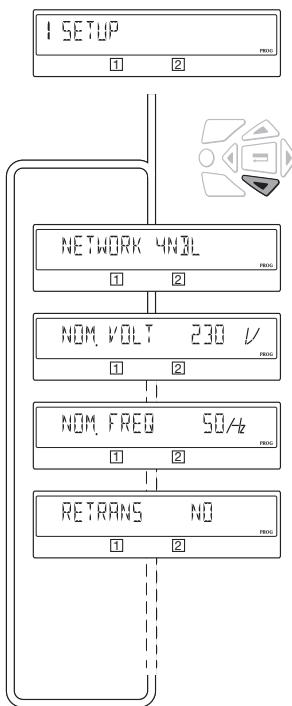


Exit programming



TIMERS		SETTING RANGE	DEFAULT VALUE
1FT	Loss of source 1 Validation timer.	0 to 60 sec(1)	3 sec
1RT	Source 1 return validation timer.	0 to 7200 sec	180 sec
2FT	Loss of source 2 Validation timer.	0 to 60 sec	3 sec
2RT	Source 2 return validation timer.	0 to 3600 sec	5 sec
2AT	Standby network stability validation before transfer.	0 to 7200 sec	5 sec
2CT	Run on timer.	0 to 600 sec	180 sec
ODT	Dead band timer.	0 to 20 sec	3 sec
PARAMETERS		SETTING RANGE	DEFAULT VALUE
NEUTRAL	Neutral position on the switch AUTO: neutral position is automatically detected when the product is supplied the first time. LEFT: neutral must be connected to the left that means on the terminal 1 from each switch. RIGHT: neutral must be connected to the right that means on the terminal 7 from each switch.	AUTO	
		LEFT	AUTO
		RIGHT	
NOM. VOLT.	Nominal voltage Phase/phase or phase/neutral in 1BL and 41NBL	From 180 to 480 Vac 230Vac (127/230V version)	400Vac (230/400V version)
NOM. FREQ.	Nominal Frequency	50 or 60Hz	50Hz
APP	Type of application M-G: network - Genset M-M: network - network	M-G M-M	M-G
RETRANS	Retransfer inhibit feature, press on Validation button required to allow retransfer from Gen to Main	YES or NO	NO
NETWORK	Network configuration*	3NBL / 4NBL / 41NBL / 1BL (230/400V version) 4NBL / 3NBL / 2NBL / 42NBL (127/230V version)	4NBL

(1) 0 to 3600 secs in M-M network

* The wiring must be adapted to the network configuration. Below, the main configuration types.




6 Automatic operation

Close the front cover as shown to put the product into automatic mode.




7 Manual operation

- Open the front cover as shown to put into manual mode.
- Use the handle situated in the front panel under the cover to operate the transfer switch.
- Check the changeover switch position on the indicator before operating.

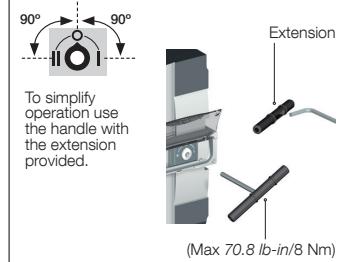

8 Padlocking mode

- In order to padlock put the product in manual mode.
- Pull the locking mechanism and insert a padlock as shown.
- As standard padlocking in the 0 position. Configurable to I-O-II (see step 1).

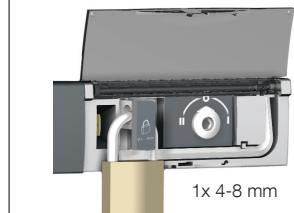

CORPORATE HQ CONTACT:
SOCOMECA SAS,
1-4 RUE DE WESTHOUSE,
67235 BENFELD, FRANCE.

Non contractual document.
© 2023, Socomec SAS. All rights reserved.




4. ATyS P M VERSIONS

The ATyS p M is available as a 4P product with integrated 230/400Vac control voltage taken directly off the power section. On option it is available with RS485 communication.(Modbus Slave).

4.1. Product presentation

This quick-acting source transfer switch incorporates:

1. 2 mechanically interlocked switches including an electronic control-command module.
2. A quick-acting electric control unit enabling automatic or manual system operation.
3. Electrical specifications compliant with product standards, and a version identification.
4. Changeover switch wiring identification.
5. Control connections.
6. An RJ45 connection for a remote interface D10 / D20.
7. A connector for RS485 communication (Modbus), for the version with communication.

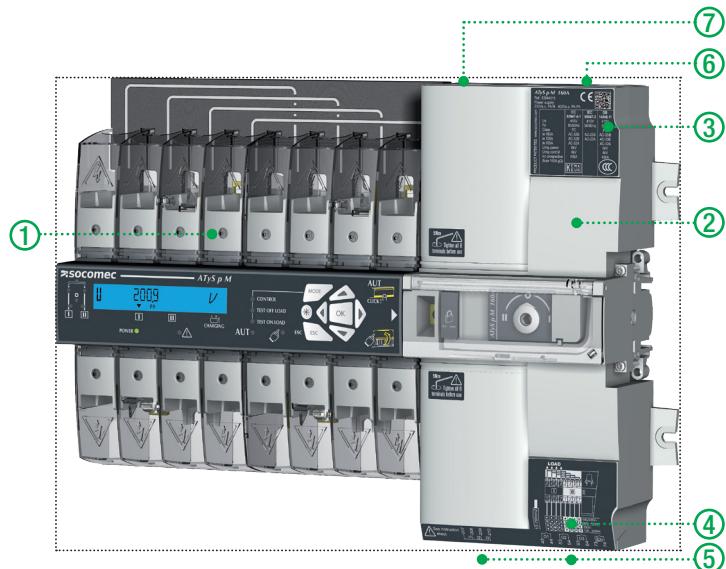

CAUTION ! Ensure that the load is connected to the top of the switch with the motorisation on the right hand side as shown.

4.2. Specifications and advantages

1 - Power section:

A fully integrated and interlocked transfer switch, with high electrical performance offering microprocessor control and monitoring.

2 - Operation:

A flexible operating mechanism enabling quick motorised transfer in automatic mode or locally in manual mode for emergency operations. Features a locking device to ensure (in position zero) a secured isolation of the load (padlocked).

4.3. Supply types

The power supply of ATyS p M is required to be 230VAC $\pm 30\%$ at a frequency of 50/60 Hz and has been developed so as to meet most network configurations.

Product's working ranges:

	Version 230 / 400 VAC		Version 127 / 230 VAC	
	Umin	Umax	Umin	Umax
Ph-N	160	305	160	305
Ph-Ph	277	528	160	305

5. OPTIONAL ACCESSORIES

Auxiliary contacts	Each product can take up to 2 auxiliary contact blocks. Each accessory integrates 1 NO/NC auxiliary contact (for each position I, O and II) 1309 1001 or NO/NC for 1309 1011. Characteristics: 250 VAC / 5 A maximum.		Ref.: 1309 1001 Ref.: 1309 1011
Bridging bars	To provide a common point on the outgoing side of the switch (load side).		2 Refs are available: Rating ≤ 125A: 1309 4006 and rating 160A: 1309 4016
Remote control interfaces D10/D20	<ul style="list-style-type: none"> - Use. Adapted to applications requiring the changeover switch to be fitted inside the cabinet. Product self-supplied via the RJ45 connection lead with ATyS M. Maximum connection distance: 3 m. - D10. For transferring source and changeover switch statuses to the cabinet front panel. IP rating: IP21. - D20. In addition to the D10 interface functions, enables configuration, checking, tests and measurements display. IP rating: IP21. - Door mounted. 2 holes, ø 22.5. Connection to ATyS M via the Socomec 1599 2009 connection cable. 		Ref. D10: 1599 2010 Ref. D20: 1599 2020
Connecting cable for remote interfaces	For connecting between a remote interface and a checking product. RJ45 3m straight uninsulated cable.		Ref.: 1599 2009
Voltage sensing and power supply tap	It allows connection of 2 x 1.5 mm ² voltage sensing or power cables. The single-pole voltage sensing tap can be mounted in the terminals without reducing their connecting capacity. Do not use with the bridging bar.		Ref.: 1399 4006 2 parts/ref.
Terminal shrouds	Protection against direct contacts with terminals or connecting parts. Other features: Perforations allowing remote thermographic inspection without removal. Possibility of sealing.		Ref.: 2294 4016 2 parts/ref.
Enclosure	Fully dedicated to ATyS M use, this polycarbonate enclosure provides easy access to a compact, enclosed transfer switch.		Ref.: 1309 9006
Extension unit	Combined with the polycarbonate enclosure, the extension box creates extra space for routing cables with a larger diameter.		Ref. : 1309 9007
Power connection terminals	The power connection terminals allow conversion of the cage terminals into bolt-on type connection terminals, enabling connection of up to two 35mm ² cables or one 70mm ² cable. Each power connection terminal is provided with separation screens.		Ref. : 1399 4017 For complete conversion, order 3 times the reference.
Auto-transformer	For use with ATyS M in 400 VAC three-phase applications without a distributed neutral. As the ATyS M has integrated measurement and power supply circuits, a neutral connection is required for 400 VAC three-phase applications. When no neutral connection is available this autotransformer (400/230 VAC, 400 VA) provides the 230 VAC required for the ATyS M to function.		Ref. : 1599 4121

6. TECHNICAL DATA

Ratings		40A	63 A	80 A	100 A	125 A	160 A
Frequencies		50/60 Hz					
Thermal current I_{th} at 40 °C (A)		40	63	80	100	125	160
Thermal current I_{th} at 50 °C (A)		40	63	80	100	110*	125
Thermal current I_{th} at 60 °C (A)		40	50	63	80	100*	125
Thermal current I_{th} at 70 °C (A)		40	40	50	63	80*	100
Rated assigned insulation voltage U_i (V) (Power circuit)		800	800	800	800	800	800
Rated impulse withstand voltage U_{imp} (kV) (power circuit)		6	6	6	6	6	6
Rated insulation voltage U_i (V) (control circuit)		300	300	300	300	300	300
Rated impulse withstand voltage U_{imp} (kV) (control circuit)		2.5	2.5	2.5	2.5	2.5	2.5
Rated operational currents (A) IEC 60947-3 at 415VAC at 40 °C	AC 21A / 21 B	40/40	63/63	80/80	100/100	125/125	160/160
	AC 22A / 22 B	40/40	63/63	80/80	100/100	125/125	125/160
	AC 23A / 23 B	40/40	63/63	80/80	100/100	125/125	125/160
Rated operational currents (A) IEC 60947-6-1 415Vac at 40 °C	AC 33B / AC32B **AC 33iB	40/40	63/63	80/80	100/100	125/125	125**/160
Fuse protected short-circuit withstand if using gG DIN fuses	Fuse protected short-circuit withstand (kA eff)	50	50	50	50	50	40
	Associated fuses (gG DIN)	40	63	80	100	125	160
Short-circuit capacity	Rated short-term withstand current: I_{cw} 1s (kA eff)	4	4	4	4	4	4
	Rated short-term withstand current: I_{cw} 30ms (kA eff)	10	10	10	10	10	10
Switching time at I_n excluding loss of supply sensing time and excluding any delay timers applicable.	I-II or II-I (ms)	180	180	180	180	180	180
	Duration of "electrical blackout" at U_n (ms)	90	90	90	90	90	90
	I-O / O-I / II-O / O-II (ms)	45	45	45	45	45	45
Consumption	Inrush current(A)	20	20	20	20	20	20
	Consumption in stabilised state (VA)	6	6	6	6	6	6
Mechanical characteristics	Number of changeovers	10000	10000	10000	10000	10000	10000
Connection cross-section (Δ not compatible with aluminium cables)	Minimum size (Cu mm ²), flexible and rigid	10	10	10	10	10	10
	Maximum size (Cu mm ²), flexible and rigid	70	70	70	70	70	70
Equipment class (According to IEC 60947-6-1)	PC	PC	PC	PC	PC	PC	PC
EMC environment	A	A	A	A	A	A	A

* Possibility of reaching 125A with bigger connection cross-sections and use of the 160A bridging bar.

** AC 33iB 160A according to GB 14048.11.

 This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

7. ENVIRONMENTAL CONDITIONS



Humidity

- 80 % humidity without condensation at 55 °C
- 95 % humidity without condensation at 40 °C



Temperature

- -20 +40 °C without de-rating
- $40^{\circ}\text{C} < t \leq 70^{\circ}\text{C}$ with de-rating (see Technical Characteristics)



Altitude

- Up to 2000m

Correction factors:

	2 000 m < A ≤ 3 000 m	3 000 m < A ≤ 4 000 m
UE	0.95	0.80
le	0.85	0.85

Storage



- 1 year maximum
- Maximum storage temperature: +55 °C
- 80 % humidity without condensation at 55 °C



IP rating

- IP41 in the SOCOMEC polycarbonate modular enclosure see page 20
- IP2x for non-enclosed modular product

Protection class: Class 1

8. PRODUCT INSTALLATION

! Prior to installation of the product ensure that the padlocking setting screw (located at the back of the product) is configured as per your requirements.

For locking in Positions I, II and 0, refer to the following procedure.


8.1. Changing the padlocking configuration

To configure the locking in the 3 positions:


STEP1: loosen the screw at the back of the product as shown below.

STEP2: slide the screw upwards.


STEP3: tighten the screw in the top position as shown.

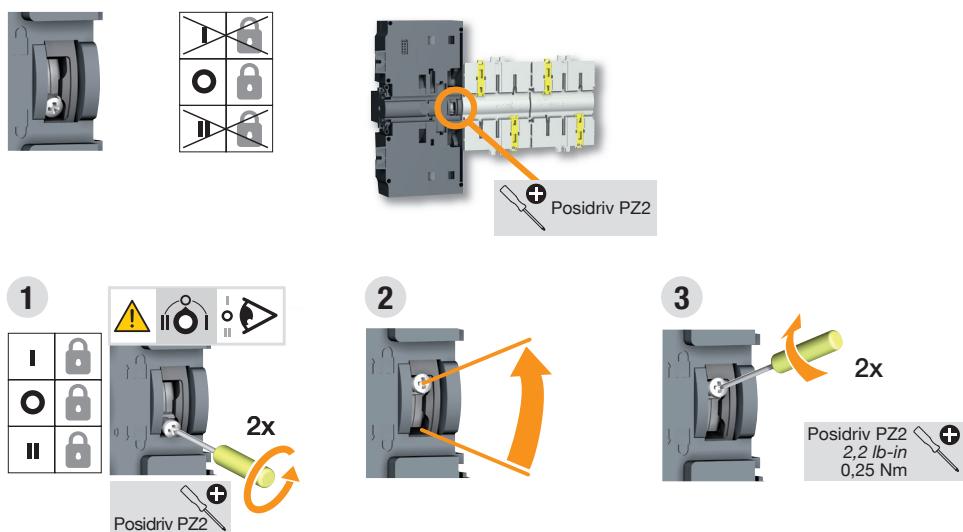


8.2. Recommended orientation

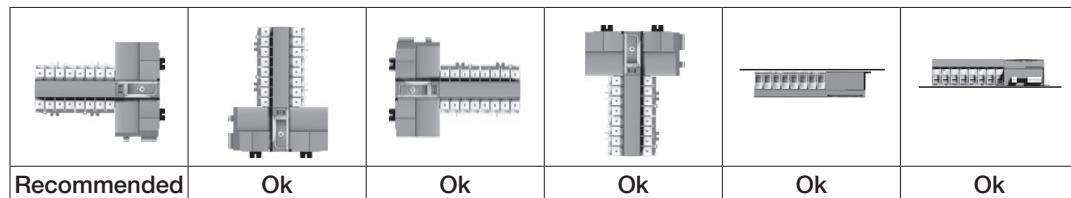


8.3. Dimensions

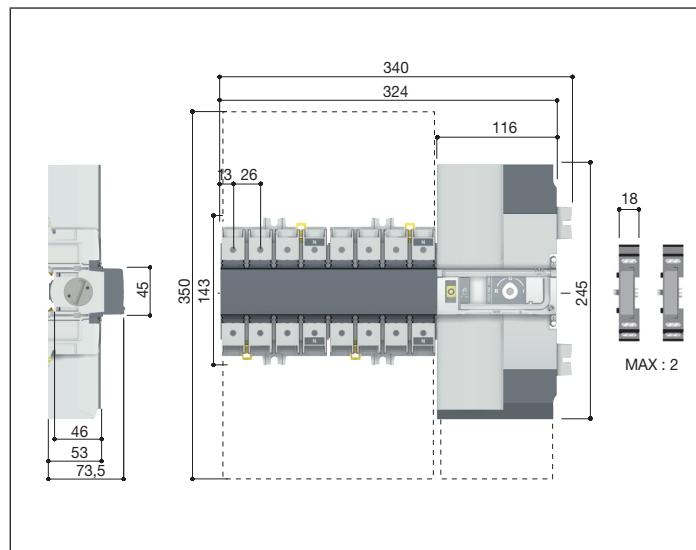

8.4. Back plate mounted

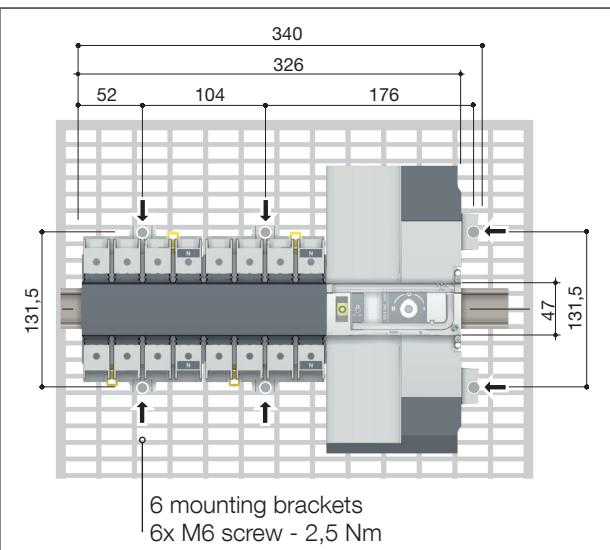

8.5. DIN rail mounted

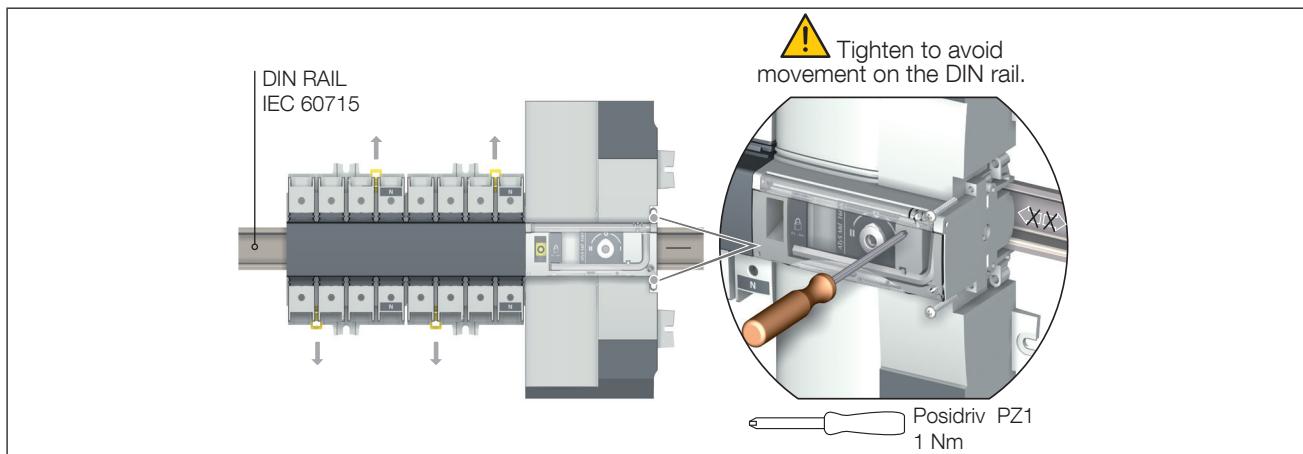


9. INSTALLATION OF OPTIONAL ACCESSORIES

9.1. Auxilliary contacts

Ref. 1309 1001 or ref. 1309 1011.

To fit an AC, the switch must first be put in the 0 position. An auxiliary contact module comprises: one NO/NC changeover contact for each position (I-0-II). To install use the screws supplied with the module.

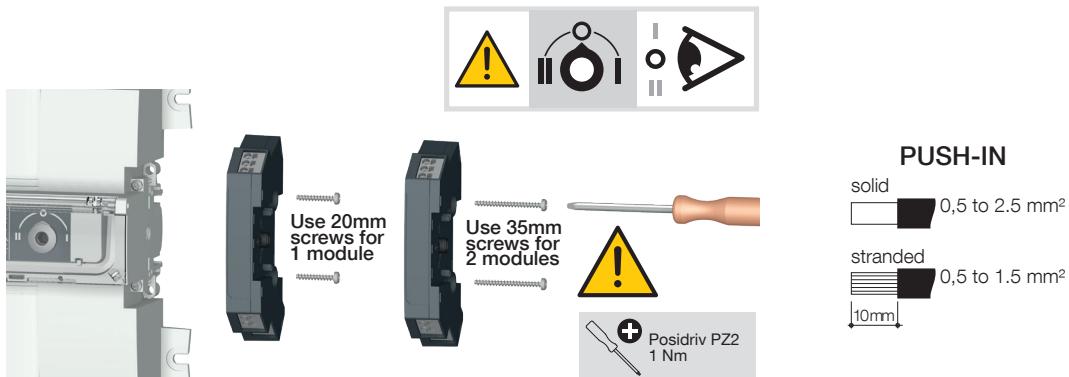


9.2. Voltage sensing and power supply tap

Ref. 1399 4006.


This provides 2 connection terminals for conductors with cross-section $\leq 1.5 \text{ mm}^2$.

The single pole terminals can be fitted in any of the terminal cages without reducing the cage connection capacity. 2 parts/ref. Do not use in case of use of the bridging bar.



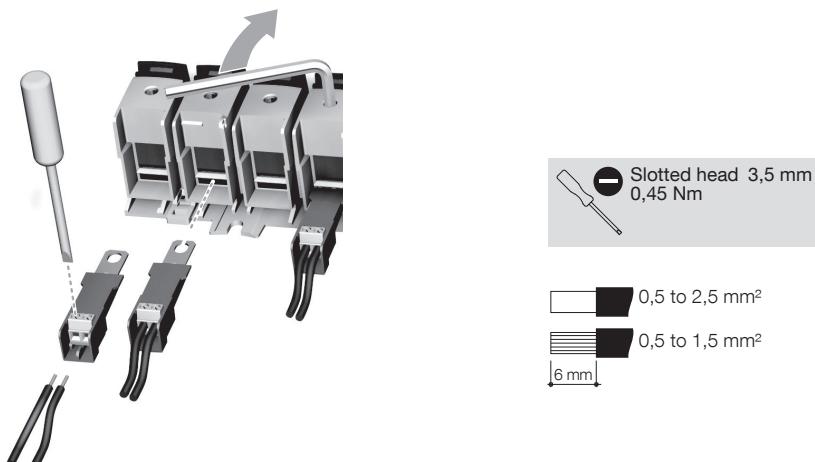


9.3. Bridging bars 4P

Ratings \leq 125A: ref. 1309 4006; 160A: ref. 1309 4016

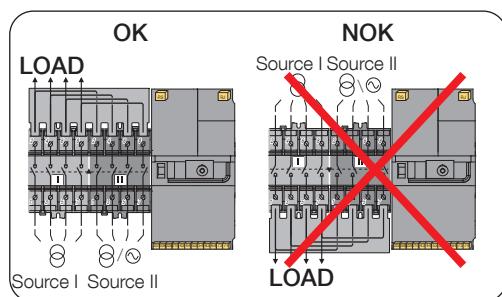

Bridging bar.
125A: 1309 4006
160A: 1309 4016

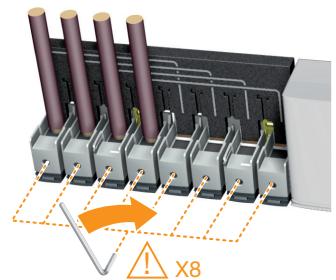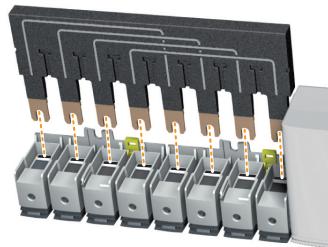

! Make sure that the bridging bar is fitted to the correct set of terminals.
There are two references available: one for ratings up to 125A, and another for 160A rating.

9.4. Terminal shrouds

Ref. 2294 4016



10. INSTALLING WITHIN THE ATYS M ENCLOSURE


10.1. Polycarbonate enclosure

Ref. 1309 9006

Dimensions and mounting

The enclosure must be wall-mounted using screws (not supplied). Recommended size: M6 50 mm (minimum). Weight: between 8 and 10 kg, depending on the accessories.

 Only 1 aux contact block may be installed when using this enclosure.

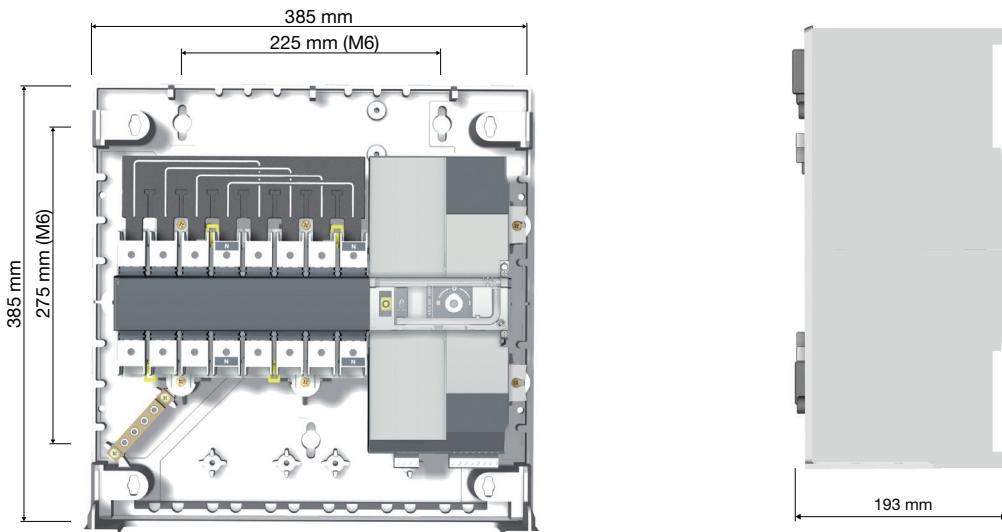


10.1.1. Wiring in a polycarbonate enclosure

Example: Neutral on the right



Max cable size 25 mm²

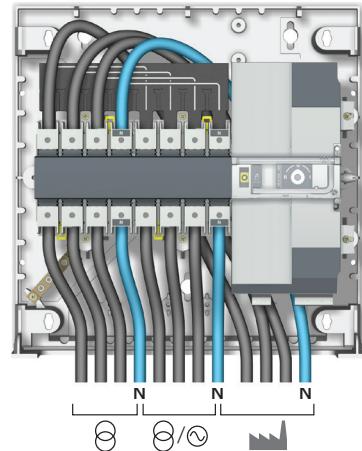

10.1.2. Extension unit

Ref. 1309 9007



Enables you to allocate additional space to the polycarbonate enclosure (ref. 1309 9006).


11. CONNECTION OF THE POWER CIRCUITS



Source supply side



10 to 70 mm²
15mm

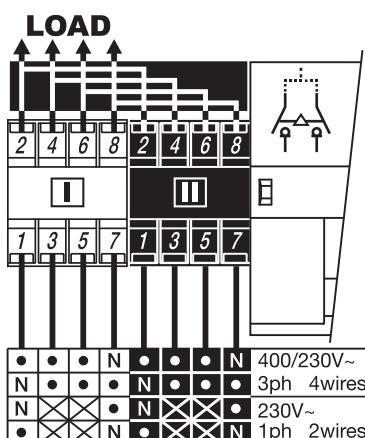

⚠ It is essential to tighten all used terminals, with cables and/or bridging bars, before use.

11.1. Ratings / cross-sections table of correspondence

	40 A	63 A	80 A	100 A	125 A	160 A
Min cable size recommended (mm ²)	10	16	25	35	50	50
**Max cable size recommended (mm ²)	50	50	50	50	70*	70*

*With extension unit.

** Maximum cable size for rigid cable is 50 mm². For larger terminations use the power connection terminals ref. 1399 4017.

⚠ Not compatible with aluminium cables











11.2. Parallel pole set-up for a 4P device used in single phase

Rating conversion table for use in single phase and two-by-two parallel pole set up.
(Max ambient temperature = 40 °C).

Nominal current rating in three-phase (A)	Nominal current rating in single-phase (2 poles in //) (A)
40	63
63	100
80	125
100	160
125	200
160	250

11.3. Network configurations

11.3.1. Voltage configurations for 230/400VAC versions

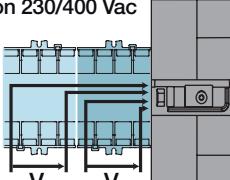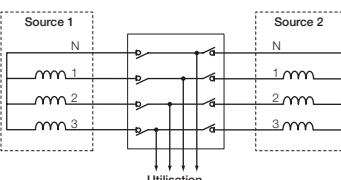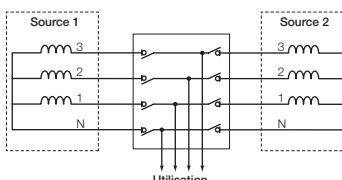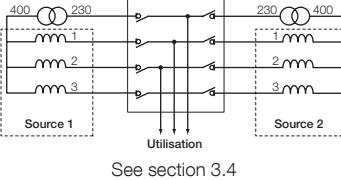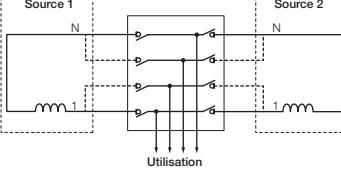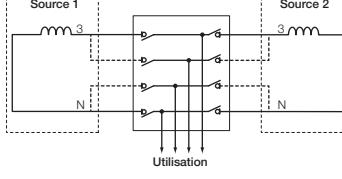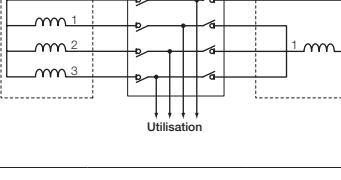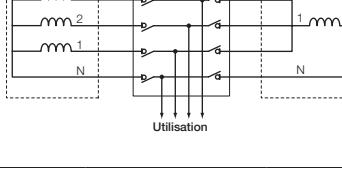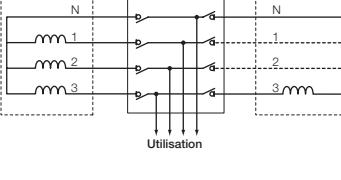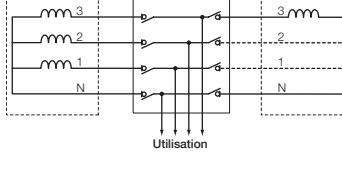Type		Name	Neutral Position (1)	Wiring								
				Source I								
Version 230/400 Vac  V = 160-305 Vac 45-65 Hz		4NBL	Left	N	L1	L2	L3	N	L1	L2	L3	
Neutral on the left	Neutral on the right											
		3NBL	Right	L3	L2	L1	N	L3	L2	L1	N	
			1BL		L1	L2	L3		L1	L2	L3	
												
		41 NBL	Left	N	(N)	(L1)	L1	N	(N)	(L1)	L1	
					L1	(L1)	(N)	N	L1	(L1)	(N)	
		42 NBL	Left	N	L1	L2	L3	N	L1	L1	L1	
					L3	L2	L1	N	L1	L1	N	
		42 NBL	Left	N	L1	L2	L3	N	(L1)	(L2)	L3	
					L3	L2	L1	N	L3	(L2)	(L1)	

--- : optional wiring



CAUTION ! Neutral must be wired on the left or the right.

(1) Neutral position on the product

The neutral position should be configured in the setup menu:

- auto : the neutral position is defined automatically each time the cables are connected

- Neutral on the left: neutral forced left

- Neutral on right: neutral forced right

Detections							Monitoring/Display (4)				Vectors	
Neutral (2)		Rotation (3)		Balancing								
Srce I	Srce II	Srce I ≠ Srce II	Srce I	Srce II	Srce I	Srce II	Source I		Source II			
							Ph-Ph	Ph-N	Ph-Ph	Ph-N		
Left	Left	Yes	ABC ACB	ABC ACB	Yes	Yes	3 U	3 V	3 U	3 V		
Right	Right	Yes	ABC ACB	ABC ACB	Yes	Yes						
Left	Left	Yes	ABC ACB	ABC ACB	Yes	Yes	3 U	0 V	3 U	0 V		
Right	Right	Yes	ABC ACB	ABC ACB	Yes	Yes						
EITHER	EITHER	No	EITHER	EITHER	No	No	0 U	1 V	0 U	1 V		
EITHER	EITHER	No	EITHER	EITHER	No	No						
Left	Left	Yes	ABC ACB	EITHER	Yes	No	3 U	3 V	0 U	1 V		
Right	Right	Yes	ABC ACB	EITHER	Yes	No						
Left	Left	Yes	ABC ACB	EITHER	Yes	No	3 U	3 V	1 U	0 V		
Right	Right	Yes	ABC ACB	EITHER	Yes	No						







(2) yes: the product recognises whether the network 1 neutral position is not the same as for network 2: an error message is then displayed FO3 - NEUTRAL
 no: the product does not recognise whether the network 1 neutral position is different from network 2: the measurements may be incorrect
 EITHER: position undetermined

(3) It is possible to configure the direction of phase rotation in the Setup menu: clockwise or anti-clockwise EITHER: the phase rotation is not controlled.

Phase rotation detection can also be disabled in the Setup menu by checking "NO" on the CHECK ROT parameter.

(4) : controlled voltage

11.3.2. Voltage configurations for 127/230VAC versions

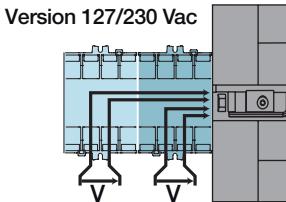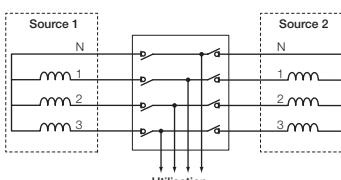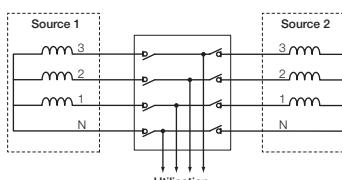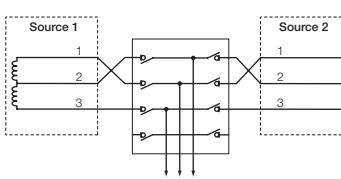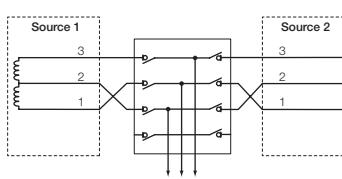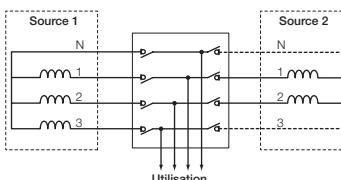Type		Wiring								
 Version 127/230 Vac $V = 160-305\text{ Vac } 45-65\text{ Hz}$										
Neutral on the left		Source 1						Source 2		
 4 NBL	Left	N	L1	L2	L3	N	L1	L2	L3	
		L3	L2	L1	N	L3	L2	L1	N	
 3 NBL	Left		L1	L2	L3		L1	L2	L3	
		L3	L2	L1		L3	L2	L1		
 2NBL	Left	M	L1	L3		M	L1	L3		
			L3	L1	M		L3	L1	M	
 2BL	Left	(L1)	L1	L2	(L2)	(L1)	L1	L2	(L2)	
		(L2)	L2	L1	(L1)	(L2)	L2	L1	(L1)	
 42 NBL	Left	N	L1	L2	L3	(N)	L1	L2	(L3)	
		L3	L2	L1	N	(L3)	L2	L1	(N)	

--- : optional wiring













CAUTION ! Neutral must be wired on the left or the right.

(1) Neutral position on the product

The neutral position should be configured in the setup menu:

- auto : the neutral position is defined automatically each time the cables are connected
- Neutral on the left: neutral forced left
- Neutral on right: neutral forced right

Detections							Monitoring/Display (4)				Vectors
Neutral (2)		Rotation (3)		Balancing			Source 1		Source 2		
Srce 1	Srce 2	Srce 1 ≠ Srce 2	Srce 1	Srce 2	Srce 1	Srce 2	Source 1		Source 2		
							Ph-Ph	Ph-N	Ph-Ph	Ph-N	
Left	Left	Yes	ABC ACB	ABC ACB	Yes	Yes	3 U	3 V	3 U	3 V	
Right	Right	Yes	ABC ACB	ABC ACB	Yes	Yes					
Left	Left	Yes	ABC ACB	ABC ACB	Yes	Yes	3 U	0 V	3 U	0 V	
Right	Right	Yes	ABC ACB	ABC ACB	Yes	Yes					
Left	Left	No	EITHER	EITHER	No	No	3 U	0 V	3 U	0 V	
Right	Right	No	EITHER	EITHER	No	No					
EITHER	EITHER	No	EITHER	EITHER	No	No	1 U	0 V	1 U	0 V	
EITHER	EITHER	No	EITHER	EITHER	No	No					
Left	Left	Yes	ABC ACB	EITHER	Yes	No	3 U	3 V	1 U	0 V	
Right	Right	Yes	ABC ACB	EITHER	Yes	No					

(2) yes: the product recognises whether the network 1 neutral position is not the same as for network 2: an error message is then displayed FO3 - NEUTRAL
 no: the product does not recognise whether the network 1 neutral position is different from network 2: the measurements may be incorrect
 EITHER: position undetermined

(3) It is possible to configure the direction of phase rotation in the Setup menu: clockwise or anti-clockwise EITHER: the phase rotation is not controlled.


Phase rotation detection can also be disabled in the Setup menu by checking "NO" on the CHECK ROT parameter.

(4) : controlled voltage

11.3.3. Three phase without neutral network

For three-phase networks without neutral (3NBL) 400Vac, a neutral must be recreated to allow the ATyS p M to operate at 230Vac. To recreate the neutral, we recommend the use of quantity 2x 400VA auto-transformers connected as shown below. The neutral position must be programmed in the SETUP Menu as neutral on the left or neutral on the right and wired accordingly.



The example below shows the wiring for a product configured with neutral on the left.

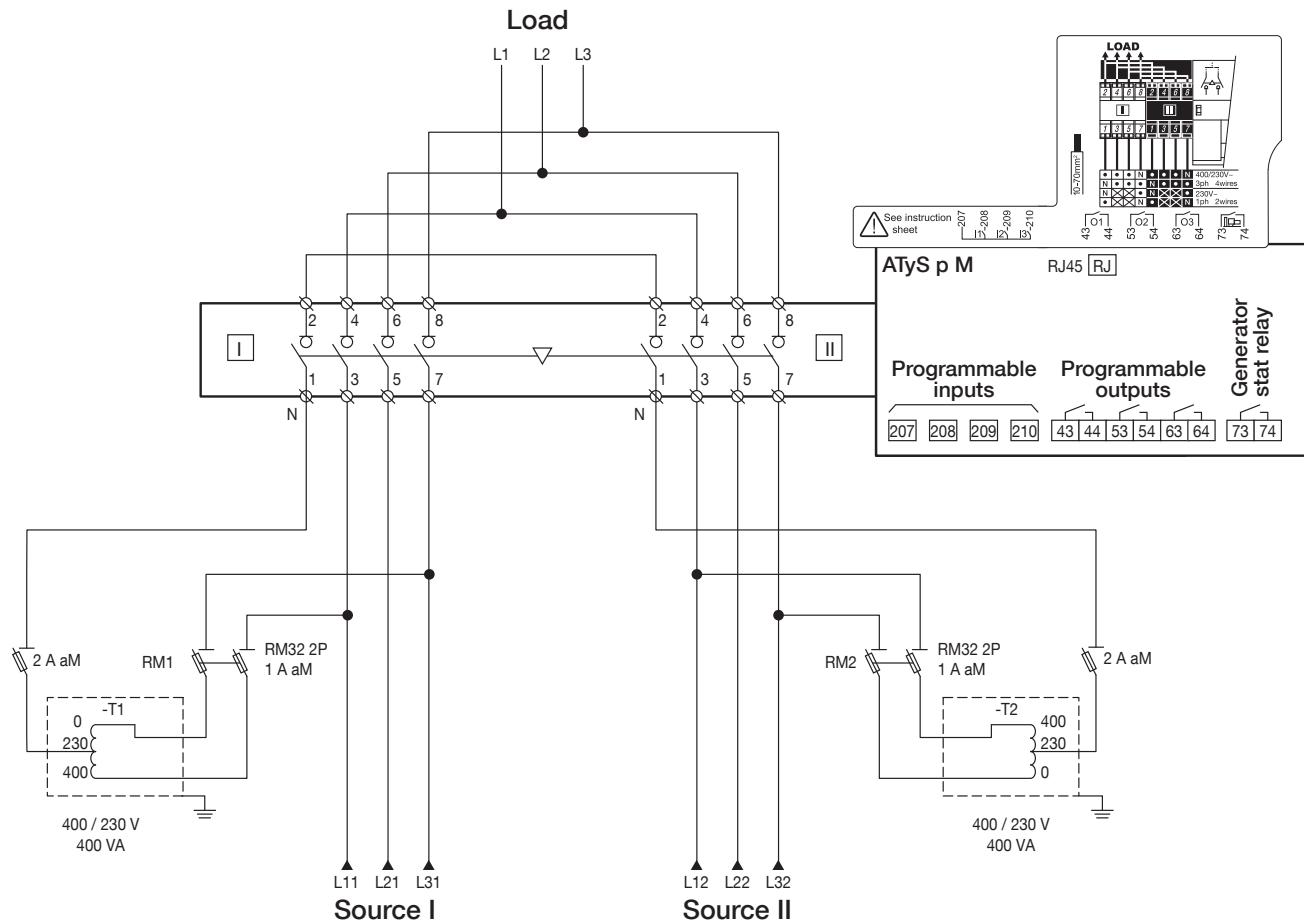

In case of use with an auto-transformer, the monitoring of phases rotation is not available.

12. CONNECTION OF CONTROL/COMMAND CIRCUITS

⚠ Switch to manual mode before connecting the product. (Front Auto/Manu cover open). The product is delivered in the 0 position.

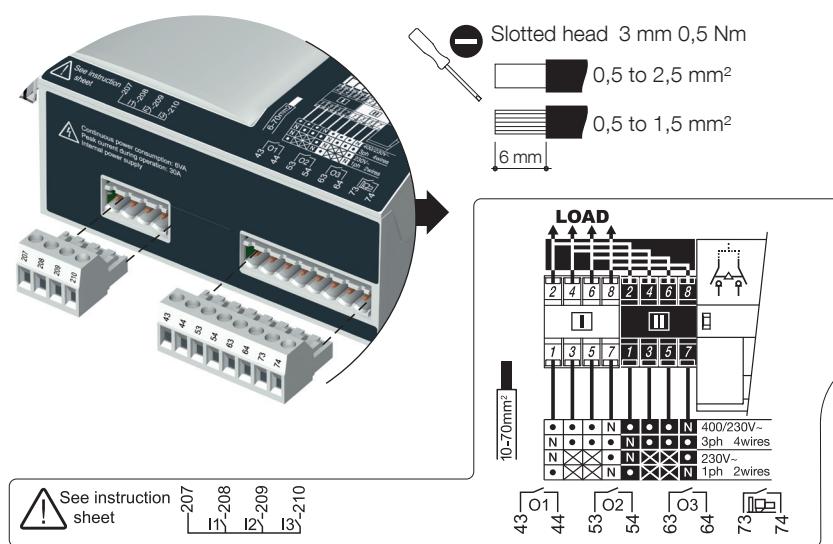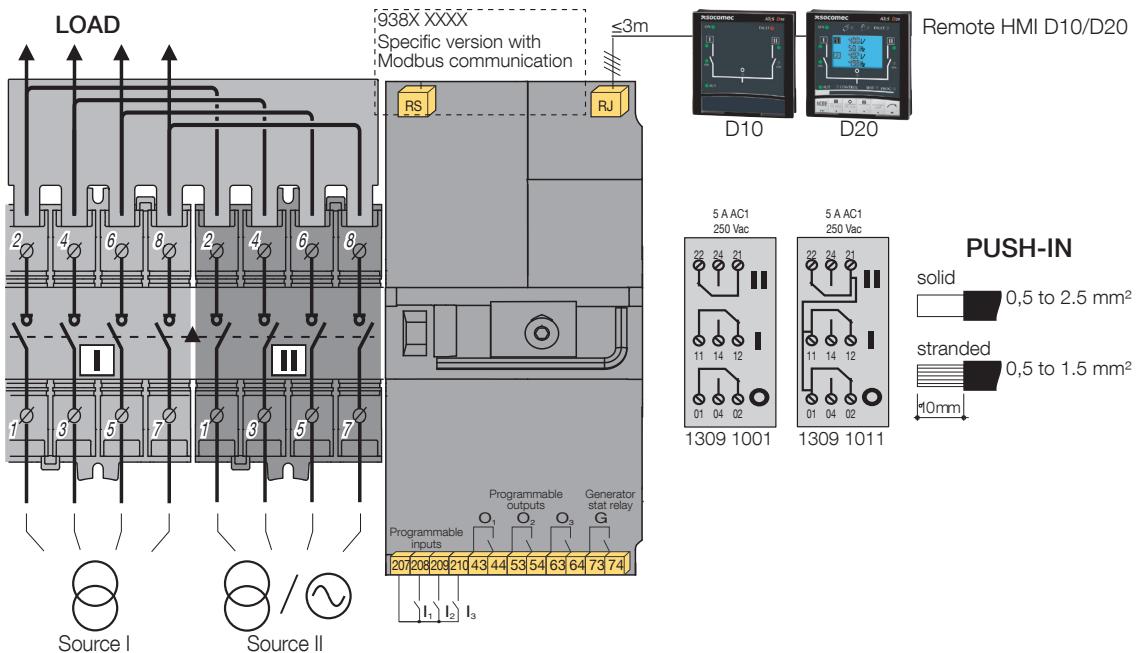

All pressure on the connector pins is to be avoided during wiring of the auxiliary cables.



The product is delivered in the 0 position and in auto mode. Maximum control cables length = 10 m. In case of longer distance, use control relays.

Source must always be connected as show above.




Ensure that the product is in Manual Mode (front cover open).

12.1. Terminal connectors designation

Type	Terminal no.	Description	Characteristics	Recommended connection cross-section
Inputs	207	Common point for inputs	Do not connect to any power supply Supply from the product	0.5 to 2.5 mm ² (rigid)
	208	I1: programmable input		
	209	I2: programmable input		
	210	I3: programmable input		
Outputs	43/44	O1: programmable output	Resistive load 2A 30Vdc 0.5A 230Vac Pmax: 60W or 115VA Umax: 30Vdc or 230Vac	0.5 to 1.5 mm ² (stranded)
	53/54	O2: programmable output		
	63/64	O3: programmable output		
	73/74	G: generator start signal		
Remote interface connection	RJ	ATyS D10/D20 human/machine interface	Maximum distance 3 m	RJ45 8/8 straight cable Cat. 5
Serial connection (specific version)	RS485	Connection RS485 0: interconnection of cable shielding upstream and downstream of RS485 bus -: negative terminal of RS485 bus +: positive terminal of RS485 bus	RS485 bus insulated	LiYCY shielded twisted pair, 0.5 to 2.5 mm ²

Type	Terminal no.	Status of the contact	Description	Output characteristics	Recommended connection cross-section
Auxiliary contact block 1309 1001	11/12/14	11— ¹⁴ —12	Changeover switch in position I	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	0.5 to 2.5 mm ² (rigid)
	21/22/24	21— ²⁴ —22	Changeover switch in position II	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	
	01/02/04	01— ⁰⁴ —02	Changeover switch in position 0	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	
Auxiliary contact block 1309 1011	11/12/14	11— ¹⁴ —12 21— ²⁴ —22 01— ⁰⁴ —02	Changeover switch in position I	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	0.5 to 1.5 mm ² (stranded)
	21/22/24		Changeover switch in position II	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	
	01/02/04		Changeover switch in position 0	250V AC 5A AC1 24VDC 2A AC13 - 250VAC - 2A	


12.2. Auxiliary contact operating schedule

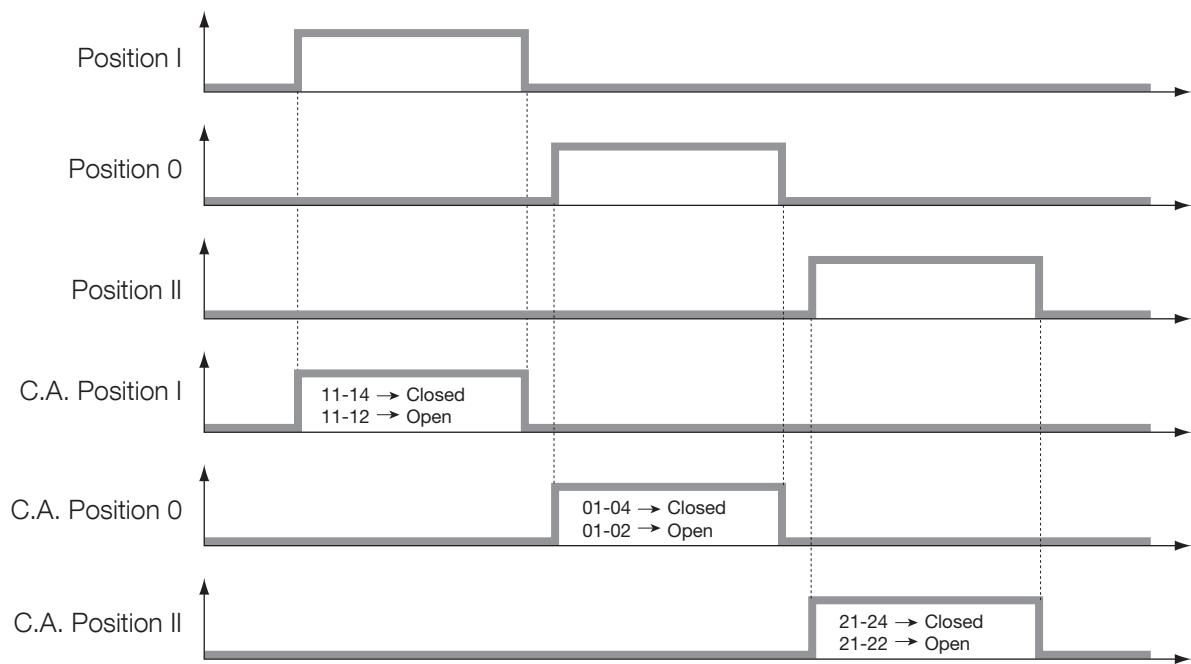

13. OPERATION

13.1. Presentation of the product interface

The LED signalling is only active when the product supply is on (supply LED lit)

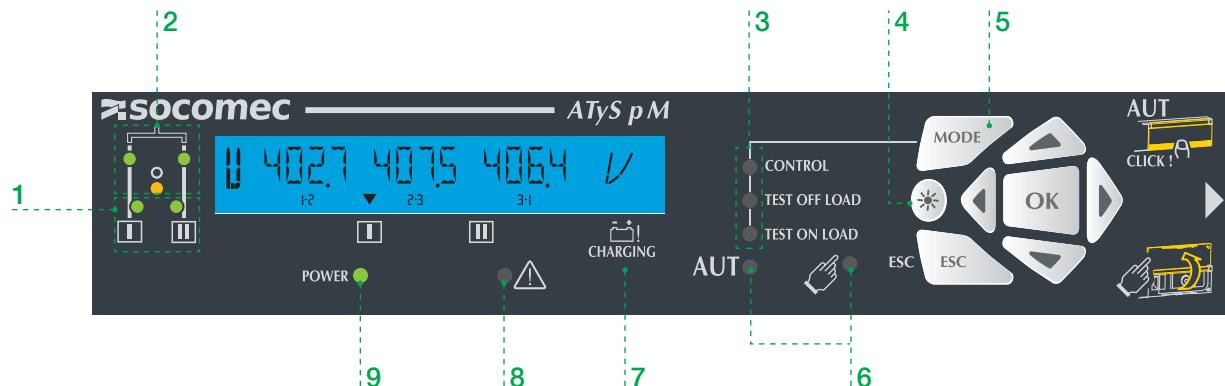

1. Availability of sources

- 2 green LEDs to indicate whether source I and/or source II are available (voltages and frequencies check).
 - LED lit = source available.
 - LED off = source unavailable.

2. Position of the switch

- 2 green LEDs
 - LED I lit = switch in position I
 - LED II lit = switch in position II
- 1 yellow LED
 - LED lit = switch in position 0

3. Test/Control modes

- 2 yellow LEDs for the test on load and test off load which are linked to the test mode selection button so as to facilitate selection.
- 1 yellow LED for the control function. The user may force the position of the switch.

4. LED test button

- : Illuminates all LEDs to test their operation.

5. Mode button

- Test mode selection button.

6. Operating mode (Auto/Manu)

- : 1 yellow LED for MANU mode active.
- AUT : 1 green LED for AUTO mode active.

7. Capacitor charge indicator


- Return to zero capacitor charge. When the indicator flashes, the RETURN to 0 function is unavailable.

8. Fault LED

- 1 red LED to indicate the status of the product control fault. Open and close the AUT/MAN cover after clearing the fault.

9. Power supply LED

- 1 green LED
 - Always off: power supply off or software error if the other indicators are operational (LED and Screen).
 - Always lit: product power supply on.

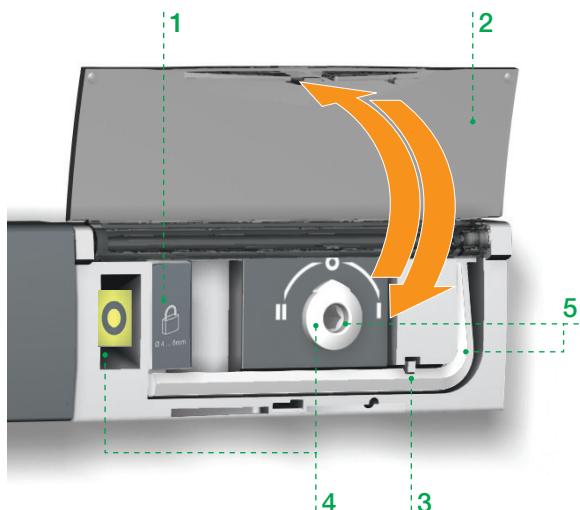

1. Locking

- Option to padlock using a 1 x 8 mm max. padlock.

2. AUT/MAN cover

- Open the cover to switch to manual mode.
- Close the cover to return to automatic (remote control) mode.
- Open and close the cover to clear faults.

3. Auto/Manual mode sensor

4. Switch position indicators

- Display of position I, 0, II.

5. Manual switching

- Insert the Allen key (5.0 mm) provided and turn to switch manually.
- Manual operation is not possible when padlocked.

13.1.1. Reset


Operating fault reset	Reset Software (without loss of the settings)
Open and re-close the AUT/MAN cover	Insert a pointed tip into the orifice on the upper part of the product.

13.2. Manual mode

To access manual mode, open the Aut/Man cover or use the input INH.


Once manual mode is active (cover open) it is possible:

- To access the programming and display menus.
- To lock the changeover switch.
- To operate the changeover switch using the handle.
- To start the genset via the off load test.

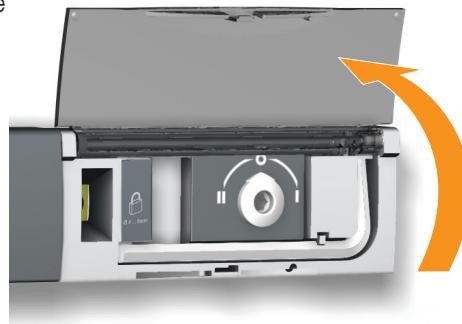

! As soon as manual mode is activated, all automatic actions are inhibited (except the starting order in case of mains loss). In case of loss of source, if input INH is activated, the manual mode is also activated, but the genset start order isn't delivered.

The automatic cycle is relaunched 2 seconds after the switch from MAN to AUTO mode. During this time nothing happens, and the AUTO LED will flash.

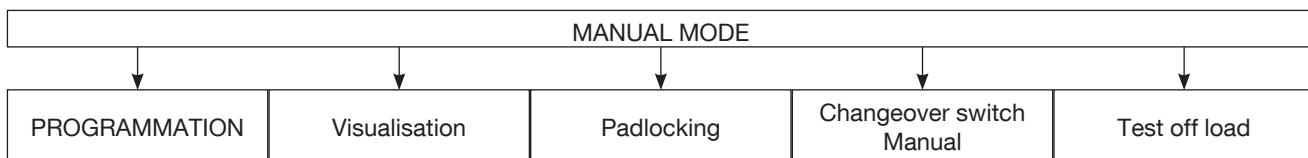


13.2.1. Manual switching

Use the handle situated on the front panel under the cover to manoeuvre the changeover switch. To simplify the operation, it is advised to also use the handle extension that is delivered with the product.

Check the changeover switch position on the indicator situated on the front panel before making any operation.

- From position I, turn anti-clockwise to get to position O
- From position O, turn anti-clockwise to get to position II
- From position II, turn clockwise to get to position O
- From position O, turn clockwise to get to position I

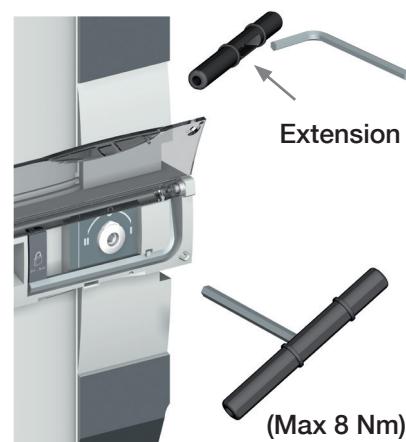

! Do not force the product (Max 8 Nm).

When the parameter MODE AUT is forced through programming, do not insert the operating handle into the manual operation housing.

13.3. Padlocking

Enables locking in the 0 position (factory configuration) or in positions I, 0 or II (user configurable).

It is necessary to configure padlocking to all positions before installation as access to configuration is at the back of the product. Refer to section «8.1. Changing the padlocking configuration», page 16

Locking is only possible in manual mode (cover open).


Pull on the locking handle to enable the interlock. Lock by inserting a padlock into the orifice provided for this purpose.



4 mm min
3/16" min
8 mm min
5/16" min

13.4. Front keypad navigation and general information

13.4.1. Keypad

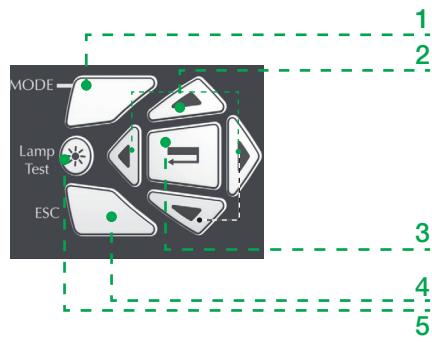


1. MODE key to shift between operation modes.
2. Navigation Keys to browse through the ATyS p menus without software.
3. Enter Key used to enter Prog Mode (Press and hold for 5 seconds) and to validate the settings programmed through the keypad.
4. ESC key used to escape from a specific screen up to the main menu.
5. Lamp test key to check the LED's and LCD screen.

13.4.2. Software version

The software version is displayed after the product has been switched on for the first time or when switched on after it has been off for several minutes (enabling its capacitors to fully discharge).

13.4.3. Display presentation

- Display mode is activated as soon as the device is switched on. It enables parameters visualisation whatever the functioning mode.
- The switchover cycles have priority over display mode, and display the time delay countdowns as soon as they are activated. Any value available in this mode is kept on the screen once displayed for 5 secs. After this time, or following a switchover cycle, the screen returns to source 1 phase-phase voltages display (1st screen in this mode).

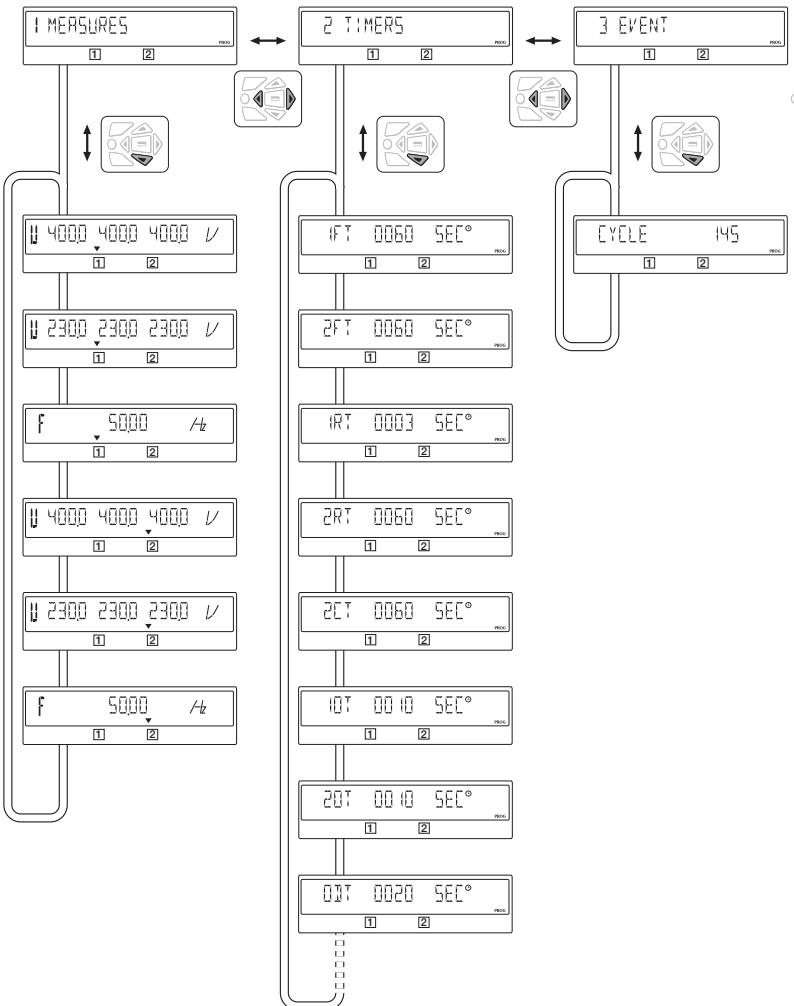


⚠ Dynamic display of the time delays has priority.

⚠ The alarms and faults status display also has priority.

13.4.4. Events

13.4.4.1. Encoding principle

Example

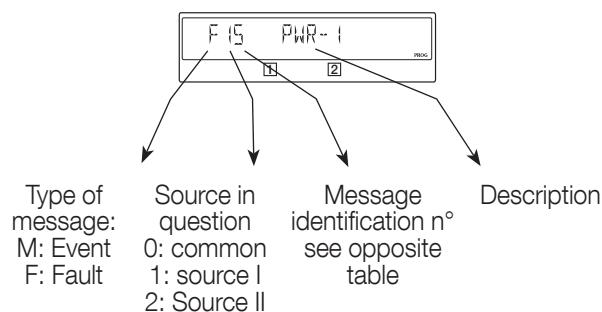












Message identification		
N°	Status message	Fault message
0	Manual switching	Duty cycle
1	Under-voltage	Fault
2	Over-voltage	Alarm
3	Under-frequency	Neutral wiring / Phase rotation mismatch
4	Over-frequency	Capacitor back to 0
5	Phase unbalance	Insufficient switchover power
6	Phase rotation	Position not reached

13.4.5. Events list

Message	Definition
M00 MANUAL ① ②	Manual switching
M11 UV1 ① ②	Under-voltage on source ①
M21 UV2 ① ②	Under-voltage on source ②
M12 OV1 ① ②	Over-voltage on source ①
M22 OV2 ① ②	Over-voltage on source ②
M13 UF1 ① ②	Under-frequency on source ①
M23 UF2 ① ②	Under-frequency on source ②

Message	Definition
M14 OF1 ① ②	Over-frequency on source ①
M24 OF2 ① ②	Over-frequency on source ②
M15 UNB1 ① ②	Phase unbalance on source ①
M25 UNB2 ① ②	Phase unbalance on source ②
M16 RDT1 ① ②	Incorrect direction of rotation on source ①
M26 RDT2 ① ②	Incorrect direction of rotation on source ②

13.4.5.1. Error messages list


Error message	Definition	Action	Reset
	Duty cycle		
	Limited number of operations in a defined period.	Wait 1 min. for the error message to disappear.	Automatic
	Source <input type="checkbox"/> I / source <input type="checkbox"/> II neutral wiring mismatch		
	The neutral on source <input type="checkbox"/> I is not wired on the same side as the neutral on source <input type="checkbox"/> II.	Rewire one of the two sources. E.g. both neutrals on the left, or both neutrals on the right.	Open and then close the cover
 	Source <input type="checkbox"/> I / source <input type="checkbox"/> II fault		
	This fault only appears if input FT1/FT2 (see I-O Menu) and the parameter 2ND TRIP (see Setup Menu) are activated. Activation of this fault shifts the changeover switch to position 0.	Resolve the external problem that caused activation of input FT1/FT2	Open and then close the cover or activate the RST input, if configured (see I-O Menu) or via RS485.
 	Alarm 1 / Alarm 2		
	This fault only appears if input AL1/AL2 is activated (see I-O Menu).	Resolve the external problem that caused activation of input AL1/AL2. Once this is done, the error message will automatically disappear.	Automatic
 	Phase rotation fault on source <input type="checkbox"/> I / source <input type="checkbox"/> II		
	The phase rotation does not correspond to the ROT PH. variable in the Setup menu.	Either invert two phases on source <input type="checkbox"/> I / source <input type="checkbox"/> II, or change the status of the ROT PH. variable in the Setup menu, if both sources are faulty.	Automatic
 	Return to zero capacitor charging fault on source <input type="checkbox"/> I / source <input type="checkbox"/> II		
	Recharging malfunction of capacitor associated with source <input type="checkbox"/> I / source <input type="checkbox"/> II.	Provisional action: deactivate the RETURN 0 function in the Setup menu (Set to NO), or open the cover and operate manually. Then: contact your retailer.	Open and then close the cover
 	Insufficient switchover power on source <input type="checkbox"/> I / source <input type="checkbox"/> II		
	The power is insufficient to leave position II/I.	Supply the power (U,I) from source I or II for at least 20 secs or open the cover and operate manually.	Open and then close the cover
  	Fault position 0, I, II		
	Following an electric or automatic order, position 0 / I / II is not reached.	Provisional action: open the Aut/Man cover and operate manually. Then: contact your retailer.	Change source status. Manual operation.
	Source starting timeout <input type="checkbox"/> II		
	If the genset does not start after the 2ST delay, the message will be sent.	Press the validation key. Check that 2ST is greater than 15s at 2AT.	Check the genset.

13.5. Programming

Whilst in manual mode check the wiring and installation. If ok power up the product. This product must always be put into service by qualified and approved personal.


13.5.1. Programming with EasyConfig

Download Easy Config Software free from www.socomec.com

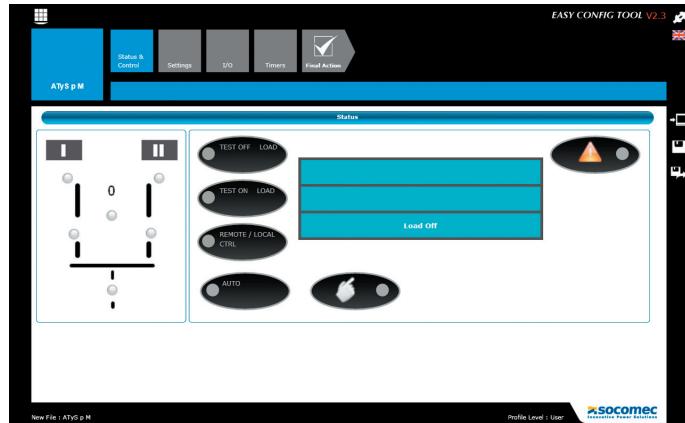

13.5.2. Product programming with the front keypad

Programming access is possible in Automatic mode, when the product is in position I with source I available, and in Manual mode whatever the position and the available source is.

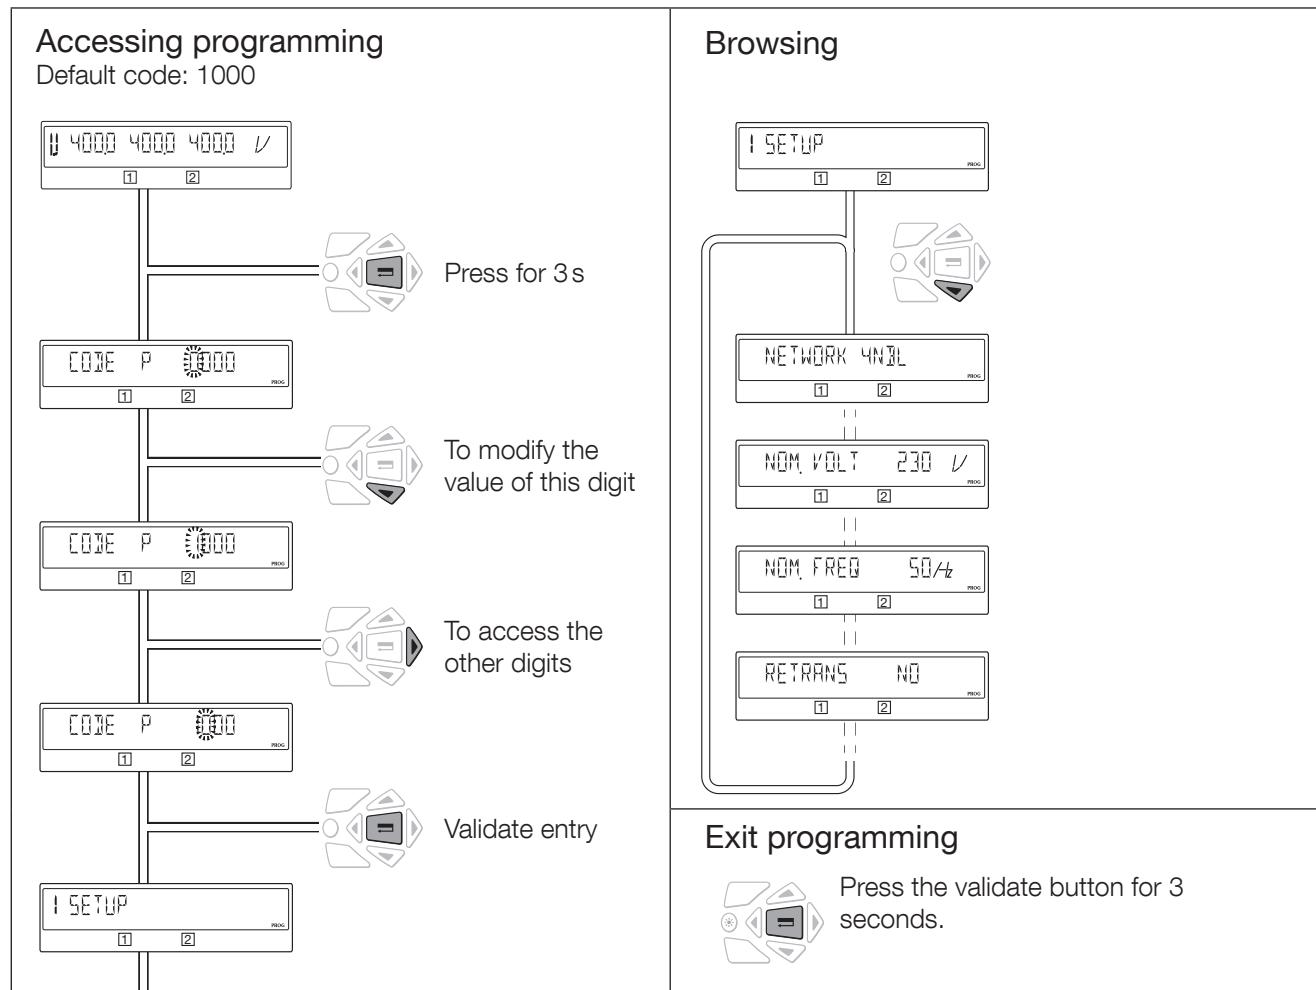



Note: To reset a fault indicator, see chapter «13.1.1. Reset», page 31

13.5.3. Programming mode

Depending on the type of application managed (Network-Network or Network-genset), some parameters in the SETUP menu may not be displayed.

For more details on the various operations, see sections «13. OPERATION», page 30, «13.2. Manual mode», page 31, «13.6. Automatic mode», page 54.

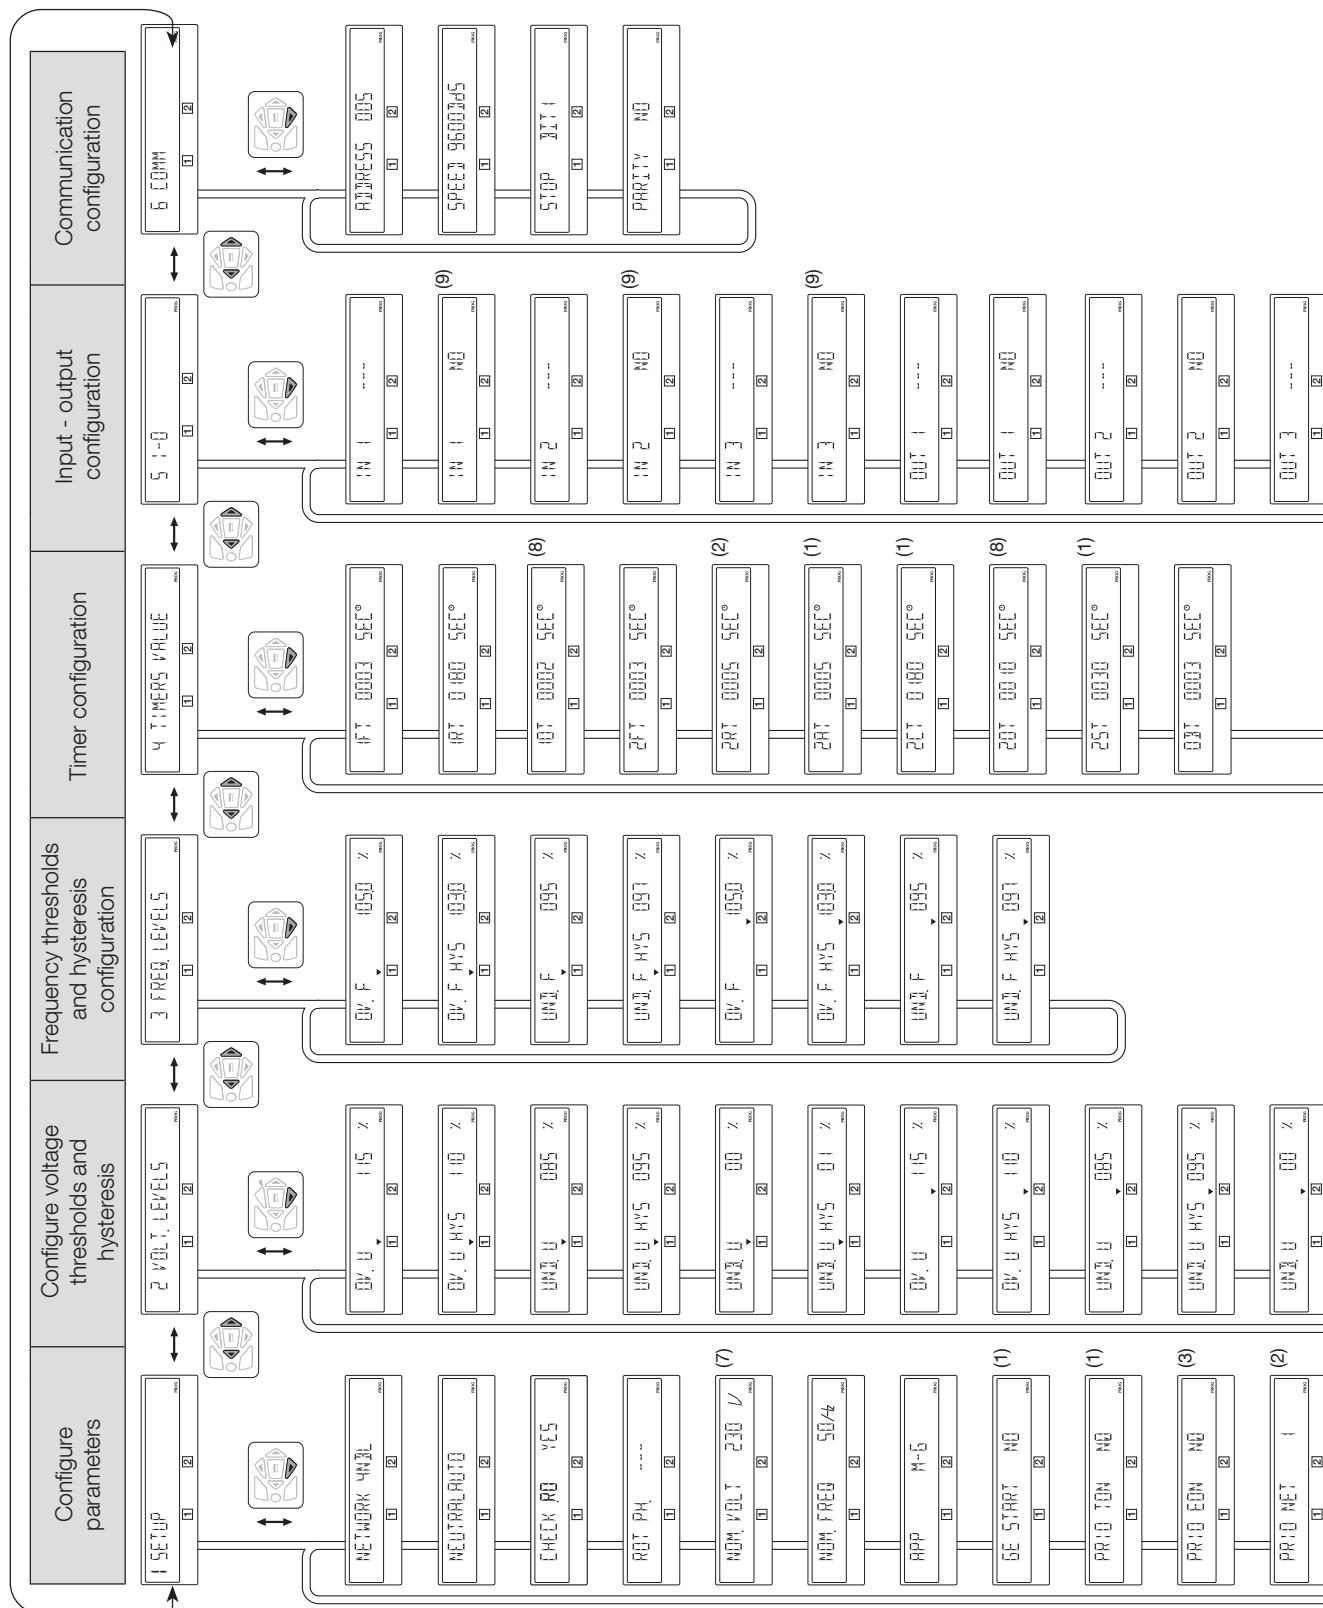

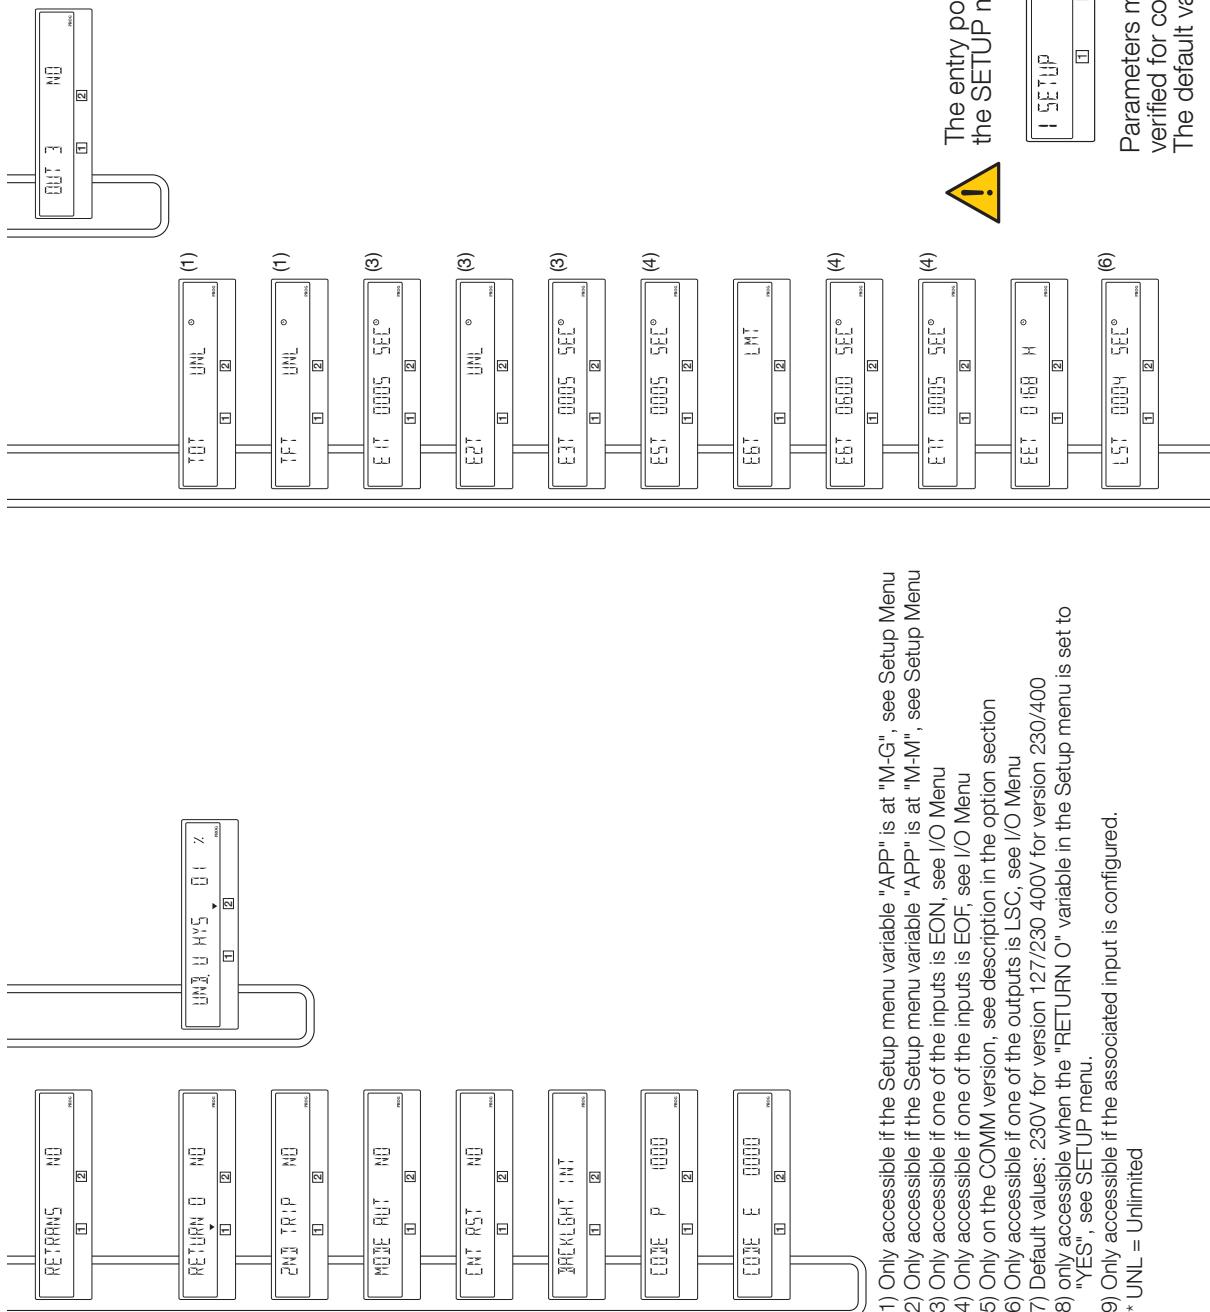

(1) Only accessible if the Setup menu variable "APP" is at "M-G", see Setup Menu
 (2) Only accessible if the Setup menu variable "APP" is at "M-M", see Setup Menu
 (3) Only accessible if one of the inputs is EON, see I/O Menu
 (4) Only accessible if one of the inputs is EOF, see I/O Menu
 (5) Only on the COMM version, see description in the option section
 (6) Only accessible if one of the outputs is LSC, see I/O Menu
 (7) Default values: 230V for version 127/230 400V for version 230/400
 (8) only accessible when the "RETURN O" variable in the Setup menu is set to "YES", see SETUP menu.
 (9) Only accessible if the associated input is configured.

* UNL = Unlimited

The entry point for programming mode is the SETUP menu.

13.5.4. SETUP Menu

Definition		Adjustment range	Default values	M-G*	M-M*
NETWORK	Type of network	4NBL/41NBL/-42NBL/ 1BL/3NBL (230/400V version) 4NBL/3NBL/2NBL/-2BL/42NBL (127/230V version)	4NBL	●	●
NEUTRAL	Position of neutral - AUTO : neutral position is set automatically upon every power-up. This configuration cannot be used with a 3NBL 400 Vac network + auto transformer - LEFT : neutral must be connected on the left, i.e. to terminal 1 of each switch - RIGHT : neutral must be connected on the right, i.e. to terminal 7 of each switch	Auto LEFT RIGHT	Auto	●	●
CHECK ROT	The phase rotation verification can be disabled. When disabled the ATyS will transfer normally even if the two sources have different direction of rotation. This should be used only when the load is not affected by phase rotation changes.	YES NO	YES	●	●
ROT PH.	The phase rotation can be selected as clockwise (ACB) or anti-clockwise (ABC). It is also possible to just check for consistency of direction of rotation between 2 sources (---). To do so the 2 sources must be simultaneously present, for example during the initial wiring. (see next page)	ABC ACB ---	---	●	●
NOM. VOLT	Nominal phase-phase voltage. Except for 1BL and 41NBL networks, where it is nominal phase-neutral voltage.	from 180 to 480 Vac (230/400V version) from 180 to 280 Vac (127/230V version)	400 Vac (version 230/400V) 230 Vac (version 127/230V)	●	●
NOM. FREQ	Rated frequency	50 or 60 Hz	50 Hz	●	●
APP	Application type: - M-G : between a network and genset - M-M : between two networks	M-G M-M	M-G	●	●
GE START	"Generator start signal" output status at rest - NO : Normal Open - NC : Normal Close	NO NC	NO	●	
PRIO TON	In case of an On Load Test, if source II is no longer available you can - NO : exit the test and switch to source I - YES : stay in position II. The MSR input (see I-O Menu) has priority over this parameter	NO YES	NO	●	
PRIO EON ⁽¹⁾	In case of External On Load, if source II is no longer available you can - NO : exit the test and switch to source I - YES : stay in position II. The MSR input (see I-O Menu) has priority over this parameter	NO YES	NO	●	

* M-G: network - genset application - M-M: network - network application

● = parameter present on M-G and/or M-M applications

(1) This parameter is only accessible if a programmable input is configured with the EON variable (see I/O menu)

Definition		Adjustment range	Default values	M-G*	M-M*
	PRIO NET	This is to define the priority network: - 1 : network I has priority - 2 : network II has priority - 0 : no network has priority. The PRI input (see menu I-O) has priority over this parameter	1 2 0	1	●
	RETRANS	Automatic retransfer inhibited - NO : automatic retransfer to the priority source - YES : "valid" must be pressed to execute the return	NO YES	NO ● ●	●
	RETURN 0 ⁽¹⁾	In case of source failure, the product automatically switches over to 0 (after a 10T or 20T time delay) - NO : the product remains in position if the source is lost - YES : this function is activated If there are 2 sources down, the power reserve must be available to execute this function (see indicator on front panel)	NO YES	NO ● ●	●
	2ND TRIP ⁽²⁾	This function makes it possible to wait for the power reserve to become available before leaving position 0 tripping . - NO : Return to the source without waiting for the reserve to be fully charged - YES : Wait for the reserve to be fully charged before returning to the source. A second trip will therefore be immediately available	NO YES	NO ● ●	●
	MOD AUT	AUTO mode forced, in spite of cover not being closed.	NO YES	NO ● ●	●
	CNT RST	Switchover counter reset (number of operations) Returns to NO after reset	NO YES	NO ● ●	●
	BACKLIGHT	The screen backlighting can be set to: - OFF : always off - ON : always lit - INT : lit during operating sequences and then turned off after 30 seconds' inactivity on the keypad	OFF ON INT	INT ● ●	●
	CODE P	Modifying input in Programming mode code	0000 to 9999	1000 ● ●	●
	CODE E	Modifying input code in Operating mode	0000 to 9999	0000 ● ●	●

* M-G: Mains - genset application - M-M: Mains - Mains application

● = parameter present on M-G and/or M-M applications


(1) The RETURN to 0 function, after loss of source **I** or **II** opens the switch ($I \Rightarrow 0$ or $II \Rightarrow 0$) of the source in question after a time delay (10T or 20T). For instance, this solution provides the possibility of opening the switch after a short-circuit. This also makes it possible to restart the genset after a fault, without being connected to the load.

(2) The 2nd TRIP parameter is associated with the RETURN to 0 function, as the latter requires a power reserve for the changeover. So to execute a second trip, you need to wait for this power reserve to recharge.

13.5.5. Phase rotation check

This functionality checks the consistency of phase rotation i.e. of the wiring prior to commissioning.

Example: If the parameter ROT PH = ABC:

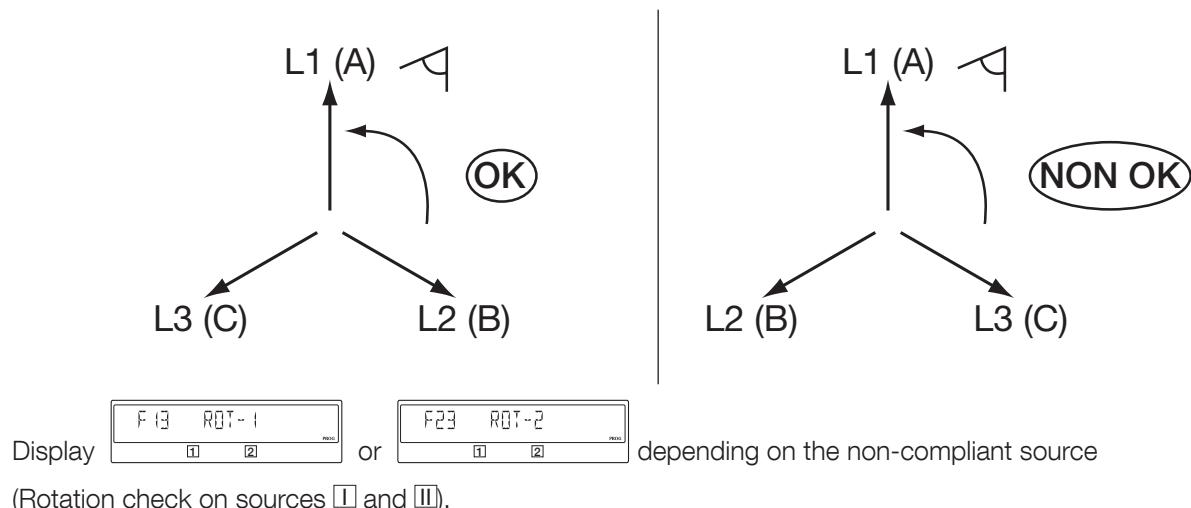

WARNING ! Function available on both sources in case of 4NBL/4BL or 3NBL/3BL type of network and only on source **I** in case of 41NBL or 42NBL network.


Function not available when using autotransformer for neutral generation.

If the ROT PH parameter = - - -, the test is carried out when the two sources are present at the same time. It is therefore recommended to have both sources present during commissioning.



WARNING ! If the CHECK ROT parameter is set to NO, the product will not check the consistency of the phase rotation. Make sure this option configuration is used only when a different phase rotation order on the two sources does not impact the load.

13.5.6. VOLT. LEVELS Menu

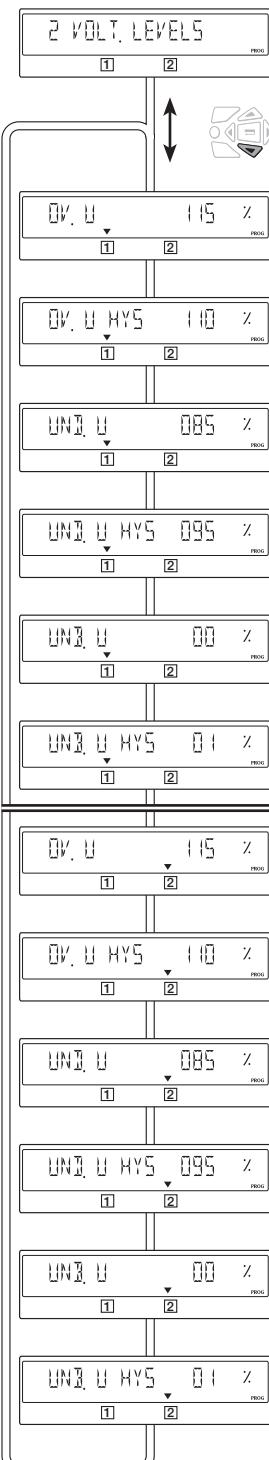


Definition		Adjustment range*	Default values *	
OV U	Overvoltage threshold source <input type="checkbox"/> I	102 - 130 %	115 %	Source <input type="checkbox"/> I
OV U HYS	Source <input type="checkbox"/> I over-voltage hysteresis	101 - 119 %	110 %	
UND.U	Undervoltage threshold source <input type="checkbox"/> I	60 - 98 %	85 %	
UND.U HYS	Source <input type="checkbox"/> I under-voltage hysteresis	61 - 99 %	95 %	
UNB.U	Phase unbalance threshold <input type="checkbox"/> I (see next paragraph)	00 - 30 %	00 %	
UNB.U HYS	Hysteresis unbalance detection <input type="checkbox"/> I (see next paragraph)	01 - 29 %	01 %	
OV U	Overvoltage threshold source <input type="checkbox"/> II	102 - 130 %	115 %	Source <input type="checkbox"/> II
OV U HYS	Source <input type="checkbox"/> II over-voltage hysteresis	101 - 119 %	110 %	
UND.U	Undervoltage thresholds source <input type="checkbox"/> II	60 - 98 %	85 %	
UND.U HYS	Source <input type="checkbox"/> II under-voltage hysteresis	61 - 99 %	95 %	
UNB.U	Phase unbalance threshold <input type="checkbox"/> II (see next paragraph)	00 - 30 %	00 %	
UNB.U HYS	Hysteresis unbalance detection <input type="checkbox"/> II (see next paragraph)	01 - 29 %	01 %	

* As percentages of U_{nom} in case of over and undervoltage.
As percentages of U_{avg} in case of unbalances.


Measurement accuracy: Voltage: 1 %

13.5.7. Over-voltage and under-voltage


The thresholds and hystereses are defined as percentages of nominal voltage.
The hystereses defines a return to normal levels following an under-voltage or over-voltage.

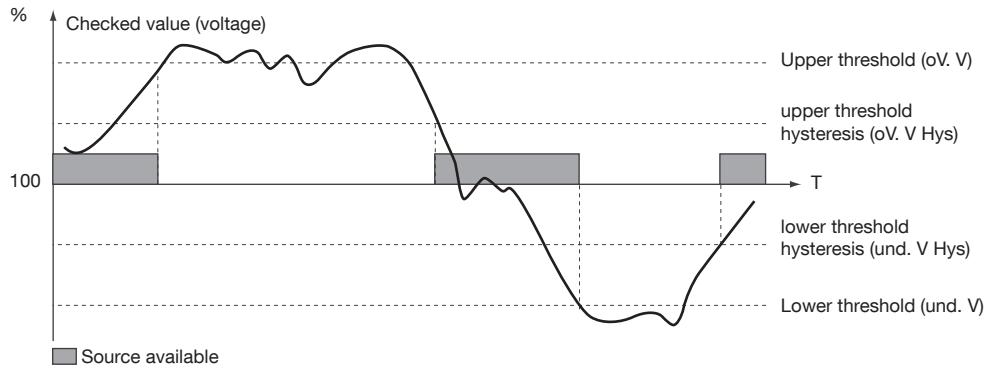

13.5.7.1. Voltage unbalance measurement

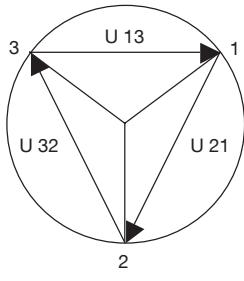

Balanced network

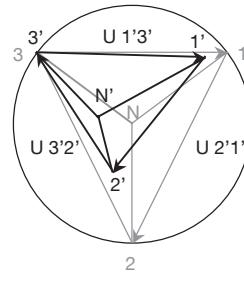

Unbalanced network

The unbalance reading is derived from the formula below


$$U_{\text{nba}} = \frac{\max(|U_{12} - U_{\text{avg}}|, |U_{23} - U_{\text{avg}}|, |U_{31} - U_{\text{avg}}|)}{U_{\text{avg}}} \quad \text{with} \quad U_{\text{avg}} = \frac{U_{12} + U_{23} + U_{31}}{3}$$

Example of an unbalanced network: $U_{12} = 352 \text{ Vac}$ $U_{23} = 400 \text{ Vac}$ $U_{31} = 370 \text{ Vac}$

$$U_{\text{avg}} = (352+400+370)/3 = 374 \text{ V AC}$$

$$U_{\text{nba}} = 26/374 = 0.069 \Rightarrow \text{Unbalance threshold rate } 7\%$$

13.5.8. FREQ. LEVELS Menu

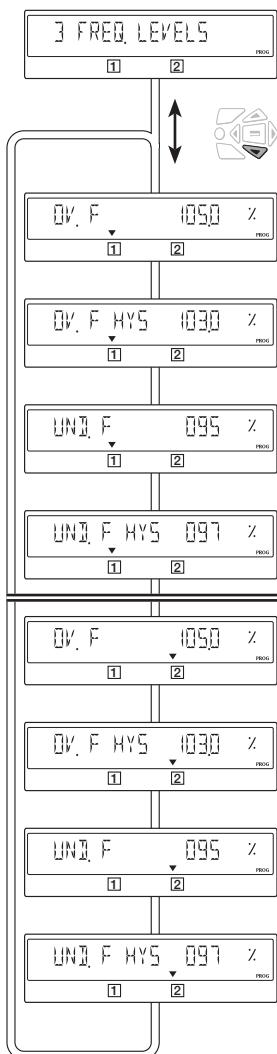

Definition		Adjustment range*	Default values *	
OV F	Over-frequency threshold source <input type="checkbox"/> I	101 - 120 %	105 %	Source <input type="checkbox"/> I
OV F HYS	Source <input type="checkbox"/> I over-frequency hysteresis	100.5 - 119.5%	103 %	
UND.F	Under-frequency threshold source <input type="checkbox"/> I	60 - 99 %	95 %	
UND.F HYS	Source <input type="checkbox"/> I under-frequency hysteresis	60.5 - 99.5 %	97 %	
OV. F	Over-frequency threshold source <input type="checkbox"/> II	101 % - 120 %	105 %	Source <input type="checkbox"/> II
OV. F HYS	Source <input type="checkbox"/> II over-frequency hysteresis	100.5 - 119.5 %	103 %	
UND.F	Under-frequency threshold source <input type="checkbox"/> II	60 - 99 %	95 %	
UND.F HYS	Source <input type="checkbox"/> II under-frequency hysteresis	60.5 - 99.5 %	97 %	

* As percentages of Fnom

• Under-frequency or over-frequency

The thresholds and hysterese are defined as a percentage of nominal frequency.


The hysterese defines a return to normal levels following an under-frequency or over-frequency.

Measurement accuracy: Frequency: 0.1 %


13.5.8.1. Under-frequency or over-frequency

The thresholds and hysterese are defined as a percentage of nominal frequency.

The hysterese defines a return to normal levels following an under-frequency or over-frequency.

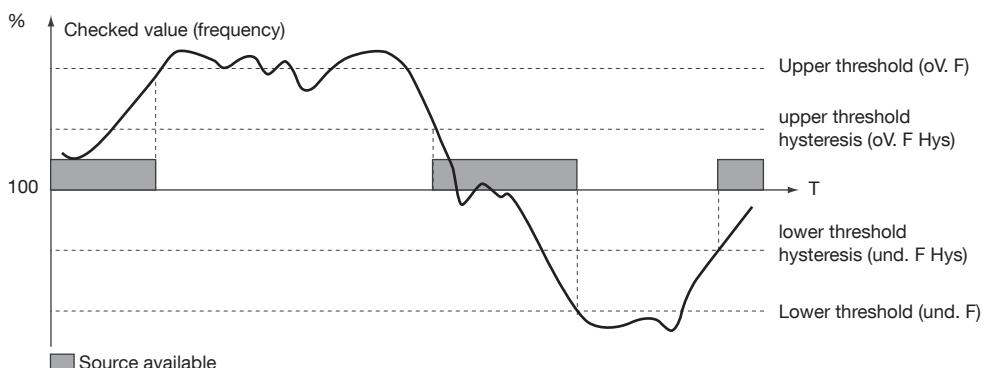

13.5.9. TIMERS Menu

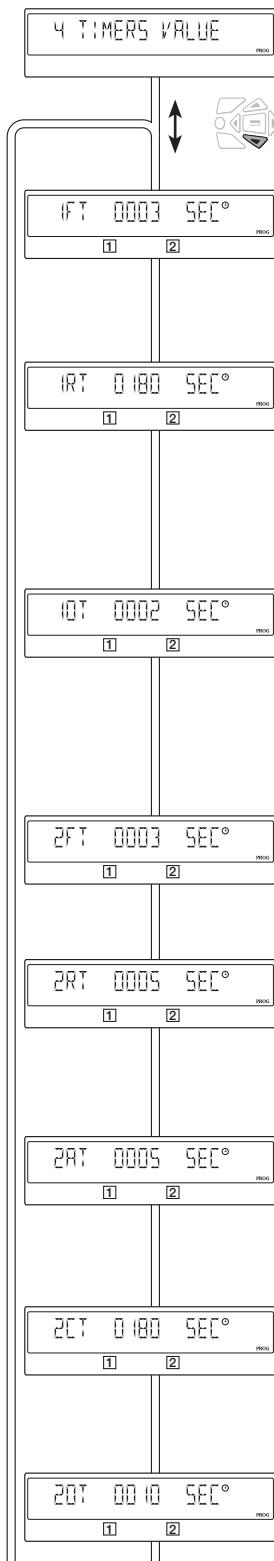

Definition		Adjustment range	Default values	M-G*	M-M*
1FT	Source I loss time delay (source I Failure Timer) When source I disappears, 1FT is started. If source I is restored before the end of 1FT, the switchover cycle is not engaged.	from: - 0 to 3600 s in M-M - 0 to 60 s in M-G	3 s	●	●
1RT	Source I restoration time delay (source I Return Timer) When source I reappears, 1RT is started. At the end of 1RT, source I is considered present. If source I disappears before the end of 1RT, the switchover is not executed. If the replacement source disappears during 1RT, the latter dynamically and temporarily adopts the 3 s setting value.	from 0 to 7200 s	180 s	●	●
10T	Return to zero time delay from source I (source I to 0 Timer) Only accessible if the Setup menu parameter RETURN 0 is activated. Waiting time delay following source I failure, before switchover to position 0. This time delay avoids opening directly to short-circuit or load impact.	from 0 to 10 s	2 s	●	●
2FT	Source loss time delay II (source II Failure Timer) When source II disappears, 2FT is started. If source II is restored before the end of 2FT, the switchover cycle is not engaged.	from 0 to 60 s	3 s		●
2RT	Source II restoration time delay (source II Return Timer) When source II reappears, 2RT is started. At the end of 2RT, source II is considered present. If source II disappears before the end of 2RT, the switchover is not executed.	from 0 to 3600 s	5 s		●
2AT	Stabilisation time delay (source II Available Timer) Stabilisation time delay for voltage and frequency on Source II . The time delay starts as soon as the source voltage is above the hysteresis value. This time delay must be completed to enable transfer to Source II	from 0 to 7200 s	5 s	●	
2CT	genset cooling time (source II) (source II Cool Down Timer) Following a switchover sequence, and after returning to source I , source II (genset) is kept running for 2CT to enable it to cool down.	from 0 to 600 s	180 s	●	
20T	Return to zero time delay from source II (source II to 0 Timer) Only accessible if the Setup menu parameter RETURN 0 is activated. Waiting time delay following source II failure, before switchover to position 0. This time delay avoids opening directly to short-circuit or load impact.	from 0 to 10 s	10 s	●	●

* M-G: Mains - genset application - M-M: Mains - Mains application

● = timer present on M-G and/or M-M applications

				M-G*	M-M*
	2ST	Genset starting timeout delay (source II) (source II Start Timer) Time delay started at the same time as the starting request. If after 2ST source II (genset) has not started, an error message is displayed «FAIL START».	from 0 to 600 s	30 s	●
	0DT	Minimum off time delay (0 Dead Timer) This is the minimum load supply down time, possibly with stop in position 0, so as to enable residual voltages generated by the load (engine type) to disappear.	from 0 to 20 s	3 s	●
	TOT	"On Load Test" duration time delay (Test On Load Timer) This time delay defines the On Load Test time. It starts when the Test is initiated. The return to the network takes place at the end of TOT.	UNL (unlimited)/ LMT (from 10 to 1800 s)	UNL	●
	TFT	"Off Load test" time delay (Test off Load Timer) This time delay defines the Off Load Test duration.	UNL (unlimited) / LMT (from 10 to 1800s)	UNL	●
	E1T (1)	"On Load external operation" request time delay (start) This time delay starts at the same time as the EON order. At the end of this time delay, the genset starting order is sent. Then when the genset is available, the transfer on source II takes place.	from 0 to 1800 s	5 s	●
	E2T (1)	"On Load external operation" request time delay (duration) This time delay defines the EON order time.	UNL (unlimited)/ LMT (from 10 to 1800 s)	UNL	●
	E3T (1)	"On Load external operation" request time delay (End) This time delay is counted from the end of the EON order, and only after this time delay is the switchover to source I is executed.	from 0 to 1800 s	5 s	●
	E5T (2)	"Off load external operation" request time delay (start) This time delay starts at the same time as the EOF order. At the end of this time delay, the genset starting order is sent.	from 0 to 1800 s	5 s	●
	E6T (2)	"Off load external operation" request time delay (duration) This time delay defines the EOF order time.	UNL (unlimited)/ LMT (from 10 to 1800 s)	LMT 600 s	●
	E7T (2)	"Off load external operation" request time delay (end) This time delay starts after E6T, and only after this time delay the genset will be stopped.	from 0 to 1800 s	5 s	●
	EET	Programming genset starting time delay, following its last stop after an on load functioning. At its end, the output EES will be activated. (After 160H, derived from ± 20s).	from 0 to 1100h	168h	●
	LST	Load shedding time delay Load Shedding Timer This time delay corresponds to the time available to perform the load shedding operation.	from 0 to 60 s	4 s	●


* M-G: Mains - genset application - M-M: Mains - Mains application

● = timer present on M-G and/or M-M applications

(1): these time delays are only accessible and configurable if at least one programmable input is configured with the variable EON (see I/O menu).

(2): these time delays are only accessible and configurable if at least one programmable input is configured with the variable EOF (see I/O menu).

13.5.10. I-O menu

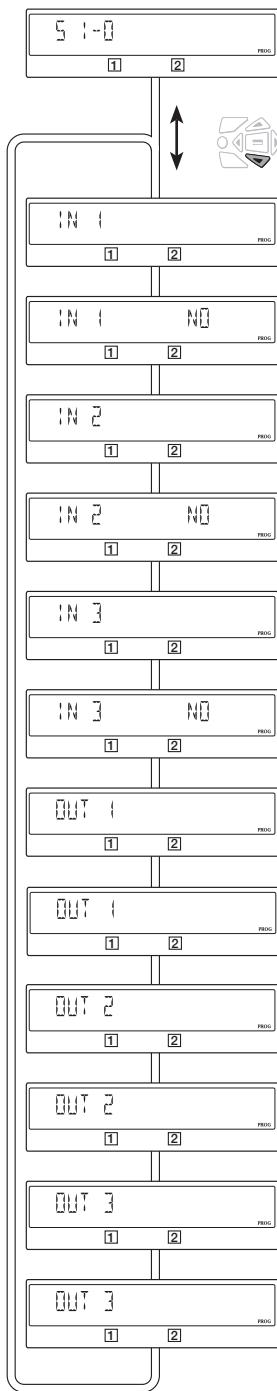

Variable	Definition	Adjustment range	Default value
IN 1	Input 1	See table following pages	/
IN 1	Input 1 status	NO or NC	NO
IN 2	Input 2	See table following pages	/
IN 2	Input 2 status	NO or NC	NO
IN 3	Input 3	See table following pages	/
IN 3	Input 3 status	NO or NC	NO
Out 1	Output 1	See table following pages	/
Out 1	Output 1 status	NO or NC	NO
Out 2	Output 2	See table following pages	/
Out 2	Output 2 status	NO or NC	NO
Out 3	Output 3	See table following pages	/
Out 3	Output 3 status	NO or NC	NO

NO : Normal Open (Open)

NC : Normal Close (Closed)

13.5.10.1. Inputs description


		M-G*	M-M*
Automatic operation inhibited			
INH	All automatic commands relative to the transfer switch, but excluding the Genset Start signal, will be inhibited. Note: With INH closed, the generator will start if the network is lost but the switch will not transfer to the generator. Even if network return, generator will remain active as long as INH remain active.	●	●
Test on load			
TON	Activates on load test. Retransfer remains locked until contact is deactivated.	●	
Test off load			
TOF	Activates off load test (genset started and stopped).	●	
External on load operation request, delayable			
EON	Activates an operating cycle depending on time delays E1T, E2T, E3T. These time delays have to be set in the TIMERS menu (operation: see graphs below).	●	
External off load operation request, delayable			
EOF	Activates «Start Gen» contact (genset starting) (source II) according to time delays E5T, E6T, E7T. These time delays have to be set in the TIMERS menu (operation: the same as the input EON, without load switchover).	●	
Forcing to source II (genset) in TON and EON mode			
MSR	During an on load test or a delayable external on load operation request, validating the input enables you to remain in back-up position in all circumstances (loss of this source), as long as the test is active. This input has priority over parameters PRIO TON and PRIO EON.	●	
Confirms return to priority source			
RTC	Remote manual transfer. Transfer back to source I initiated upon the contact closing. Same function as the variable "RETRANS" cleared with the keypad. This SETUP menu variable must also be at YES to validate operation by the input.	●	●
Source priority			
PRI	Defines the priority source. If this entry is activated, source II has priority, otherwise source I has priority. It is equivalent to, but with priority over, the SETUP menu parameter PRIO NET.		●
Stabilisation time delay bypass			
SS1 / SS2	Remote transfer check. It is possible to initiate the transfer from source I to source II (and vice versa) before the end of the time delay 1RT/2RT/2AT countdown, depending on the application type. If the latter is set to its maximum value, it is possible to transfer by activating the contact (front of one second).	●	●
Positions I, II and 0 command			
PS1/ PS2/ PS0	Position I / position II / position 0 command. When the command disappears the product returns to automatic mode. The last command received has priority. Command 0 has priority over commands I and II. NB, switching to Pos I (Pos II) is only possible if source I (source II) is present.	●	●
Source I / source II alarm			
AL1 / AL2	Informs the user by flashing the fault LED and indicating F12 ALR - 1 / F22 ALR - 2 on the screen. This message disappears along with the alarm. The input also simulates the loss of the source concerned, starting the generator set if necessary and switching to the other source if it is available.	●	●
Source I / source II fault			
FT1 / FT2	Informs the user by flashing the fault LED and indicating F11 FLT - 1 / F21 FLT - 2 on the screen. Disappears after validation and reset (by activating RST input, opening and then closing the cover or via RS485). Immediately shifts the changeover switch to position 0, without 10T or 20T time delay. NB, only works if the 2nd TRIP parameter is activated.	●	●
Source I / source II external availability signal			
0A1 / 0A2	Availability signal for source I (source II). This input is used instead of the voltage and frequency measurement	●	●
Fault reset			
RST	Reinitialises a fault	●	●
Load shedding bypass			
LSI (1)	This input bypasses the LST time delay, (signal indicating correct load shedding).	●	●

* M-G: Mains - genset application - M-M: Mains - Mains application


(1): this output is only accessible if a programmable input is configured with the EON variable (see I/O menu)

Explanation of how EON works:


E2T when set as Limited

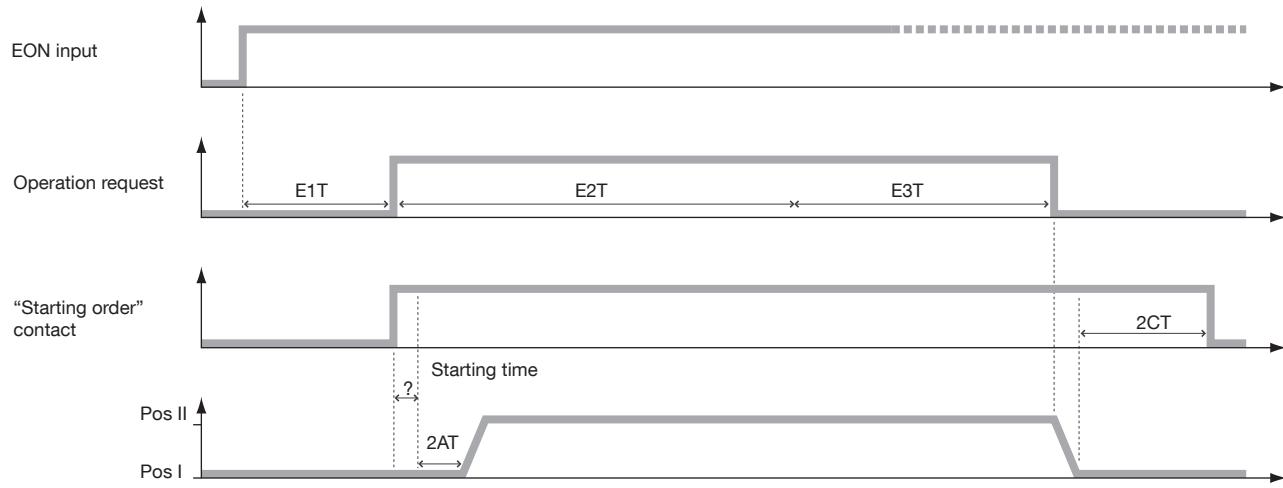

E2T takes priority over EON if E2T is set as LIM (Limited)

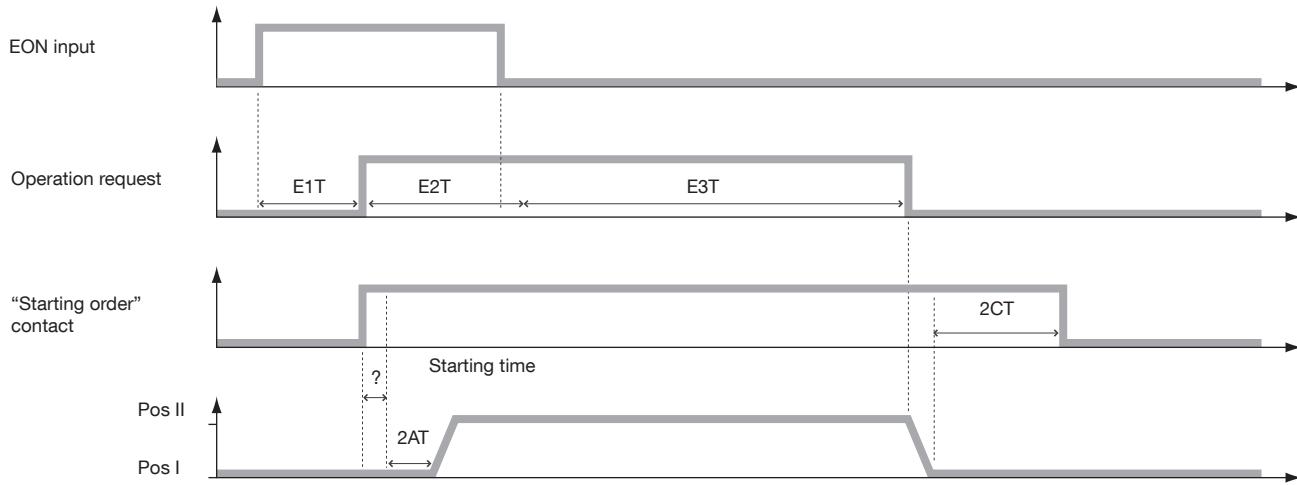

EON takes priority over E2T if E2T is set as UNL (Unlimited)

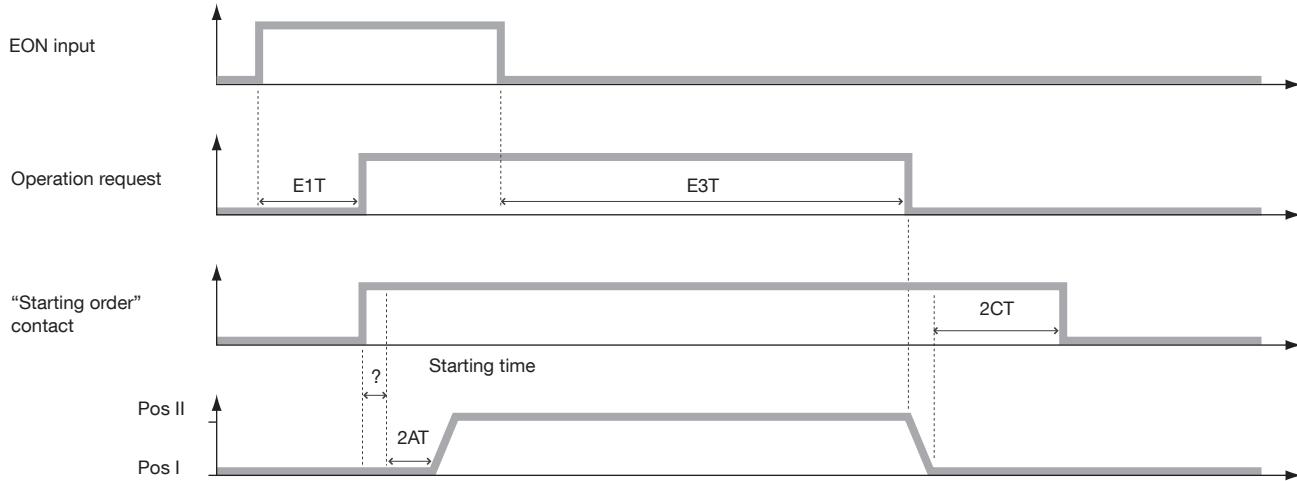

13.5.10.2. Outputs description

M-G*	M-M*
------	------


Source available			
S1A /S2A	Source I / Source II available. Output activated (closed) if source I / source II is within the defined setting ranges (same function as LED on front panel).	●	●
At least one source available			
SCA	Source I or II available. Output activated (closed) if at least one of the 2 sources is within the defined settings ranges.	●	●
Position auxiliary contact			
AC1/AC2/ AC0	Outputs activated respectively when product is in position I / position II / position 0.	●	●
Load supplied by source I / by source II			
LO1 / LO2	Indicates which source is supplying the load. Output LO1 / LO2 activated if the 2 following conditions are simultaneously validated: position I / position II is closed and source I / source II is available (LO1 = AC1 et S1A / LO2 = AC2 et S2A). position I / position II is closed and source / source is available (LO1 = AC1 and S1A / LO2 = AC2 and S2A).	●	●
Load shedding command			
LSC	Load shedding relay. Initiates a load shedding action before transfer to back-up source, and then reloading after restoration. Operations see following pages.	●	●
Fault summary			
FLT	Output activated (closed) if at least one fault (internal or transferred external) is activated.	●	●
Product operational (no fault + product in Auto mode)			
POP	Output activated (closed) if the product is deemed "operational" i.e. it is in AUT mode, the supply is present and no fault is detected.	●	●
Input copy			
CP1/CP2/ CP3	The output adopts the same status as input 1 / input 2 / input 3. Same function as relaying.	●	●
Synthesis TON			
TOS	Output is activated in case of test on load.	●	
Synthesis EON			
EOS	Output is activated in case of external on load.	●	
Synthesis TON and EON			
ROS	Output is activated in case of test on load or external on load.	●	
Output parameter for programmed start of the genset (Linked to EET time delay)			
EES	This parameter activates an output that can be linked to the inputs EON or EOF in order to test the genset during a time defined respectively by (E1T, E2T, E3T) and (E5T, E6T, E7T).)	●	
Product in Manual Mode			
MAN	This Output is activated when the product is in Manual Mode (Cover open).	●	●
Fail start output			
FST	Output is activated in case of generator fail start.	●	

* M-G: network - genset application - M-M: network - network application


Explanation of how LSC works

If output LSC is selected, (load shedding before transfer request), the associated time delay LST (maximum duration of the load shedding) must be programmed in the Timers Menu.

Scenario 1 with LSI active

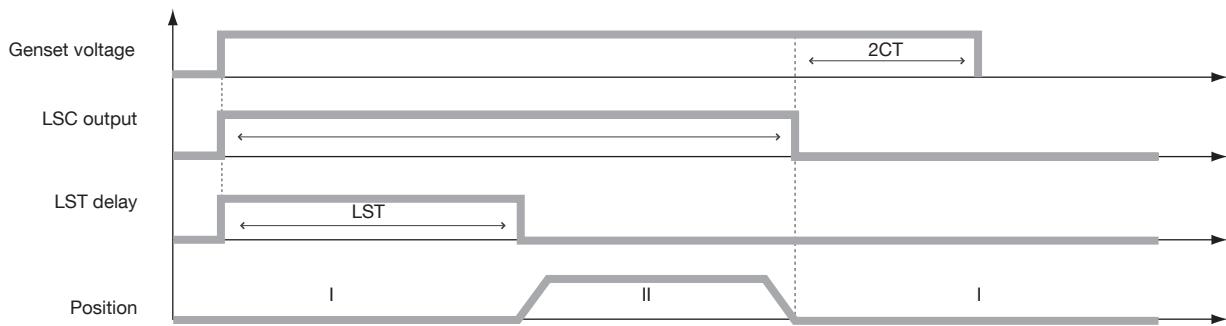


Scenario 2: LSI Input not activated

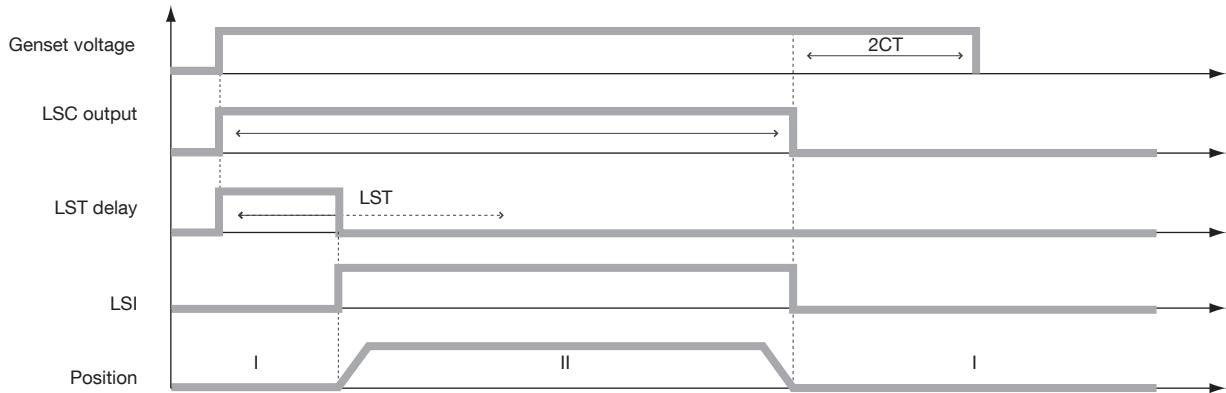


Genset programming start

In some applications (genset without battery charger), it is asked to start the genset after X hours (EET) of inactivity (except for TOF) in order to enable the battery to charge. According to the customer needs, the corresponding output (EES) can be connected either to the input EON (External on load) or to the input EOF (External off load). These tests EON and EOF are programmable respectively via (E1T, E2T, E3T) and (E5T, E6T, E7T).

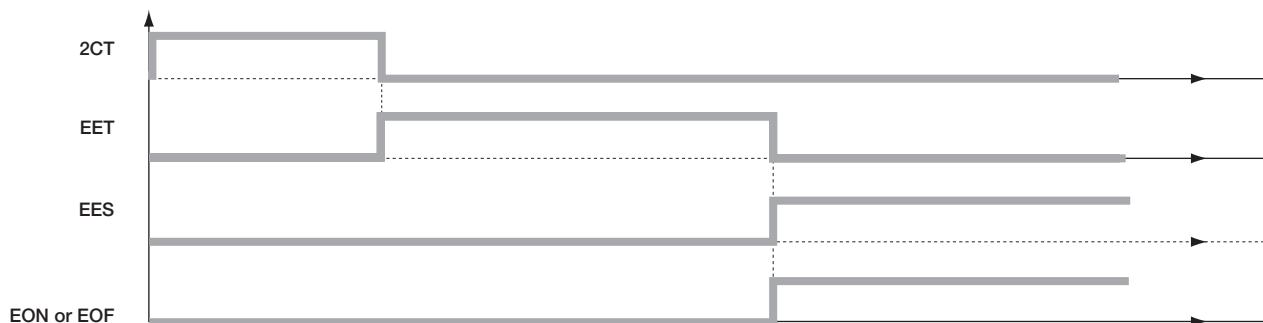

13.5.11. COMM Menu

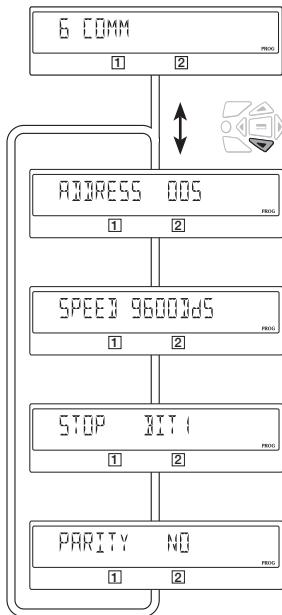

Variable	Definition	Adjustment range	Default value
Address	Address of the device	1 to 255	5
Speed	Communication speed	2400, 4800 9600, 19200 38400	9600
Stop bit		1, 2	1
Parity bit	NO: no Parity bit ODD: Odd EVEN: Even	NO, ODD, EVE	NO



Only available on version with Comm.


Detailed explanation in chapter "13.9. Communication (optional 9383 xxxx units only)", page 65.

13.6. Automatic mode

Close the cover to enter automatic mode. Make sure that the changeover switch is in automatic mode (AUT LED lit).

13.6.1. Sealable Auto/Manual cover

Auto/Manu mode can be protected by sealing the standard Auto/Manu cover as shown.

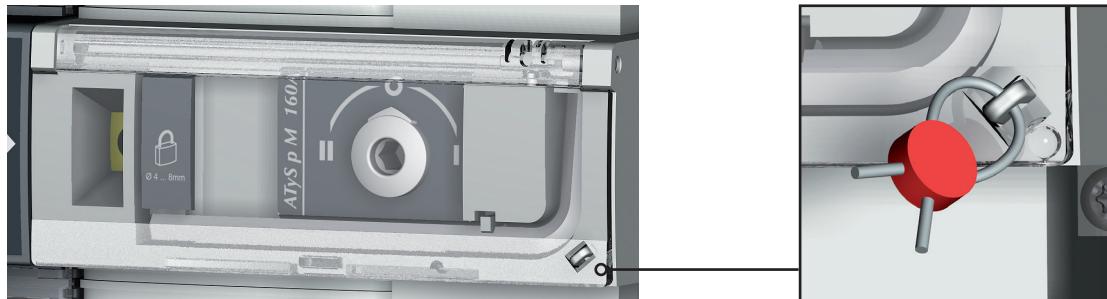


13.6.2. Possible actions

Once in automatic mode, it is possible to:

- Access the programming (mains present) and display menus.
- Run an on load or off load test.
- Run a source I / source II loss sequence.
- Start a source I / source II restoration sequence.

4.6.2. Manual & Automatic Mode / Mains restoration conditions

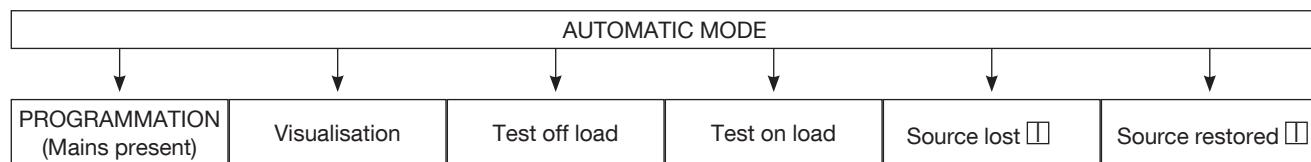


- Automatic mode becomes active 2 seconds after switching from manual to automatic mode.
- Source I source II voltages and frequencies are checked to define the changeover switch's new stable status.
- The same automatic mode recognition sequence must be executed following a power-off and a complete discharge of the power reserves.

13.6.3. Priority source loss sequence (stable position) in M-G application

Configuration


- APP = M-G: Mains - genset application
- RETURN 0 = NO: changeover switch remains in position during loss of the source

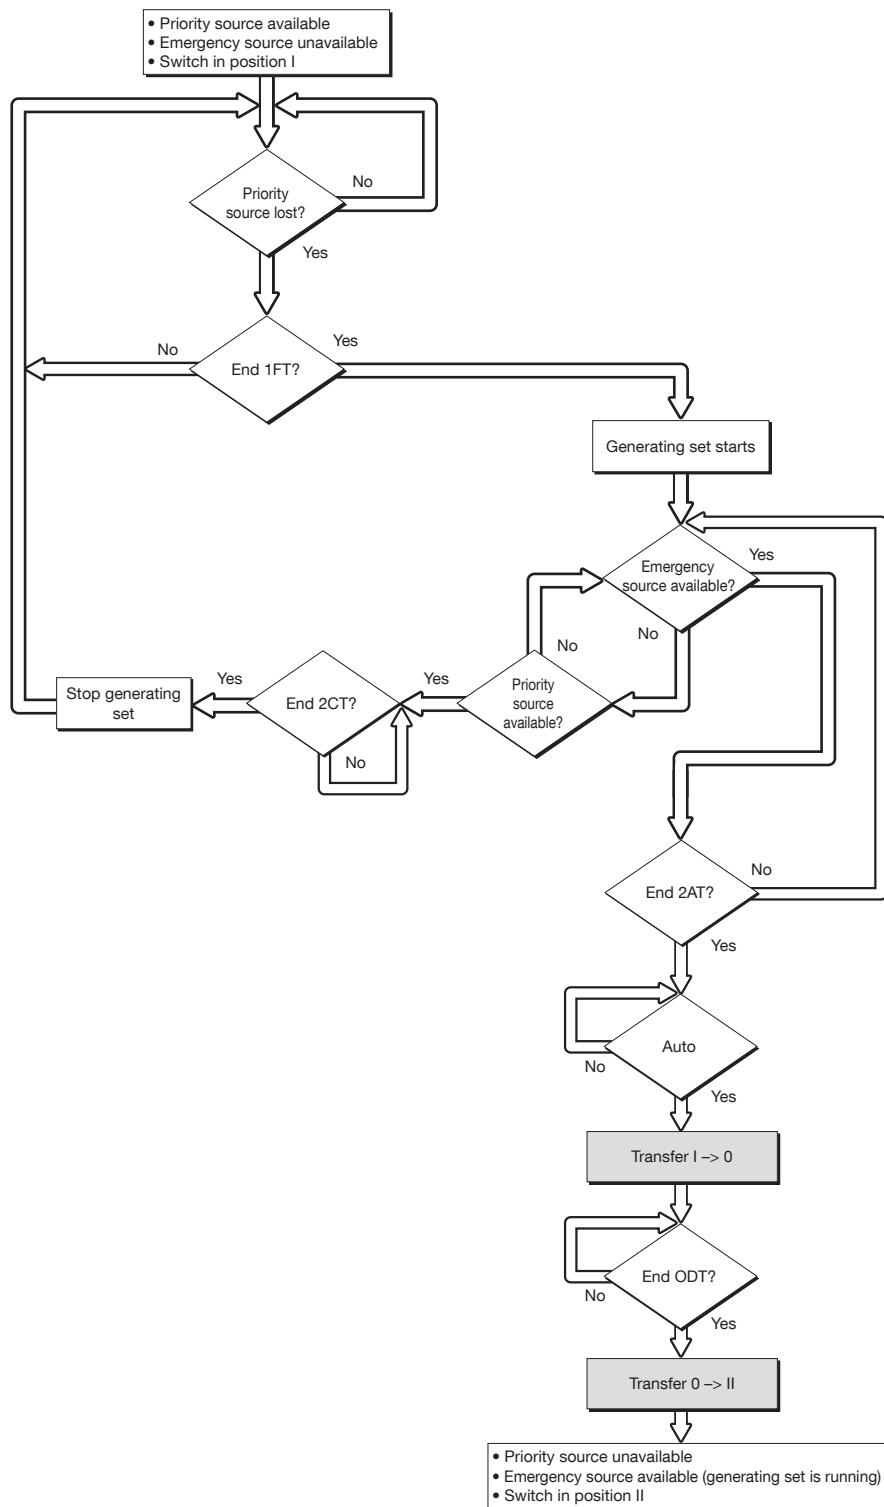

13.6.4. Priority source loss and restoration sequence (stable position) in M-M application

Configuration


- APP = M-M: Mains - Mains application
- RETURN 0 = NO: changeover switch remains in position upon loss of the source

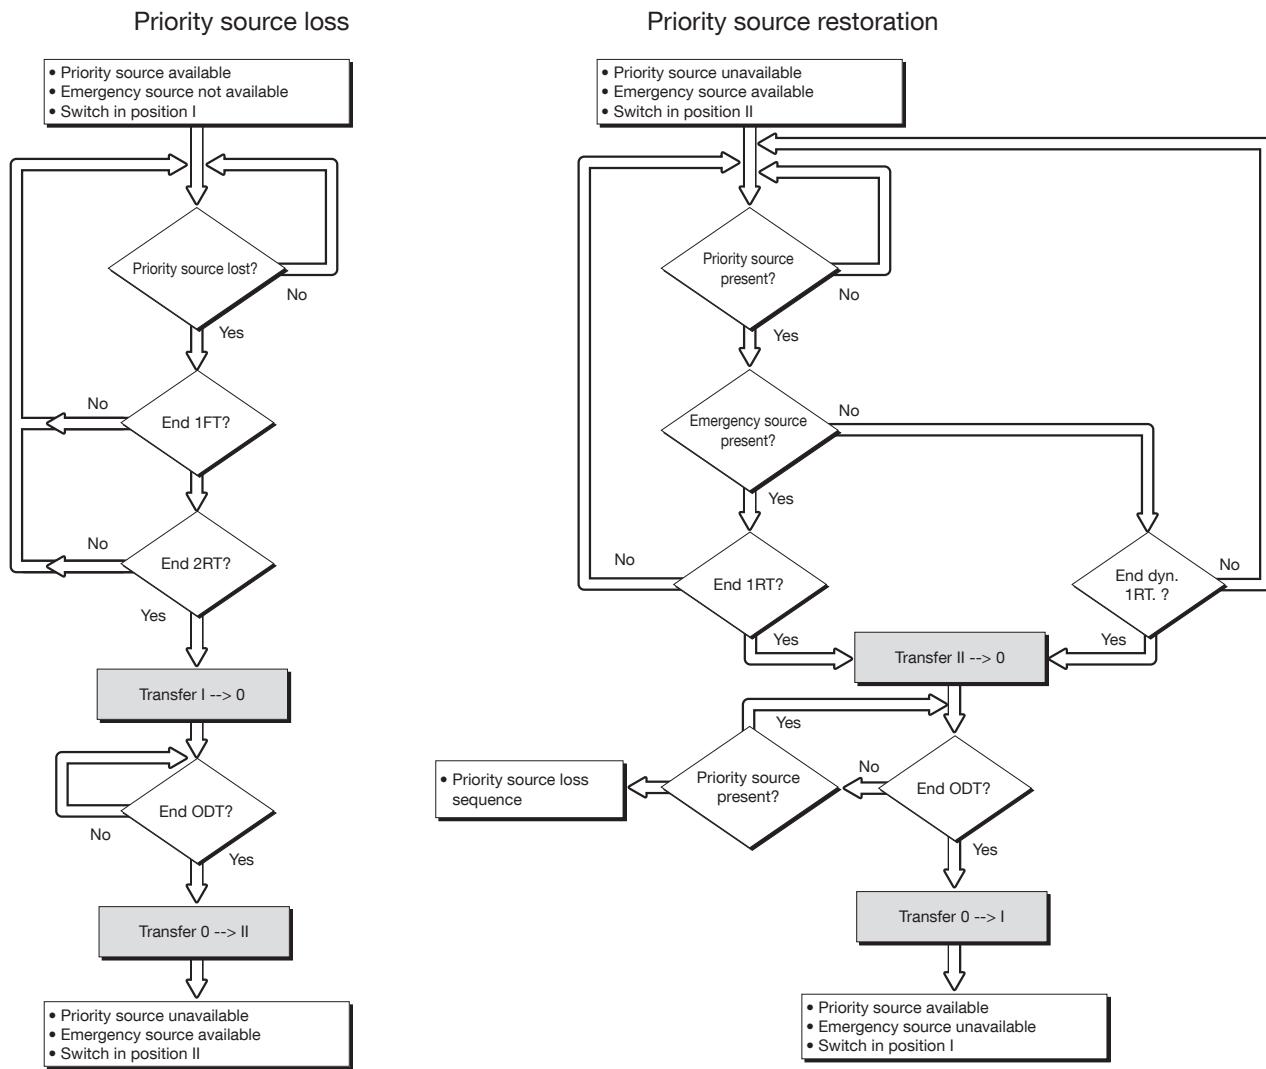

13.6.5. Priority source loss sequence (with trip) in M-M application

Configuration


- APP = M-M: Mains - Mains application
- RETURN 0 = YES: : the changeover switch switches to position 0 (open) during loss of the source

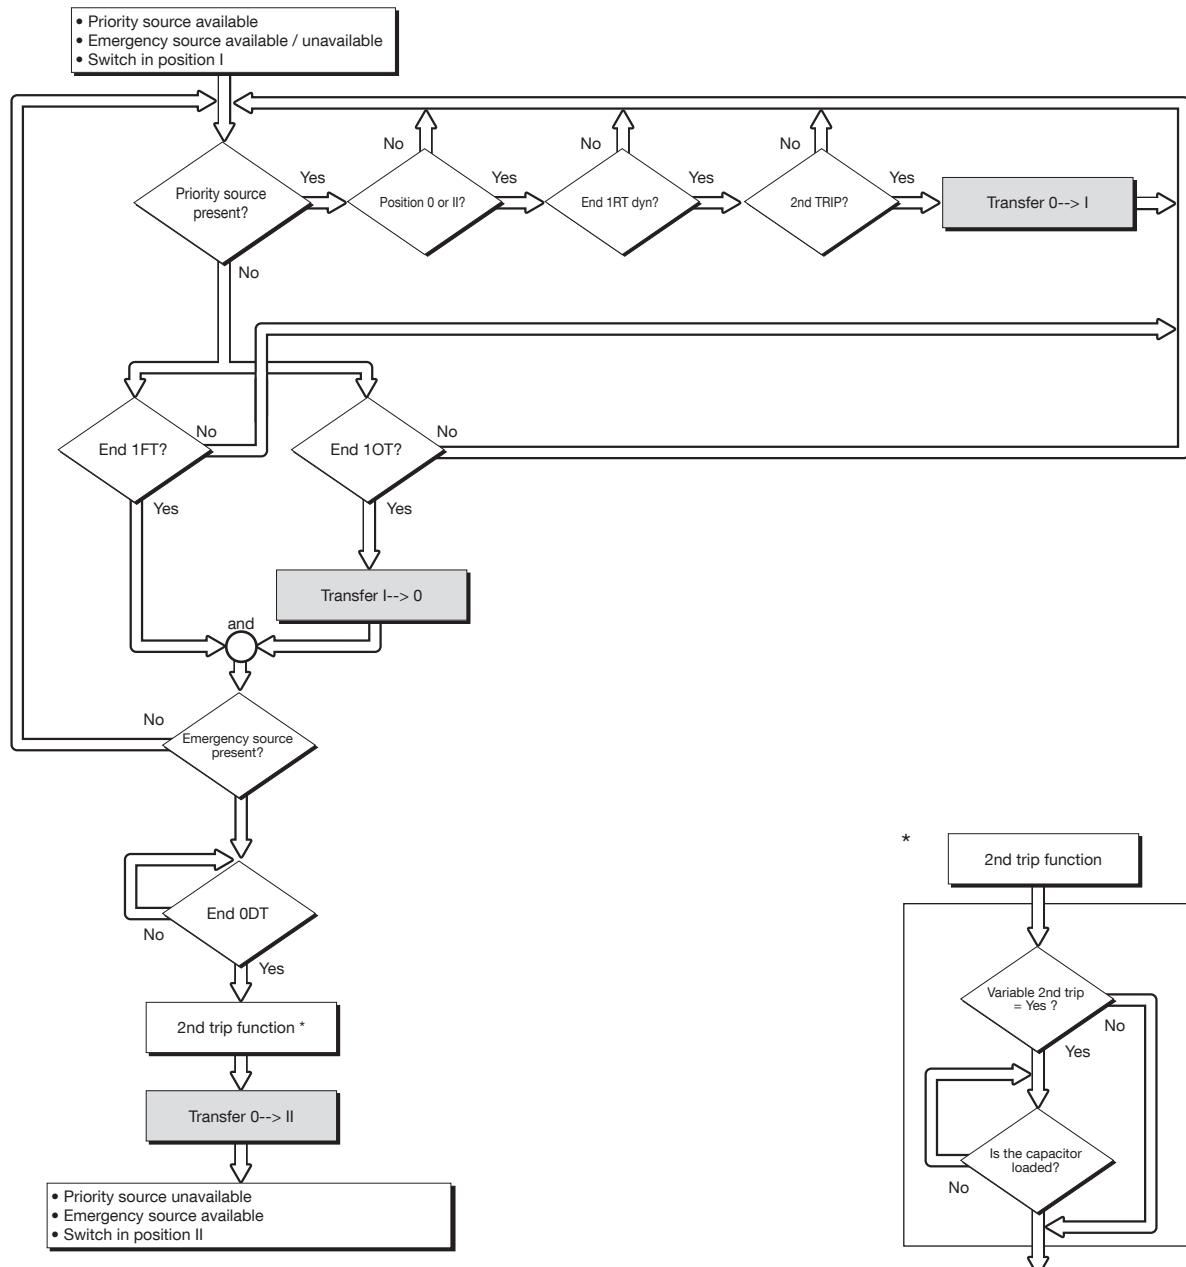

13.6.6. Priority source loss sequence (with trip) in M-G application

Configuration

- APP = M-G: Mains - genset application
- RETURN 0 = YES: the changeover switch switches to position 0 (open) during loss of the source

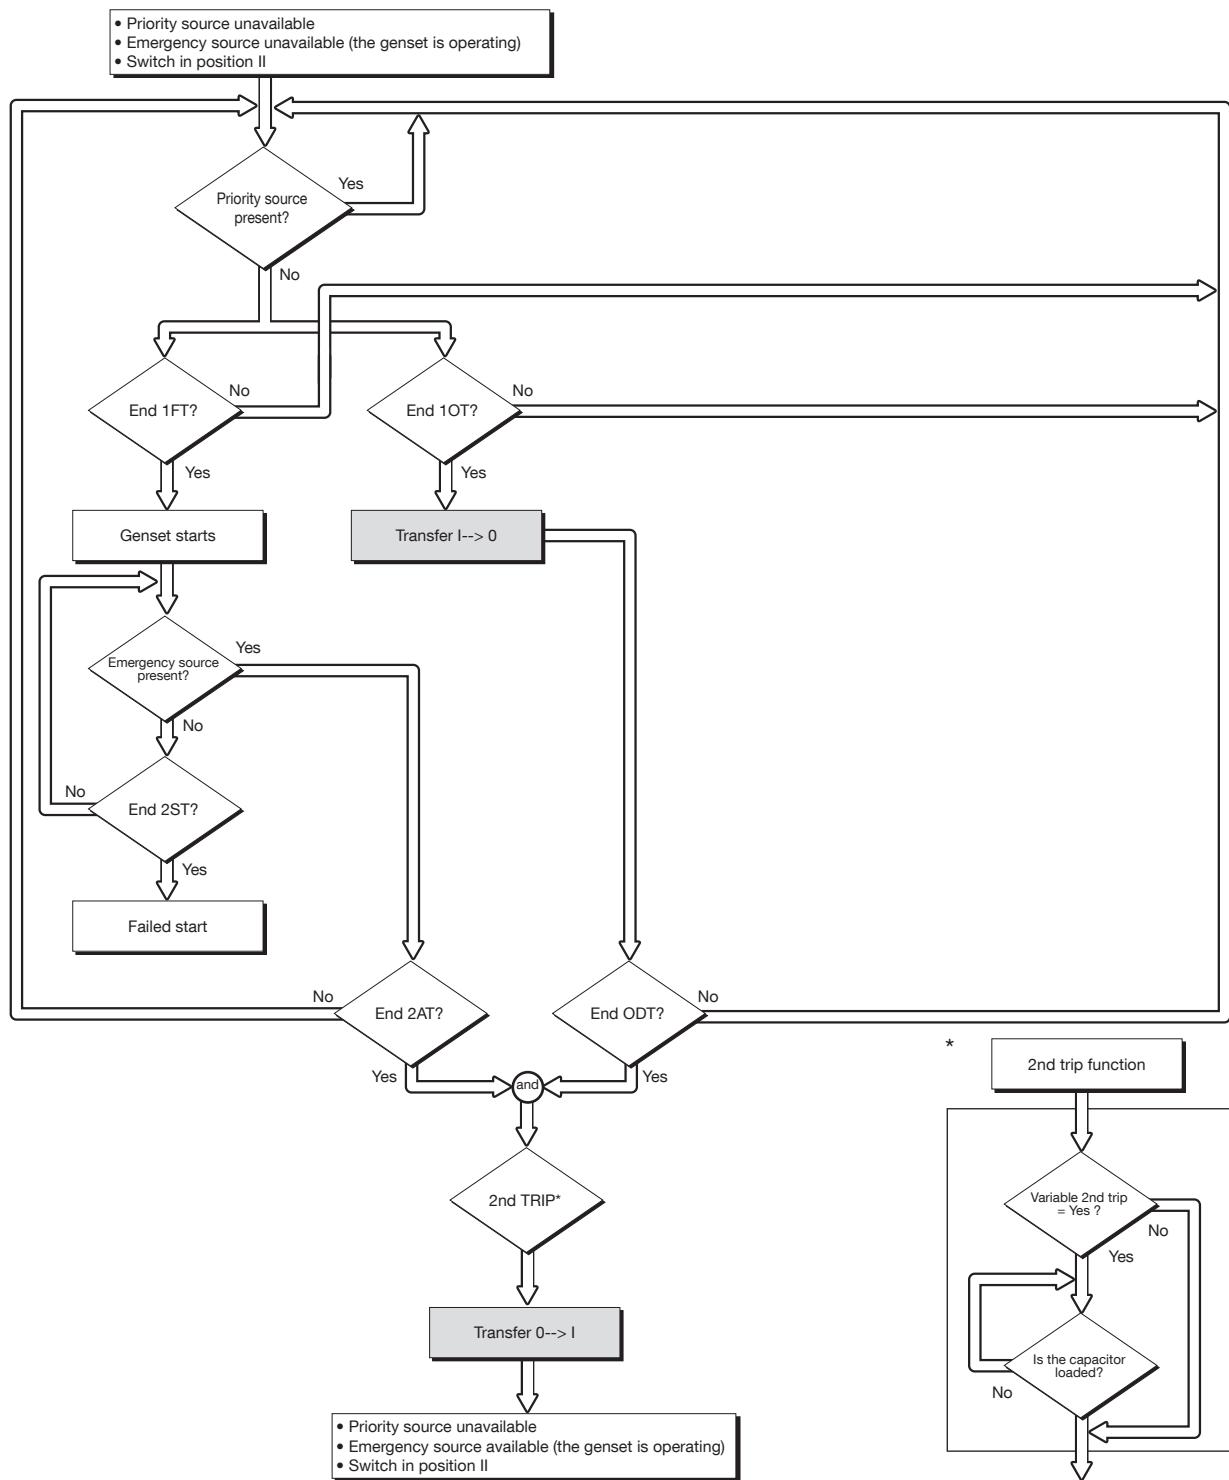


13.6.7. Priority source automatic restoration sequence

This sequence is started as soon as the system is in AUTO mode and in position II.

- Specific function

Automatic retransfer inhibited:


- Once source **I** is restored, it may be preferable not to retransfer the load from source **II** to source **I** immediately.
- Once the retransfer from source **II** to source **I** is possible, the RETRANS function locks the retransfer, and the AUT LED flashes pending the operator's confirmation.
- The VALIDATION button must be pressed or an input programmed on RTC to authorise the retransfer.

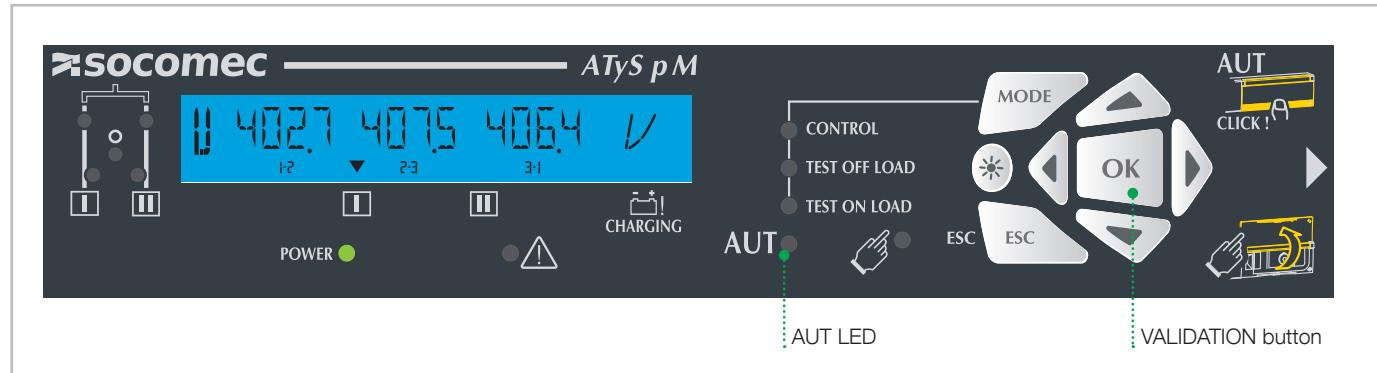

13.6.8. Priority source restoration sequence (stable position) in M-G application

Configuration



- APP = M-G: Mains - genset application
- RETURN 0 = NO: changeover switch remains in closed position during loss of the source

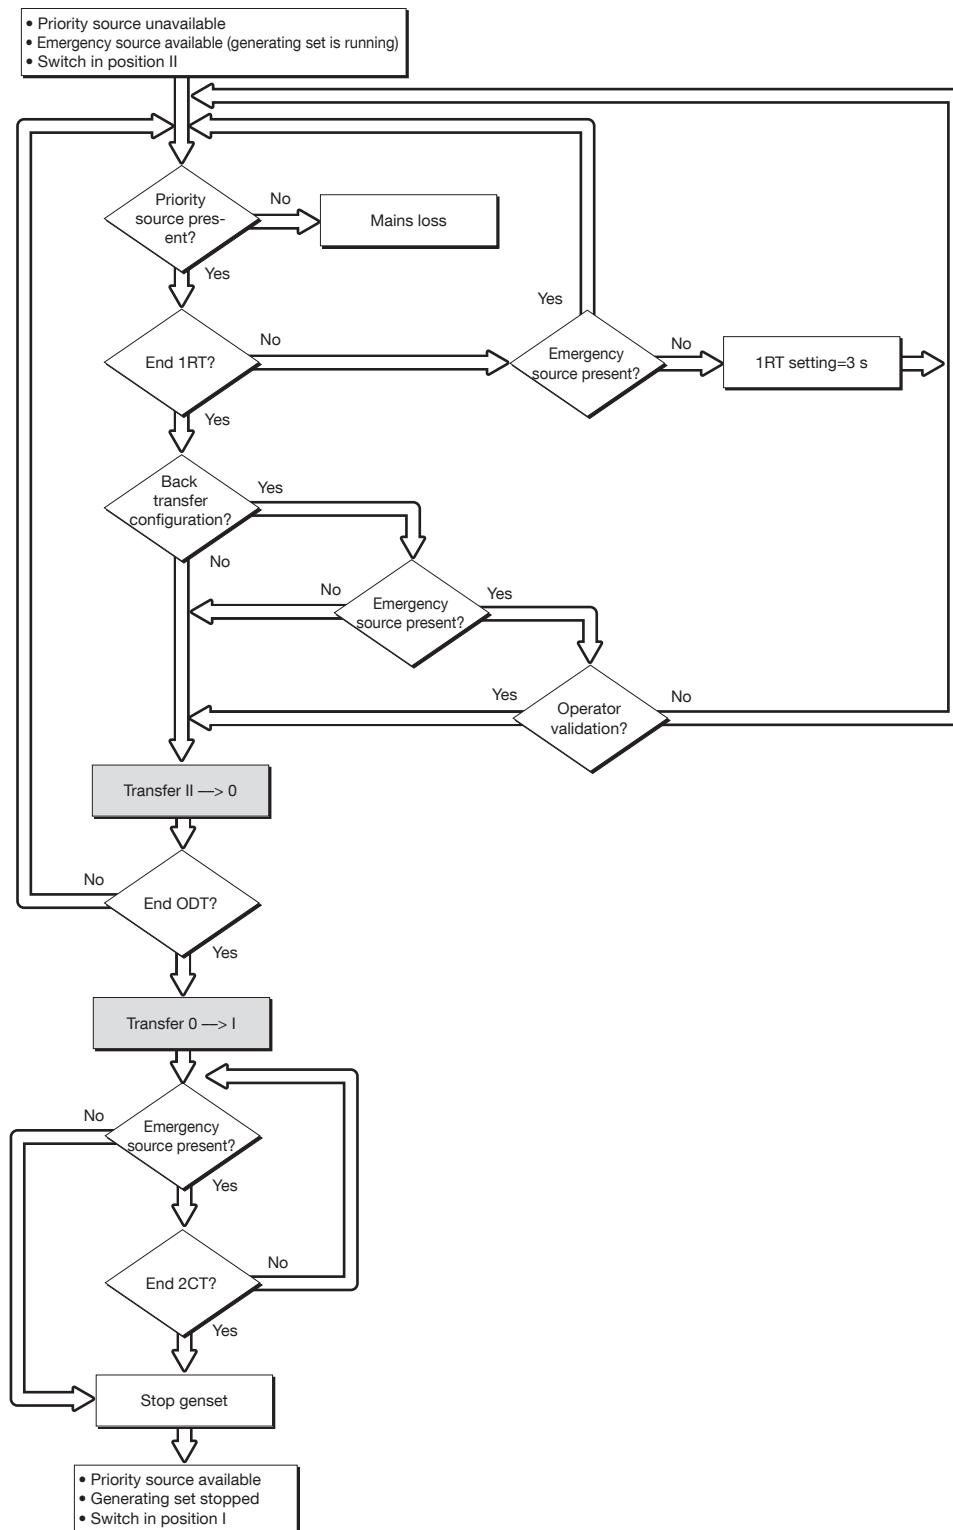

13.6.9. Back-up source loss sequence (with trip) in M-G application

Configuration


- APP = M-G: Mains - genset application
- RETURN 0 = YES: the changeover switch switches to position 0 (open) during loss of the source

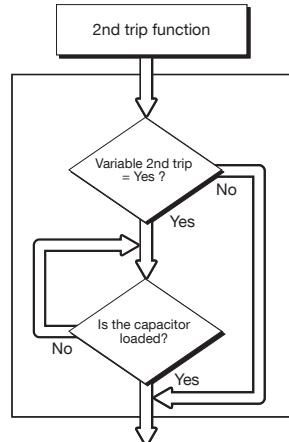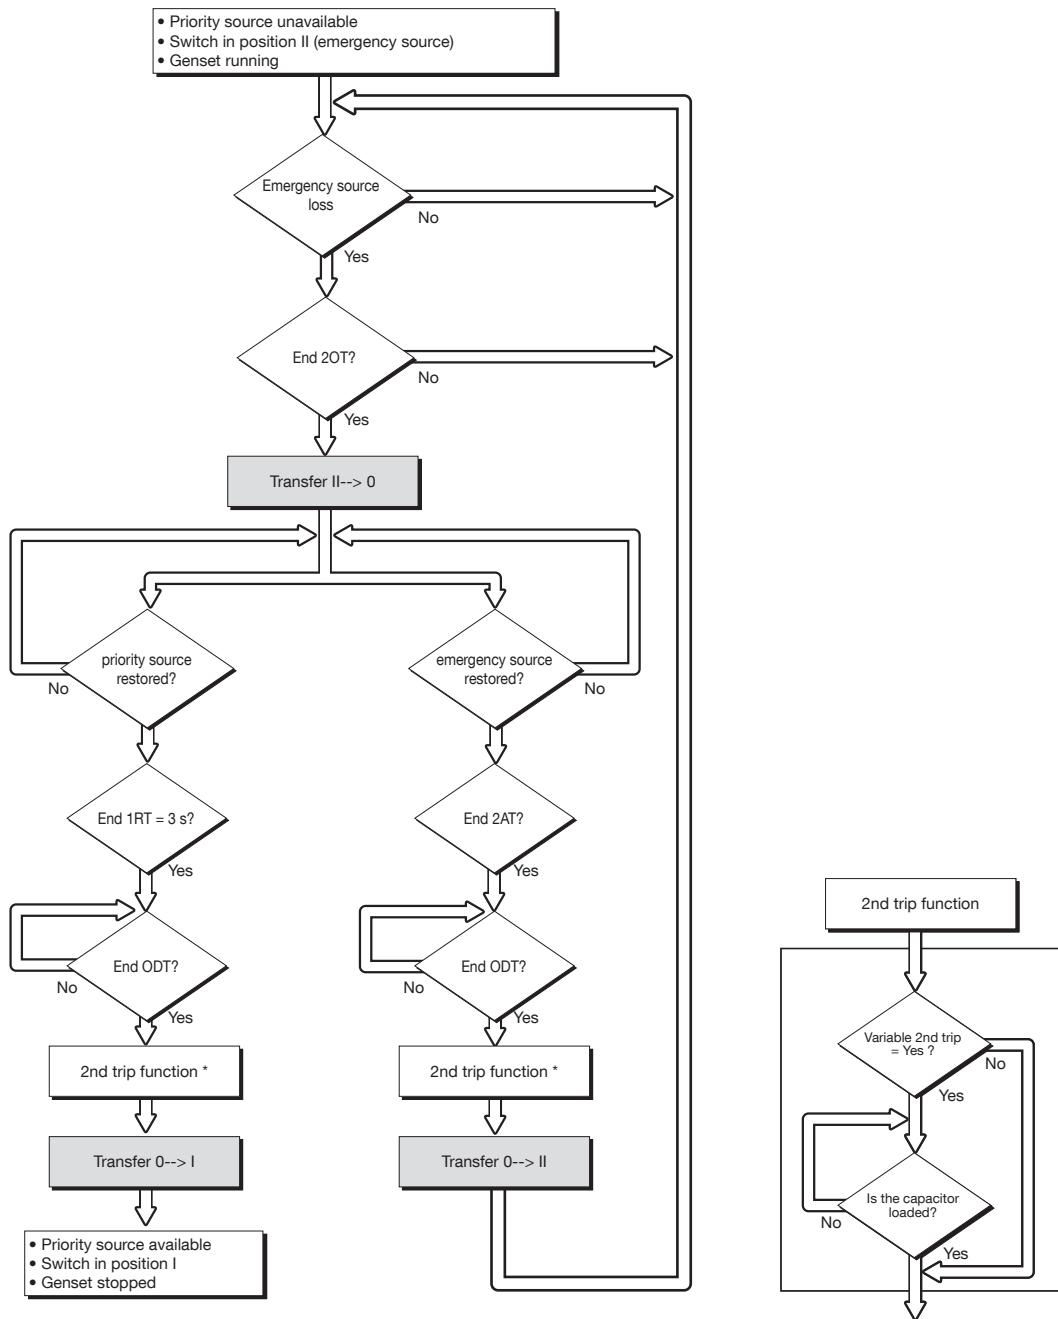

13.7. Control / Test operating mode

In this mode the operator has the option of controlling the transfer manually or electrically. Test modes are also available.

13.7.1. Test modes

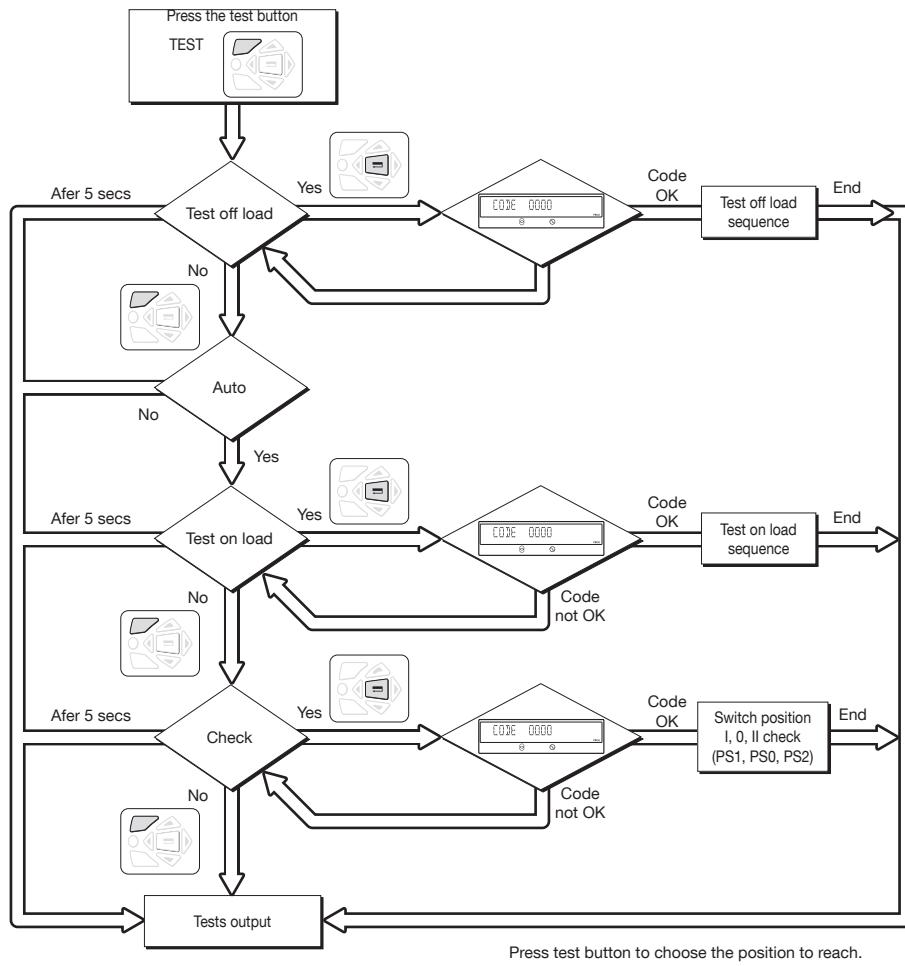

13.7.2. Off load test (M-G application only)

This test is possible in automatic or manual mode. It can be considered as a manual genset starting order without switching over the load to the genset.

Description

- This mode enables you to test the genset without load transfer.
- The genset is started and stopped as normal (via the «Gen set start» contact output 73-74) on operator order.
- This test is always possible, except during a source loss sequence \boxed{I} , which is a condition for the test to be stopped.
- The test duration can be programmed (TFT time delay).

Activation

- either on the local HMI, via the test modes,
- or via the D20 interface,
- or via the programmable input,
- or via communication (for version with COM).

Deactivation

- either by changing the status of the control input,
- or by pressing the validation key on the product keypad or D20,
- or after a genset starting timeout,
- or at the end of the timer (if set),
- or if the source I is lost,
- or in case of genset shutdown upon fault.

13.7.2.1. On load test (M-G application only)

This test is only possible in automatic mode, it enables you to start the genset and simulate a complete transfer sequence.

Description

- The purpose of this sequence is to execute a load transfer to the genset to test it, while adhering to switchover conditions.
- The time delays for validating the transfer conditions (TOT, 2ST, 2AT, ODT, 2CT) are derived according to their configuration.
- The “retransfer confirmation” function is always active throughout an on load test. It enables transfer back to source I in case of an unlimited on load test, or interrupts a time delayed on load test.


Activation

- either via the operating menu,
- or via the D20 interface,
- or via the programmable input,
- or via communication (for version with COM).

Deactivation

- either by changing the status of the control input
- or by pressing the validation key on the product keypad or D20
- or after a genset starting timeout
- or at the end of the timer (if set)
- or in case of genset shutdown upon fault

13.7.2.2. Changeover switch position I, 0 and II check (accessible in AUT mode)



Description

Electrical operation of the changeover switch to reach position: PS1, PS0, PS2.

Activation

- either via the operating menu. It will then be possible to force one of the positions I, 0, II via the keypad,
- or via the D20 interface,
- or via the programmable input,
- or by via communication (for version with COM).

Deactivation

- either via the Escape key
- or by switching from Auto mode to Man. mode.



The control takes priority over all functions.


13.8. Emergency breaking (trip function)

The emergency breaking (trip) function ensures the following:

- on-load breaking,
- breaking across all live conductors.

The product must be configured and wired as follows to allow emergency breaking:

Menu	Parameters	Setting
SETUP	2ND TRIP	YES
I-O	IN1	FT1
I-O	IN1	NO
I-O	IN2	RST
I-O	IN2	NO

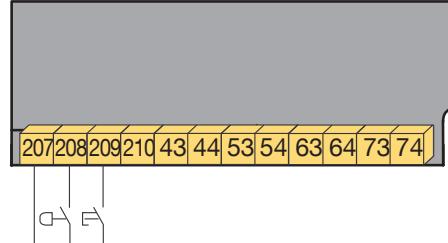


Following an emergency trip, the fault must be validated and inhibited to allow the resumption of automatic operation (by opening then closing the Auto-Man cover, activating the RST input or via the RS485).

The solution shown above enables resetting via activation of the RST input.

13.9. Communication (optional 9383 xxxx units only)

13.9.1. COMM Menu

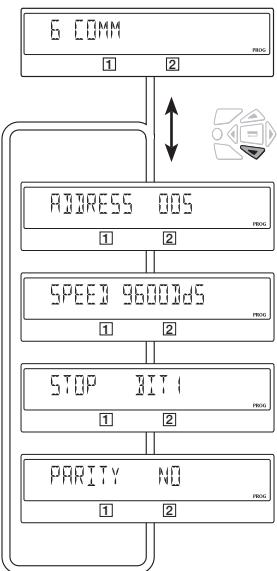

Variable	Definition	Adjustment range	Default value
Address	Address of the device	1 to 255	5
Speed	Communication speed	2400, 4800 9600, 19200 38400	9600
Stop bit		1, 2	1
Parity		NO, ODD, EVE	NO

! Only available on ATyS p M version with Comm.

RS485	2 or 3 wire half-duplex
Protocol	MODBUS® protocol in RTU Mode
Speed	2400, 4800, 9600, 19,200, 38,400 Bauds
Galvanic insulation	2.5 kV (1 min 50 Hz)


13.9.2. General Information

Communication via an RS485 connection (Modbus® protocol) enables you to connect up to 31 ATyS to a PC or a programmable logic controller over a distance of 1200 metres.

- Recommendations

You should use a shielded twisted pair (LIYCY type).

If the distance of 1200 m and / or the number of 31 ATyS is exceeded, it is necessary to connect a repeater to enable an additional connection of ATyS over more than 1200 m. For further information on the connection methodology, please consult us.

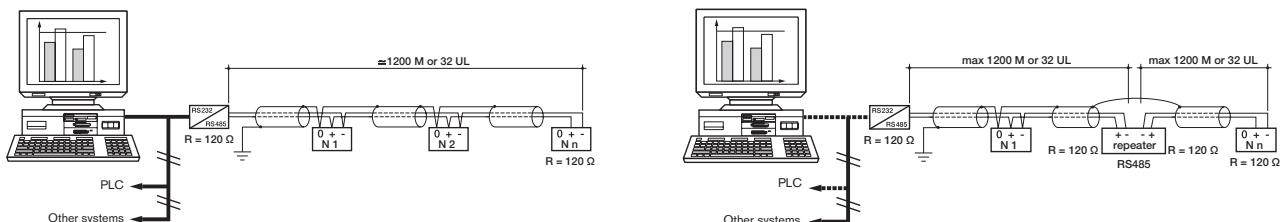

! It is essential to have a 120 ohm termination at both ends of the bus. This termination is selectable on the ATyS p M close to the RS485 connection terminal.

13.9.3. Modbus® protocol

The Modbus® protocol used by the ATyS requires a dialogue using a master/slave hierarchical structure. Two dialogues are possible:

- the master communicates with a slave (ATyS) and waits for its reply,
- the master communicates with all the slaves (ATyS) without waiting for their reply.

The mode of communication is the RTU (Remote Terminal Unit) using hexadecimal characters of at least 8 bits.


In the communication protocol, a standard frame is made up of the following elements:



- Slave address: Communicating device address (Add, menu Comm parameters)
- Function code: the codes which can be used are as follows:
 - 3 : to read n words (maximum 125)
 - 6 : to write one word
 - 16 : to write n words (maximum 125).
- Address : Register address (refer to following tables)
- Data : Parameters linked to function (number of words, value)

When slave address 0 is selected, a message is sent to all devices present on the network (only for functions 6 and 16); this type of message is called general distribution, so it is not followed up with a response from the slaves.

The maximum response time (timeout) is 250 ms between a question and a response.

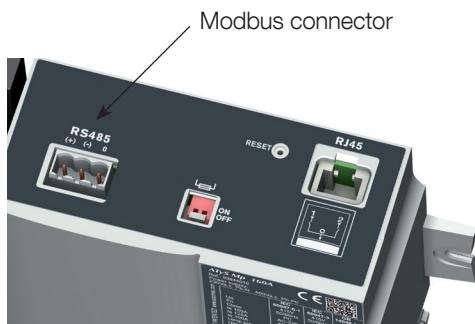

13.9.4. Function 3

Dec. address.	Hex. address.	No. of words	Designation		Unit
Status					
20480	5000	1	Type of network 1: 127 - 230 V 2: 230 - 400 V		
20481	5001	1	Operating mode		
			0x0000: Manual mode 0x0010: Automatic mode	0x0020: Control mode 0x0040: Inhibited mode	
20482	5002	1	Position 1: Position 0 2: Position I 3: Position II		
20484	5004	1	Genset starting order status, source I II		
20485	5005	1	Priority 0: Network 1: Source I 2: Source II		
20486	5006	1	Source I status 0: No source 1: Out of thresholds 2: Available		
20487	5007	1	Source II status 0: No source 1: Out of thresholds 2: Available		
20488	5008	1	Test in progress		
			0x0000: None 0x0001: TOF 0x0002: EOF	0x0004: TON 0x0008: EON	
20489	5009	1	Cycle counter		
20490	500A	1	Operations to position I counter		
20491	500B	1	Operations to position II counter		
20492	500C	1	Fault signal 0: None 1: Alarm 2: Fault		
20493	500D	1	Alarm / fault code		
			0: None 1: F00 Op Fct 2: F03 Neutral 3: F11 FLT - 1 4: F21 FLT - 2 5: F12 ALR - 1 6: F22 ALR - 2 7: F13 ROT - 1	8: F23 ROT - 2 9: F14 CAP - 1 10: F24 CAP - 2 11: F15 PWR - 1 12: F25 PWR - 2 13: F16 POS - 1 14: F26 POS - 2 15: F06 POS - 0	
20494	500E	1	Cause of last switchover		
			0: None 1: Manual 2: under-voltage I 3: under-voltage II 4: Overvoltage source I 5: Overvoltage source II 6: Source under-frequency I	7: Source under-frequency II 8: Source over-frequency I 9: Source over-frequency II 10: Source phases unbalanced I 11: Source II 12: Direction of rotation inverted on source I 13: Direction of rotation inverted on source II	

Dec. address.	Hex. address.	No. of words	Designation	Unit
Load				
20736	5100	1	Phase-phase voltage U12	V/100
20737	5101	1	Phase-phase voltage U23	V/100
20738	5102	1	Phase-phase voltage U31	V/100
20739	5103	1	Phase 1 neutral voltage, V1	V/100
20740	5104	1	Phase 2 neutral voltage, V2	V/100
20741	5105	1	Phase 3 neutral voltage, V3	V/100
20742	5106	1	Frequency Fr	Hz/100
Source				
20743	5107	1	Source <input type="checkbox"/> I: Phase-phase voltage U12	V/100
20744	5108	1	Source <input type="checkbox"/> I: Phase-phase voltage U23	V/100
20745	5109	1	Source <input type="checkbox"/> I: Phase-phase voltage U31	V/100
20746	510A	1	Source <input type="checkbox"/> I: Phase 1 neutral voltage (V1)	V/100
20747	510B	1	Source <input type="checkbox"/> I: Phase 2 neutral voltage (V2)	V/100
20748	510C	1	Source <input type="checkbox"/> I: Phase 3-neutral voltage (V3)	V/100
20749	510D	1	Source <input type="checkbox"/> I: Frequency	Hz/100
20750	510E	1	Source <input type="checkbox"/> II: Phase-phase voltage U12	V/100
20751	510F	1	Source <input type="checkbox"/> II: Phase-phase voltage U23	V/100
20752	5110	1	Source <input type="checkbox"/> II: Phase-phase voltage U31	V/100
20753	5111	1	Source <input type="checkbox"/> II: Phase 1 neutral voltage (V1)	V/100
20754	5112	1	Source <input type="checkbox"/> II: Phase 2 neutral voltage (V2)	V/100
20755	5113	1	Source <input type="checkbox"/> II: Phase 3-neutral voltage (V3)	V/100
20756	5114	1	Source <input type="checkbox"/> II: Frequency	Hz/100
Time delays				
20992	5200	1	Source <input type="checkbox"/> I loss: 1FT	S
20993	5201	1	Source <input type="checkbox"/> I return: 1RT	S
20995	5203	1	Source <input type="checkbox"/> I return to 0: 1OT	S
20999	5207	1	Source <input type="checkbox"/> II loss: 2FT	S
21000	5208	1	Source <input type="checkbox"/> II return: 2RT (Appli M-M) or Source <input type="checkbox"/> II Stabilisation: 2AT (Appli M-G)	S
21001	5209	1	Source <input type="checkbox"/> II request maintained: 2CT	S
21002	520A	1	Source <input type="checkbox"/> II return to 0: 2OT	S
21003	520B	1	Source <input type="checkbox"/> II starting timeout: 2ST	S
21004	520C	1	Programmed genset starting following its last stop: EET	h
21006	520E	1	Time without electricity: 0DT	S
21007	520F	1	Load shedding timer: LST	S
21008	5210	1	Test Off Load duration timer: TFT	S
21009	5211	1	Test On load duration timer TOT	S
21010	5212	1	On Load external operation request timer (start): E1T	S
21011	5213	1	On Load external operation request timer (end): E3T	S
21012	5214	1	On Load external operation request timer (duration): E2T	S
21013	5215	1	Off Load external operation request timer (start): E5T	S
21014	5216	1	Off Load external operation request timer (duration): E7T	S
21015	5217	1	Off Load external operation request timer (duration): E6T	S

13.9.5. Function 6

Dec. address.	Hex. address.	No. of words	Designation	Unit
Control				
21584	5450	1	Command configuration 0x01: Configure RTE (Back transfer) 0x02: Cancel TOF (Off Load Test) 0x03: Configure TOF (Off Load Test) 0x04: Configure TON (On Load Test) 0x05: Configure EOF (External Off Load) 0x06: Configure EON (External On Load) 0x07: Cancel EOF (External Off Load) 0x08: Cancel EON (External On Load) 0x10: Cancel alarms and faults 0x11: Configure FT1 0x12: Configure FT2 0x13: Configure AL1 0x14: Configure AL2	
21585	5451	1	Operating mode configuration 3: Auto 4: Inhibit 5: Control Other: Unchanged	
21586	5452	1	Priority configuration 0: Network 1: Source I 2: Source II Other: Unchanged	
21587	5453	1	Position configuration Only available in test mode (address 5451 = 5) 0: None 1: Position 0 2: Position I 3: Position II	

13.9.6. Functions 3, 6 and 16

Dec. address.	Hex. address.	No. of words	Designation	Unit
Time delay configuration				
21760	5500	1	Loss of source <input type="checkbox"/> : 1FT	S
21761	5501	1	Source <input type="checkbox"/> return: 1RT	S
21763	5503	1	Source <input type="checkbox"/> return to 0: 1OT	S
21765	5505	1	Source <input type="checkbox"/> loss: 2FT	S
21766	5506	1	Source <input type="checkbox"/> return: 2RT (Appli M-M) or Source <input type="checkbox"/> stabilisation: 2AT (Appli M-G)	S
21767	5507	1	Source <input type="checkbox"/> request maintained: 2CT	S
21768	5508	1	Source <input type="checkbox"/> return to 0: 2OT	S
21769	5509	1	Source <input type="checkbox"/> starting timeout: 2ST	S
21770	550A	1	Time without electricity: ODT	S
21771	550B	1	0: TOT limited - 1: TOT unlimited	S
21772	550C	1	Test On Load duration timer: TOT	S
21773	550D	1	0: TFT limited - 1: TFT unlimited	
21774	550E	1	Test Off Load duration timer: TFT	S
21775	550F	1	0: E2T limited - 1: E2T unlimited	S
21776	5510	1	On Load external operation request timer (start): E1T	S
21777	5511	1	On Load external operation request timer (end): E3T	S
21778	5512	1	On Load external operation request timer (duration): E2T	S
21779	5513	1	Off Load external operation request timer (start): E5T	S
21780	5514	1	Off Load external operation request timer (end): E7T	S
21781	5515	1	Off Load external operation request timer (duration): E6T	S
21782	5516	1	Load shedding timer: LST	S
Threshold configurations				
21840	5550	1	Source <input type="checkbox"/> : Voltage upper threshold	
21841	5551	1	Source <input type="checkbox"/> : Voltage upper threshold hysteresis	
21842	5552	1	Source <input type="checkbox"/> : Voltage lower threshold	
21843	5553	1	Source <input type="checkbox"/> : Voltage lower threshold hysteresis	
21844	5554	1	Source <input type="checkbox"/> : Voltage upper threshold	
21845	5555	1	Source <input type="checkbox"/> : Voltage upper threshold hysteresis	
21846	5556	1	Source <input type="checkbox"/> : Voltage lower threshold	
21847	5557	1	Source <input type="checkbox"/> : Voltage lower threshold hysteresis	
21848	5558	1	Source <input type="checkbox"/> : Phase unbalance threshold	
21849	5559	1	Source <input type="checkbox"/> : Phase unbalance threshold hysteresis	
21850	555A	1	Source <input type="checkbox"/> : Phase unbalance threshold	
21851	555B	1	Source <input type="checkbox"/> : Phase unbalance threshold hysteresis	
21852	555C	1	Source <input type="checkbox"/> : Frequency upper threshold	
21853	555D	1	Source <input type="checkbox"/> : Frequency upper threshold hysteresis	
21854	555E	1	Source <input type="checkbox"/> : Frequency lower threshold	
21855	555F	1	Source <input type="checkbox"/> : Frequency lower threshold hysteresis	
21856	5560	1	Source <input type="checkbox"/> : Frequency upper threshold	
21857	5561	1	Source <input type="checkbox"/> : Frequency upper threshold hysteresis	
21858	5562	1	Source <input type="checkbox"/> : Frequency lower threshold	
21859	5563	1	Source <input type="checkbox"/> : Frequency lower threshold hysteresis	

Dec. address.	Hex. address.	No. of words	Designation			Unit
Network configuration						
22096	5650	1	Type of network			
			0: 4NBL (230/400V)	5: 4NBL (127/230V)		
			1: 1BL (230/400V)	6: 3NBL (127/230V)		
			2: 41NBL (230/400V)	7: 2NBL (127/230V)		
			3: 42NBL (230/400V)	8: 2BL (127/230V)		
			4: 3NBL (230/400V)	9: 42NBL (127/230V)		
22097	5651	1	Neutral (0) AUTO on the right	1: neutral on the left	2: Neutral	
22098	5652	1	Direction of phase rotation 0: Undefined 1: ABC	2: ACB		
22099	5653	1	Rated voltage 180 <= Unom <= 480			
22100	5654	1	Rated frequency 0: 50Hz 1: 60 Hz			
22101	5655	1	Application type: 0: Network - Network (M-M) 1: Network - genset (M-G)			
22103	5657	1	Genset starting relay 0: NO 1: NC			
22104	5658	1	PRIO NET 0: none 1: source I 2: Source II			
22105	5659	1	PRIO TON 0: NO 1: YES			
22106	565A	1	PRIO EON 0: NO 1: YES			
22107	565B	1	RETRANS 0: NO 1: YES			
22108	565C	1	RETURN O 0: NO 1: YES			
22110	565E	1	2ND TRIP 0: NO 1: YES			
22111	565F	1	MOD AUT 0: NO 1: YES			
22112	5660	1	BACKLIGHT 0: OFF 1: ON 2: INT			

Inputs / outputs configuration						
22352	5750	1	Function IN 1 0: /			
22353	5751	1	Function IN 2 0: /			
22354	5752	1	Function IN 3 0: /			
22355	5753	1	IN 1 status 0: NO 1: NC			
22356	5754	1	IN 2 status 0: NO 1: NC			
22357	5755	1	IN 3 status 0: NO 1: NC			
22358	5756	1	Function OUT 1 0: /			
22359	5757	1	Function OUT 2 0: /			
22360	5758	1	Function OUT 3 0: /			

Inputs	Outputs
1: INH	1: S1A
2: tol	2: S2A
3: TOF	3: SCA
4: EON	4: AC1
5: EOF	5: AC2
6: MSR	6: AC0
7: RTC	7: LO1
8: PRI	8: LO2
9: SS1	9: LSC
10: SS2	10: FLT
11: PS1	11: POP
12: PS2	12: CP1
13: PS0	13: CP2
14: AL1	14: CP3
15: AL2	
16: FT1	
17: FT2	
18: OA1	
19: OA2	
20: RST	
21: LSI	

14. PREVENTATIVE MAINTENANCE

It is recommended to operate the product at least once a year.

I - O - II - O - I

Note: Maintenance should be planned carefully and carried out by qualified and authorised personnel. Consideration of the critical level and application where the product is installed should form an essential and integral part of the maintenance plan. Good engineering practice is imperative whilst all necessary precautions must be taken to ensure that the intervention (whether directly or indirectly) remains safe in all aspects.



The use of any Megohmmeter is prohibited on this product as the connection terminals are intrinsically connected to the sensing circuit.

15. TROUBLESHOOTING GUIDE

The ATyS p M includes event reporting that can be very useful to verify before troubleshooting. Refer to section «13.4.4. Events», page 34.

Symptoms	Actions to be carried out	Expected results
The product is not functioning	<p>Check for a voltage of 106 to 305 Vac on the supply terminals: Model 230/400 Vac:</p> <ul style="list-style-type: none"> - Terminals 1-7 corresponding to the Priority Source - Terminals 1-7 corresponding to the Emergency Source 	The "POWER" LED is lit and the display is operational
The "Priority SOURCE Availability" LED does not come on	<p>Press the "LED test" button</p> <p>Check whether the message "F13 ROT-1" is shown on the display (Priority Source Phase Rotation Fault). If this message appears, check for phase rotation consistency (or conventional direction) between the source and the ROT parameter in the SETUP menu, or between the 2 sources.</p> <p>Check the following parameters in the SETUP menu (programming mode):</p> <ul style="list-style-type: none"> - the type of network => 230/400 Vac version: NETWORK: 4NBL, 41NBL, 42NBL, 1BL, 3NBL => 127/230 Vac version: NETWORK: 4NBL, 3NBL, 2NBL, 2BL, 42NBL - Nominal voltage => Un: measure at the cage terminals using a multimeter - Frequency => Fn: 50 or 60 Hz Check the voltage and frequency thresholds and hysteresis in the VOLT LEVELS and FREQ LEVELS menus <p>If using an Auto transformer - proceed as follows:</p> <ul style="list-style-type: none"> - Step 1: Enter programming mode - Step 2: In the SETUP menu, configure the NETWORK parameter to 3NBL. - Step 3: In the SETUP menu, configure the NEUTRAL parameter (location of Neutral) to left or right depending on where the neutral is connected. - Step 4: Exit programming mode 	All the LEDs and the display illuminate The "Priority SOURCE Availability" LED is lit
The "Emergency SOURCE Availability" LED does not come on	<p>Press the "LED test" button</p> <p>Check whether the message "F23 ROT- 2" is shown on the display (Emergency Source Phase Rotation Fault). If this message appears, check for phase rotation consistency (or conventional direction) between the source and the ROT parameter in the SETUP menu, or between the 2 sources.</p> <p>CAUTION: a Generator operating off load can generate a Fr and a U lower than the nominal values:</p> <ul style="list-style-type: none"> - Check the nominal voltage threshold and hysteresis in the VOLT LEVELS menu - Check the frequency threshold and hysteresis in the FREQ LEVELS menu <p>Check the following parameters in the SETUP menu (programming mode):</p> <ul style="list-style-type: none"> - the type of network => 230/400 Vac version: NETWORK: 4NBL, 41NBL, 42NBL, 1BL, 3NBL - Nominal voltage => Un: measure at the cage terminals using a multimeter - Frequency => Fn: 50 or 60 Hz <p>If using an Auto transformer - proceed as follows:</p> <ul style="list-style-type: none"> - Step 1: Enter programming mode - Step 2: In the SETUP menu, configure the NETWORK parameter to 3NBL. - Step 3: In the SETUP menu, configure the NEUTRAL parameter (location of Neutral) to left or right depending on where the neutral is connected. - Step 4: Exit programming mode 	The "Emergency SOURCE Availability" LED is lit

Symptoms	Actions to be carried out	Expected results
The product remains switched off after the Priority SOURCE is lost	<p>Check for a voltage of 106 to 305 Vac on the supply terminals: - Model 230/400 Vac: Terminals 1-7 corresponding to source II</p> <p>For a Transformer/Generator application Check that 1FT (1 Failure Timer) has counted down. - Use a stopwatch. - Start the stopwatch when the product has lost its Priority SOURCE. - If GE START = NO (Normally Open) in the SETUP menu: Contact 73-74 Closed = Generator starting order Contact 73-74 Open = Generator stoppage order - If GE START = NC (Normally Closed) in the SETUP menu: Contact 73-74 Closed = Generator stoppage order Contact 73-74 Open = Generator starting order</p>	The "POWER" LED is lit and the display is operational The Generator is operating The "POWER" LED is lit and the display is operational
The product does not switch over after the Priority SOURCE is lost	<p>Check that the product is not in manual mode: - Automatic mode = Cover closed - Manual mode = Cover open</p> <p>Check that automatic operation has not been inhibited by external orders</p> <p>Check the state of the "Emergency Source Availability" LED. If it is off, refer to the symptom concerned (higher in the list)</p>	The "AUT" LED is lit The "AUT" and "Emergency SOURCE Availability" LEDs are lit
The product does not switch over when the Priority SOURCE is restored	<p>Check that the product is not in manual mode: - Automatic mode = Cover closed - Manual mode = Cover open</p> <p>Check that automatic operation has not been inhibited by external orders</p> <p>Check the state of the "Priority Source Availability" LED. If it is off, refer to the symptom concerned (higher in the list)</p> <p>Check the setting of 1RT (1 Return Timer). If necessary, use a stopwatch to check the switch to Priority SOURCE The duration of this delay is between 0 and 3600s</p> <p>Check that the "manual retransfer" function is not active (if this function is not required) - Go to the SETUP menu - Set RETRANS to NO</p>	The "AUT" LED is lit The "AUT" and "Priority SOURCE Availability" LEDs are lit The display shows 1RT xxxSEC At the end of the delay, the product switches over to mechanical position 0, then to Priority SOURCE Message "RETRANS?" not displayed The product should return automatically to the Priority SOURCE
Return to Priority SOURCE has been executed, but the Emergency Source (for a Generator) continues to operate	<p>Check that 2CT (2 Cool Timer) counts down – Duration between 0 and 600s - Use a stopwatch. - Start the stopwatch when the product has switched over to the Priority SOURCE. - Contact 73 - 74 should change state once this delay has counted down - If GE START = NO (Normally Open) in the SETUP menu: Contact 73-74 Closed = Generator starting order Contact 73-74 Open = Generator stoppage order - If GE START = NC (Normally Closed) in the SETUP menu: Contact 73-74 Closed = Generator stoppage order Contact 73-74 Open = Generator starting order</p> <p>Check that the product is not in Automatic mode: - Automatic mode = Cover closed - Manual mode = Cover open</p> <p>Check that automatic operation has not been inhibited by external orders</p>	The display shows 2CT xxxSEC At the end of this delay, the Generator stops and the "Emergency SOURCE Availability" LED goes out The "AUT" LED is lit

Symptoms	Actions to be carried out	Expected results
ON LOAD and OFF LOAD tests cannot be started via the keypad	Check that the product is not in Automatic mode: - Automatic mode = Cover closed - Manual mode = Cover open	The "AUT" LED is lit
	Check that automatic operation has not been inhibited by external orders	
	Check the Operating mode password (factory code 0000) to access the test functions	The "TEST ON LOAD" or "TEST OFF LOAD" LED is lit, depending on the selected test mode
	Check that the product is in M-G application	The APP parameter should be M-G in the SETUP menu
	Check the state of the "Priority Source Availability" LED. If it is off, refer to the symptom concerned (higher in the list)	The "Priority SOURCE Availability" LED must be lit to allow these Tests to be run
The product cannot be switched over using the handle	Check the direction of rotation of the handle: - Manual switchover from position 1 to position 2 is executed clockwise - The return operation is executed anticlockwise	The product can be switched over using the handle
	Check that the product is not padlocked	
	Use the handle extension on the ALLEN key to check that the appropriate adjustment torque is applied.	
	When using a single AC, check that the length of the screws used is not greater than 20 mm	
AUTOMATIC mode is not activated even though the cover is closed	Check that the plastic pin (sensor) is in place on the bottom of the cover. This pin activates the sensor which indicates the position of the cover (open or closed)	The "AUT" LED is lit
	Check that automatic operation has not been inhibited by external orders	
The product cannot be locked	Check the mechanical position of the changeover switch: - Locking is only possible in position 0 as standard - Locking in positions 1-0-2 is possible by modifying the product in accordance with the instructions	Locking is possible
The product is faulty	See listing «13.4.5. Events list», page 34.	The FAULT LED is off and the error message disappears

CORPORATE HQ CONTACT:
SOCOMEc SAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE

WWW.SOCOMEc.COM

Non contractual document. © 2022, Socomec SAS. All rights reserved.



socomec
Innovative Power Solutions